



Actuators for air and gas dampers

SQN72... SQN73...

Electromotoric actuators for air dampers and control valves of oil and gas burners of small to medium heat capacity.

The SQN72/SQN73 and this data sheet are intended for original equipment manufacturers (OEMs) using the SQN72/SQN73 in or on their products.

Use

The SQN72/SQN73 actuators are designed for positioning and driving air/gas dampers of oil burners, gas burners, and other ancillary equipment of small and medium heat capacity. They also offer load-dependent control of the amount of fuel and combustion air.

The controlling elements are controlled as follows depending on the current burner load:

- In connection with P, PI, or PID controllers, such as the RWF5
- Directly via the different types of burner controls, such as LAL, LOA, LME, LMO, LFL, LGK16
- In connection with 1- or 2-wire control or 3-position controllers

Features

- Impact-proof and heat-resistant plastic housings
- Screw terminals for electrical connections
- Maintenance-free gear train, which can be disengaged
- Internal position indication
- Easy-to-adjust end and auxiliary switches for adjusting the switching points
- Integrated electronic circuits
- Protection type IP54
- Holding torque 0.7...1.3 Nm
- Running times 4...30
- Direction of rotation

SQN72	Counterclockwise
SQN73	Clockwise.

Supplementary documentation

Product type	Documentation type	Documentation number
LAL	Data sheet	N7153
LFL	Data sheet	N7451
LFL1.148	Data sheet	N7454
LGK16	Data sheet	N7785
LME2	Data sheet	N7101
LME7	Data sheet	N7105
LMO2 LMO4 LMO39	Data sheet	N7130
LOA2 LOA3	Data sheet	N7118
LOK16	Data sheet	N7785
RWF50	Data sheet	N7866
	User manual	U7866
RWF55	Data sheet	N7867
	User manual	U7867



To avoid personal injury or damage to property or the environment, the following warning notes must be observed.

Only qualified personnel may open, interfere with or modify the actuators!

- Read the documentation on the actuators carefully and fully. If not observed, dangerous situations might occur
- The user must ensure that the actuators meet the requirements of the relevant application standards
- The control functions inside the actuator are not intended to ensure the safety of the overall application. Users must take this into account during the electrical integration of any systems (e.g., burner controls), and perform a risk analysis of the respective unit
- Safety-relevant applications are only available with Siemens burner controls. An application-specific risk analysis must still be carried out
- All product-related activities (mounting, settings, and maintenance) must be performed by appropriately qualified and authorized personnel
- Before making any wiring changes in the connection area, completely isolate the plant from the power supply (all-polar disconnection). Ensure that the plant cannot be inadvertently switched on again and that it is indeed dead. If the plant is not switched off, there is a risk of electric shock
- Take suitable measures to provide touch protection at the electrical connections and ensure the housing cover is screwed down tight
- Each time work has been carried out (mounting, installation, service work, etc.), check that the wiring is in an orderly state
- These units must not be put back into operation following impact or shock; even if they do not exhibit any visible damage, their safety functions may be impaired



Please note!

Risk of electric shock hazard

- **To disconnect the unit from power, it may be necessary to open more than one switch. Before performing maintenance work, the unit must be disconnected from power**
 - **All cam switch settings must satisfy the requirements of the relevant application standards**
- To ensure protection against electric shock, the connection terminals must have adequate touch protection. Make certain that non-insulated connections or wires cannot be touched. The housing cover must be screwed tight
 - Static charges must be avoided since they can damage the electronic components of the unit when touched.

Recommendation:

Use ESD equipment

Selection of actuator version

- Ensure that any torque from outside acting on the controlling element (e.g., torque from the airflow produced by the burner fan) is smaller than the self-holding torque of the actuator in zero-current state
- The mechanical design of the burner must be such that any inadmissibly high torque from outside acting on the controlling element will not lead to critical burner operation.

Example:

If a torque acts on the asymmetrical bearing of the air damper due to the airflow in the air duct of the burner, the air damper is moved in the OPEN direction. This leads to a certain amount of excess air during combustion, which is less critical than a lack of air.

Mounting notes

- Ensure that the relevant national safety regulations and notes on standards are complied with
- In the geographical areas where DIN regulations are in use for mounting and installation, the requirements of VDE must be complied with, especially DIN/VDE 0100, 0550, and DIN/VDE 0722
- Make certain that the actuator is not exposed to direct solar radiation
- The connection between the actuator shaft and controlling element must be **form-fitted** and **backlash-free**
- When mounting the actuator, be aware that additional axial and radial bearing loads are not permitted
- Be sure to observe the correct mounting sequence when mounting the actuator to the controlling element.

This is usually as follows:

1. Fit and secure the actuator
2. Connect the actuator shaft to the controlling element via a coupling pin

IP54

To ensure protection class IP54 throughout the lifetime of the actuator, the bearing of the actuator drive shaft must be located somewhere it will not be directly exposed to water or dust.

Form-fitted design



Please note!

Possible shaft/hub connections:

- Flattened shaft with corresponding counterpart

To avoid inadmissible bearing loads caused by rigid hubs, it is recommended to use compensating couplings with no mechanical play (e.g., metal bellows couplings).

- When dimensioning a shaft connection, note that torques higher than the rated output torque of the actuator can also act during operation:
 - The actuator itself can apply a higher torque under optimum operating conditions
 - The effect of mass moments of inertia (caused by the rotating parts in the motor as well as on the actuator) can lead to sudden peak loads
- Siemens recommends overdimensioning the shaft connection by a factor of 2 compared to the rated torque of the actuator
- The connection between the actuator and burner or controlling element must be very rigid (no bending). This is particularly important when using column-mounted structures

Installation notes

- Ensure that the electrical wiring is in compliance with national and local regulations
- Ensure that the strain relief of the connected cables is in compliance with the relevant standards (e.g., as per EN 60730 and EN 60335 series of standards)
- Ensure that spliced wires cannot come into contact with neighboring connections. Fit suitable ferrules
- When wiring the unit, the 230 V AC range must be strictly separated from the touchable low-voltage areas to ensure protection against electric shock
- The connection between the actuator shaft and the relevant controlling element must be form-fitted
- Only plastic versions of cable glands may be used

Standards and certificates



Applied directives:

- Low Voltage Directive 2014/35/EU
- Electromagnetic compatibility EMC (immunity) 2014/30/EU

Compliance with the regulations of the applied directives is verified by the adherence to the following standards/regulations:

- Automatic electrical controls for household and similar use DIN EN 60730-1
Part 1:
General requirements
- Automatic electrical controls for household and similar use DIN EN IEC 60730-2-14
Part 2-14:
Particular requirements for electric actuators

The relevant valid edition of the standards can be found in the declaration of conformity.



EAC conformity (Eurasian compliance)



UKCA conformity mark (UK compliance)



China RoHS
Hazardous substances table:
<http://www.siemens.com/download?A6V10883536>

Lifetime

The actuator has a designed lifetime* of 250,000 burner startup cycles (OFF ⇒ ON ⇒ OFF) under load with the rated torque in the entire rotation angle range, which under normal operating conditions in heating mode corresponds to approx. 10 years of service (starting from the production date given on the type label). This is based on the endurance tests specified in the EN 298 standard. A summary of the conditions has been published by the European Control Manufacturers Association (Afecon) (www.afecor.org).

The designed lifetime is based on use of the actuator according to the manufacturer's data sheet. After reaching the designed lifetime in terms of the number of burner startup cycles, or after the corresponding usage time, the actuator must be replaced by authorized personnel.

*The designed lifetime is not the warranty time specified in the terms of delivery

Service notes

Unit replacement

When replacing an actuator, the following points must be checked and corrected if necessary:


- Correct connection to the basic unit
- Assignment of functions

Disposal notes

The SQN72/SQN73 contains electrical and electronic components and must not be disposed of together with domestic waste. Local and currently valid legislation must be observed.

Design

Housing	• The lower housing is made of dark gray, impact-proof and heat-resistant plastic • The housing cover is made of light gray, impact-proof and heat-resistant plastic • The housing accommodates: – the synchronous motor with the disengageable reduction gear train – the camshaft of the control section – the relays – depending on the type – the switch section – connected to the plug-in spaces of the connection terminals via an assembled PCB
Actuator motor	Synchronous motor.
Coupling	• Shaft can be disengaged from the gear train and motor by manually actuating the coupling (pressure pin (K)) • Automatic reset

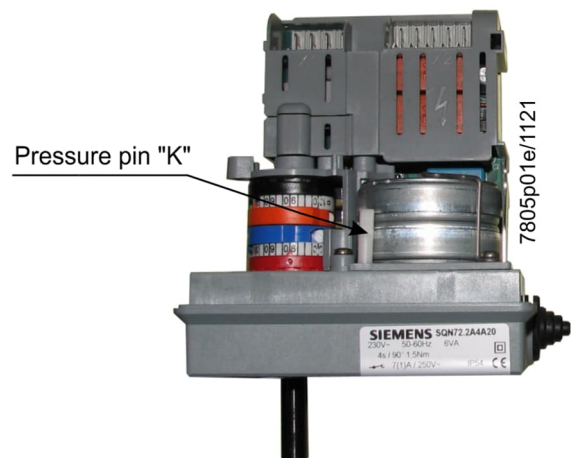

Switching point adjustment	• Via rotating cam disks • Scales adjacent to the cams indicate the angle of the switching point • Cam disks with fine adjustment, adjustable with standard screwdriver • Assignment of the cam disks to the color-coded end switches and auxiliary switches, refer to <i>Circuit diagrams</i>
Position display	Internal: Scale at the beginning of the camshaft on the gear train side.
Connection technology	Refer to <i>Technical data</i> .
Gear train	Maintenance free.
Drive shaft	• Burnished steel • Fixed on one side on the front of the gear train • Available as an actuator variant in different versions
Mounting and fastening	• Front of gear train as a bearing surface • Fastening with through holes

Special versions for potentiometer installation

Potentiometer installation	Certain types of actuators are supplied ready prepared for installing a potentiometer. They are manufactured to accommodate the potentiometer and do not require any further parts.
Conversion by the user	Users have the choice of converting a basic type of actuator to a version for installing a potentiometer. If a potentiometer is required, it must always be ordered separately, refer to <i>Accessories</i> .

Type summary (further types on request)

SQN72 actuators / direction of rotation ⁵⁾ counterclockwise

Diagram no.	Shaft ¹⁾ no.	Running time at 50 Hz 2) for 90° (s)	Nominal torque (max.) Nm	Holding torque Nm	Auxiliary switch 4)	Relay Unit	Potentiometer 6)	Housing length 1) mm	Types for mains voltage / mains frequency	
									230 V AC 3) +10%/-15% 50...60 Hz	
									Article no.	Type
A	0	4	1.5	0.7	2	2	●	117	S55454-D329-A100	SQN72.2A4B20
B	1	4	1.5	0.7	2	3	---	117	S55454-D303-A100	SQN72.2B4A21
B	1	4	1.5	0.7	2	3	---	117	S55454-D351-A100	SQN72.2B4B21 ⁷⁾
C	0	4	1.5	0.7	2	---	●	117	BPZ:SQN72.2C4A20 ⁷⁾	SQN72.2C4A20 ⁷⁾
C	0	4	1.5	0.7	2	---	●	117	S55454-D366-A100	SQN72.2C4B20 ⁷⁾
A	0	12	2.5	1.2	2	2	●	117	S55454-D332-A100	SQN72.4A4B20
C	1	12	2.5	1.2	2	---	●	117	S55454-D301-A100	SQN72.4C4A21
C	1	12	2.5	1.2	2	---	●	117	S55454-D365-A100	SQN72.4C4B21
D	0	12	2.5	1.2	3	2	---	117	BPZ:SQN72.4D5B20	SQN72.4D5B20 ⁷⁾
C	0	30	2.5	1.3	2	---	●	117	BPZ:SQN72.6C4A20	SQN72.6C4A20
C	1	30	2.5	1.3	2	---	●	117	BPZ:SQN72.6C4A21	SQN72.6C4A21
C	0	30	2.5	1.3	2	---	●	117	S55454-D368-A100	SQN72.6C4B20
C	1	30	2.5	1.3	2	---	●	117	S55454-D370-A100	SQN72.6C4B21
E	0	30	2.5	1.3	3	---	---	117	BPZ:SQN72.6E5A20	SQN72.6E5A20 ⁷⁾

Key

- 1) Refer to *Dimensions*
- 2) Specifications apply to 50 Hz; at 60 Hz, the running times are about 17% shorter.
- 3) Approx. 20% torque reduction with undervoltage
- 4) Free auxiliary switches (along with 2 end switches)
- 5) When looking at the shaft and control voltage at end switch I
- 6) Directly suitable for potentiometer installation, refer to chapter *Potentiometer installation*
- 7) On request

Type summary (further types on request) (cont'd)


SQN73 actuators / direction of rotation ⁵⁾ clockwise

Diagram no.	Shaft ¹⁾ no.	Running time at 50 Hz 2) for 90° (s)	Nominal torque (max.) Nm	Holding torque Nm	Auxiliary switch 4)	Relay Unit	Potentiometer 5)	Housing length 1) mm	Types for mains voltage / mains frequency	
									230 V AC 3) +10%/-15% 50...60 Hz	
									Article no.	Type
B	0	4	1.5	0.7	2	3	--	117	S55454-D355-A100	SQN73.2B4A20
B	0	4	1.5	0.7	2	3	---	117	S55454-D354-A100	SQN73.2B4B20 ⁶⁾
C	0	4	1.5	0.7	2	---	●	117	S55454-D353-A100	SQN73.2C4A20
C	0	4	1.5	0.7	2	---	●	117	S55454-D371-A100	SQN73.2C4B20
B	0	12	2.5	1.2	2	3	---	117	S55454-D345-A100	SQN73.4B4A20
B	0	12	2.5	1.2	2	3	---	117	S55454-D352-A100	SQN73.4B4B20 ⁶⁾

Key

- 1) Refer to *Dimensions*
- 2) Specifications apply to 50 Hz; at 60 Hz, the running times are about 17% shorter.
- 3) Approx. 20% torque reduction with undervoltage
- 4) Free auxiliary switches (along with 2 end switches)
- 5) Directly suitable for potentiometer installation, refer to chapter *Potentiometer installation*
- 6) On request

Torque at rated voltage

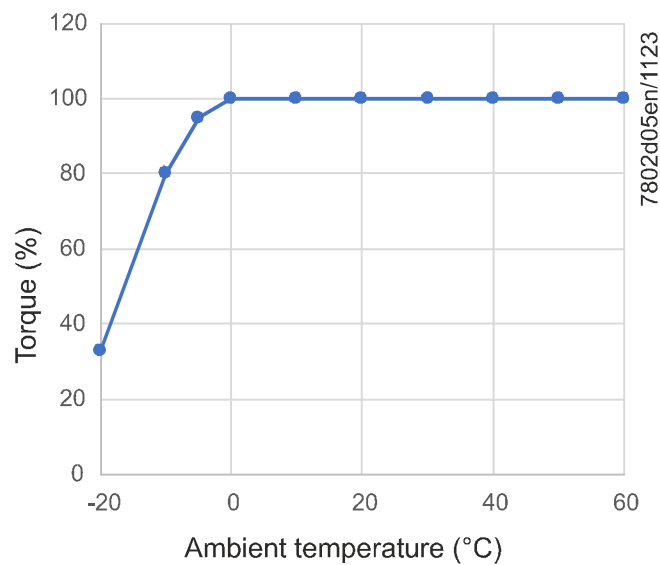

Accessories (must be ordered separately)

Proportional controlling element with mounting plate **VKP40**
Proportional controlling element for mounting between threaded flanges in gas trains.
Refer to Data Sheet N7646.



Example:

ASZ potentiometer
Refer to Data Sheet N7921.



RWF50 compact universal controller
For load-dependent control of the amount of fuel and combustion air in connection with P, PI, or PID controllers.
Refer to Data Sheet N7866.



RWF55 compact universal controller
For load-dependent control of the amount of fuel and combustion air in connection with P, PI, or PID controllers.
Refer to Data Sheet N7867.



Technical data

General unit data

Actuator

Mains voltage	230 V AC -15%/+10%
Mains frequency	50...60 Hz $\pm 6\%$
Actuator motor	Synchronous motor
Internal consumption	Max. 6 VA
External overload fuse	Max. 6.3 AT (slow) according to DIN EN 60127-5
Internal overload fuse	2 AT (slow), depending on the type, not interchangeable
Positioning angle, usable range	Max. 160°, scale range 0...130°
Mounting position	Optional
Degree of protection	IP54 in accordance with EN 60529:1991 + A1:2000 + A2:2013 when using the cable entry provided plus plastic washers for the M fixing screws as shown in the <i>Dimensions</i> chapter.



Please note!

The drive shaft bearing must be installed appropriately to protect against direct exposure to water and dust, otherwise IP54 cannot be guaranteed for the entire lifetime.

Protection class	II according to EN 60730-1:2016 + A1:2019 and EN IEC 60730-2-14:2019
Mode of operation	Type I, rotary motion / multi-position mode of operation
Cable entry	Rubber grommet for the insertion of a single sheathed cable with a maximum diameter of 11 mm. The opening of the rubber grommet must be suitably adapted to the sheath diameter of the cable. To ensure that the rubber grommet will be tight, the cable must be correctly laid in this area with no openings. The rubber grommet is included in the scope of delivery.
Cable strain relief	Cable strain relief bridge with 2 fixing screws included in scope of delivery

Technical data (continued)

General unit data	Cable connection	2 plug-in spaces with connection terminals Type CUM / manufactured by Stelvio Kontek For the following connector types ¹⁾: • CUF 5-3 (plug-in space X3) ²⁾ • CUF 5-4 (plug-in space X1) • CUF 5-5 (plug-in space X2) Recommended cross-sectional area of stranded wire Min. 0.5 mm² and max. 1.5 mm²
		 ¹⁾ Note! The connectors are not included in the scope of delivery (order directly from Stelvio Kontek).
		 ²⁾ Note! Only available with circuits D and E.
Ferrules		Matching the cross-sectional area of the stranded wire
<u>Direction of rotation (when facing the shaft)</u>		
SQN72		Counterclockwise
SQN73		Clockwise
Torque and holding torque		Refer to <i>Type summary</i>
Running times		Refer to <i>Type summary</i>
Pause time at change in direction of rotation		> 100 ms
Lifetime		250,000 start cycles (OFF ⇒ ON ⇒ OFF) under load with the rated torque in the entire rotation angle range
Weight (on average)		Approx. 500 g
Temperature of the mounting surface		Max. 60°C
Rated surge voltage		4 kV Overvoltage category III according to DIN EN 60730-1 (VDE 0631-1):2021-06, Section 20 Pollution degree 2
Permissible on time		60%, maximum 3 minutes without interruption
Additional restrictions for SQN7x.4xx, SQN7x.6xx		50%, ambient temperature from 24...35°C 40%, ambient temperature from 35...45°C 25%, ambient temperature from 45...60°C
<u>Gear train backlash between the actuator motor and actuator shaft</u>		
• Ex works		≤1.2° ±0.3°
• After 250,000 cycles		≤1.5° ±0.3°

Technical data (continued)

End switches and auxiliary switches

Type	In accordance with DIN 41636-1
Switching voltage	24...250 V AC
Number of end switches	2
Number of auxiliary switches	Refer to <i>Type summary</i>
Actuation	Via camshaft, color-coded cam disks, refer to <i>Circuit diagrams</i> . Switches with fine adjustment
Engagement of the cam disks with fine adjustment	Infinitely variable
Maximum permissible current load at $\cos \varphi = 0.9$: (Values in brackets: short-time peaks for max. 0.5 s)	



Please note!

The control of fuel valves is only permitted at the cam designated for this purpose. When connecting a fuel valve: Max. 0.3 A, $\cos \varphi > 0.8$ inductive. Safety-relevant applications are only available with Siemens burner controls!

• Connection diagram A	
- Terminals 1, 2, 3, 8	Max. 0.5 A
- Terminal 4, 5	Max. 2 A (5 A)
- Terminal 6, 7	Max. 1 A (5 A)
• Connection diagram B	
- Terminals 1, 2, 3, 8	Max. 0.5 A
- Terminal 4, 5	Max. 2 A (5 A)
- Terminal 6, 7	Max. 1 A (5 A)
• Connection diagram C	
- Terminals 1, 2, 3, 4, 5	Max. 0.5 A
- Terminals 6, 7, 8	Max. 1 A (5 A)
• Connection diagram D	
- Terminals 1, 2, 3, 8	Max. 0.5 A
- Terminal 4, 5	Max. 2 A (5 A)
- Terminal 6, 7, 9, 10, 11	Max. 1 A (5 A)
• Connection diagram E	
- Terminals 1, 2, 3, 4, 5	Max. 0.5 A
- Terminal 6, 7, 8, 9, 10, 11	Max. 1 A (5 A)

Technical data (continued)

Environmental conditions

Storage

Climatic conditions
Mechanical conditions
Temperature range
Humidity

DIN EN 60721-3- 1: 1997
Class 1K3
Class 1M2
-20...+60°C
< 95% r.h.

Transport

Climatic conditions
Mechanical conditions
Temperature range
Humidity

DIN EN 60721-3- 2: 1997
Class 2K2
Class 2M2
-50...+60°C
< 95% r.h.

Operation

Climatic conditions
Mechanical conditions
Temperature range
Humidity
Installation altitude

DIN EN 60721-3- 3: 1995
Class 3K5
Class 3M2
-20...+60°C
< 95% r.h.
Max. 2,000 m above sea level



Please note!

Condensation, formation of ice, and ingress of water are not permitted. Failure to observe this poses a risk of impairing the safety functions and the risk of electric shock.

Function

A synchronous motor drives the drive shaft with a mounted camshaft via a gear train. The camshaft actuates end switches and auxiliary switches. The switch position of each end switch and auxiliary switch can be adjusted by an assigned cams disk within the running range. Some actuator versions are equipped with electronic switching modules that perform additional functions in connection with the end switches and auxiliary switches and external units, such as controllers (refer to *Circuit diagrams*).

Internal diagram (examples)




Please note!

The following internal diagrams all show the start position as supplied:

- End switch position II CLOSED
- No voltage

No. A → 2-stage or modulating operation → Prepurging at high-fire position (NL)
e.g., for LME22

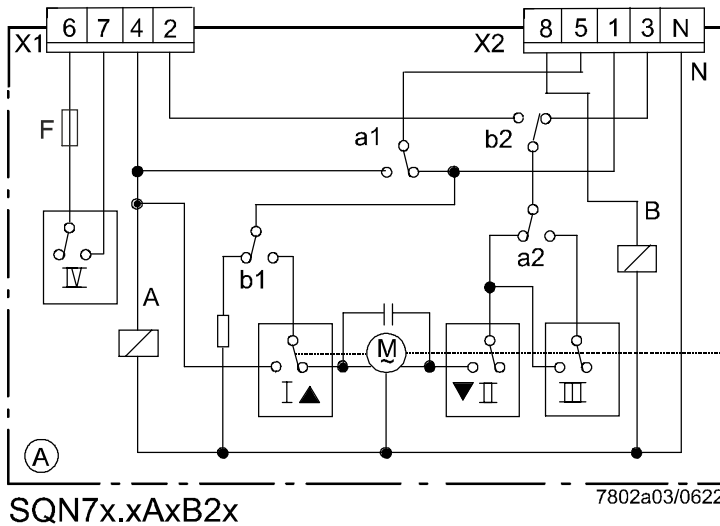

X1 Plug-in space, 4-pole

X2 Plug-in space, 5-pole

Cam disks:

I Red

II Blue

III Orange

IV *) Black



*)


Please note!

Connection of a fuel valve to cam IV only:

→ Max. 0.3 A, $\cos\phi > 0.8$ inductive.

Safety-relevant applications are only available with Siemens burner controls!

No. B → 2-stage operation → Prepurging at low-fire position (KL)
e.g., for LOA24 / LOA25 / LOA26 / LOA28 / LOA36 / LMO24 / LMO39 / LMO44

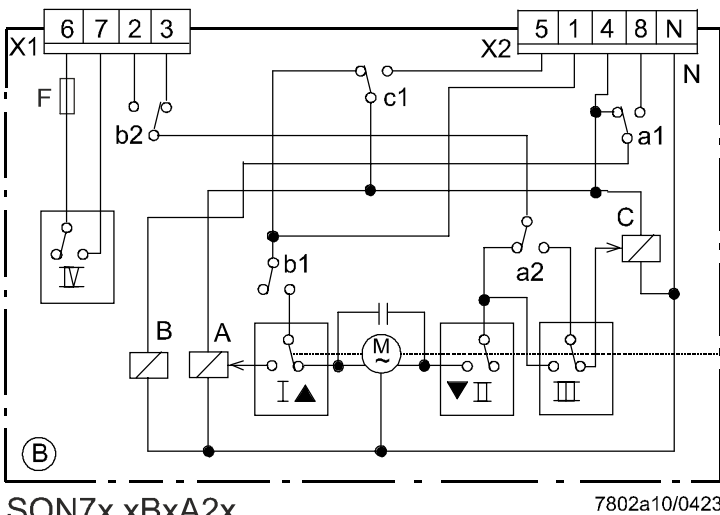

X1 Plug-in space, 4-pole

X2 Plug-in space, 5-pole

Cam disks:

I Red

II Blue

III Orange

IV *) Black



*)


Please note!

Connection of a fuel valve to cam IV only:

→ Max. 0.3 A, $\cos\phi > 0.8$ inductive.

Safety-relevant applications are only available with Siemens burner controls!

No. C → 2-stage or modulating operation → Prepurging at high-fire position (NL)
 e.g., for LFL / LGK16 / LAL / LOK16

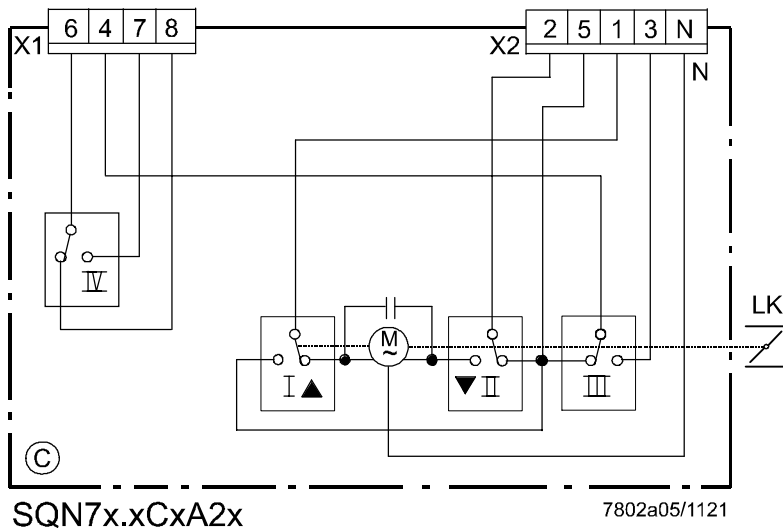

X1 Plug-in space, 4-pole
 X2 Plug-in space, 5-pole


Cam disks:
 I Red
 II Blue
 III Orange
 IV Black



Please note!

The SQN7x.CxA2s in series A are not suitable for controlling the fuel valves according to the standard. Safety-relevant applications are only available with Siemens burner controls.

No. D → 2-stage or modulating operation → Prepurging at high-fire position (NL)
 e.g., for LME22

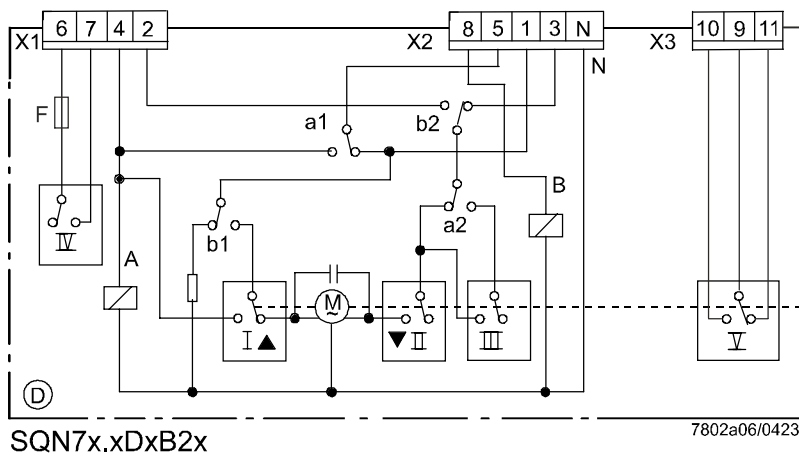

X1 Plug-in space, 4-pole
 X2 Plug-in space, 5-pole
 X3 Plug-in space, 3-pole

Cam disks:
 I Red
 II Blue
 III Orange
 IV *) Black
 V Green




*)

Please note!

Connection of a fuel valve to cam IV only:
 → Max. 0.3 A, $\cos\varphi > 0.8$ inductive.

Safety-relevant applications are only available with Siemens burner controls!

No. E → 2-stage or modulating operation → Prepurging at high-fire position (NL)
e.g., for LAL / LFL / LGK16 / LOK16

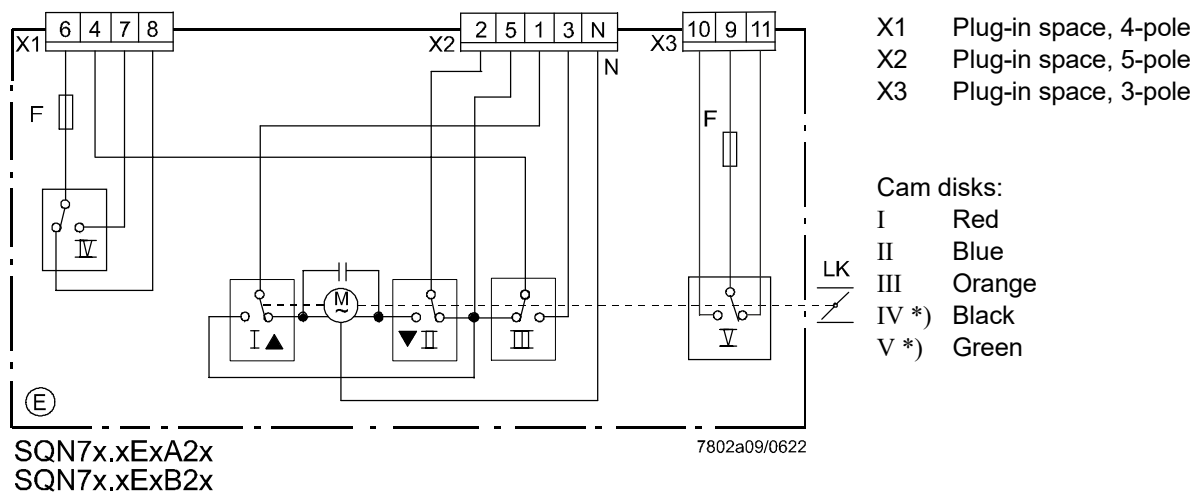

*)

Please note!

Connection of a fuel valve to cam IV or V only:

→ Max. 0.3 A, $\cos\phi > 0.8$ inductive.

Safety-relevant applications are only available with Siemens burner controls!

No. A	Designation for internal circuit. Appears in the second position after the period in the type reference
I / II	End switches
III / IV / V	Auxiliary switches
AL	Remote lockout display (alarm)
BV1	Fuel valve stage 1
BV2	Fuel valve stage 2
BV3	Fuel valve stage 3
EK2	External remote lockout reset button
ION	Ionization probe
	Internal fuse, not replaceable
FS	Flame signal
GP	Gas pressure switch
HS	Main switch
KL	Low-fire
L	Phase
LK	Air damper
LKP	Air damper position
LP	Air pressure switch
LR	Load controller
M	Burner motor or fan motor
	Actuator synchronous motor
M1	Without postpurging
M2	With postpurging
N	Neutral conductor
NL	High-fire
OH	Oil preheater
OW	Oil preheater readiness contact
QRB	Photoresistive detector
R	Control thermostat or pressurestat
	Relay
RV	Control valve
SA	Actuator
Si	External primary fuse, as specified in the data sheet of the relevant burner control
SB	Safety limiter
STx	Stage
tx / Tx	Program times (refer to the data sheet of the relevant burner control)
TSA	Safety time
	Resistor
Z	Ignition transformer
CLOSED	Damper closed
▲	Direction of rotation OPEN
▼	Direction of rotation CLOSED

Program sequence – Diagrams


A	Burner ON
A–B	Burner startup
B–C	Burner operation / load control operation, modulating or 2-stage
C	Burner OFF
C–D	Overrun time
D	End of program sequence, burner control ready for restart

	Control signals delivered by burner control
	Required input signals
	Permissible input signals

Dimensions

Dimensions in mm

SQN72 / SQN73

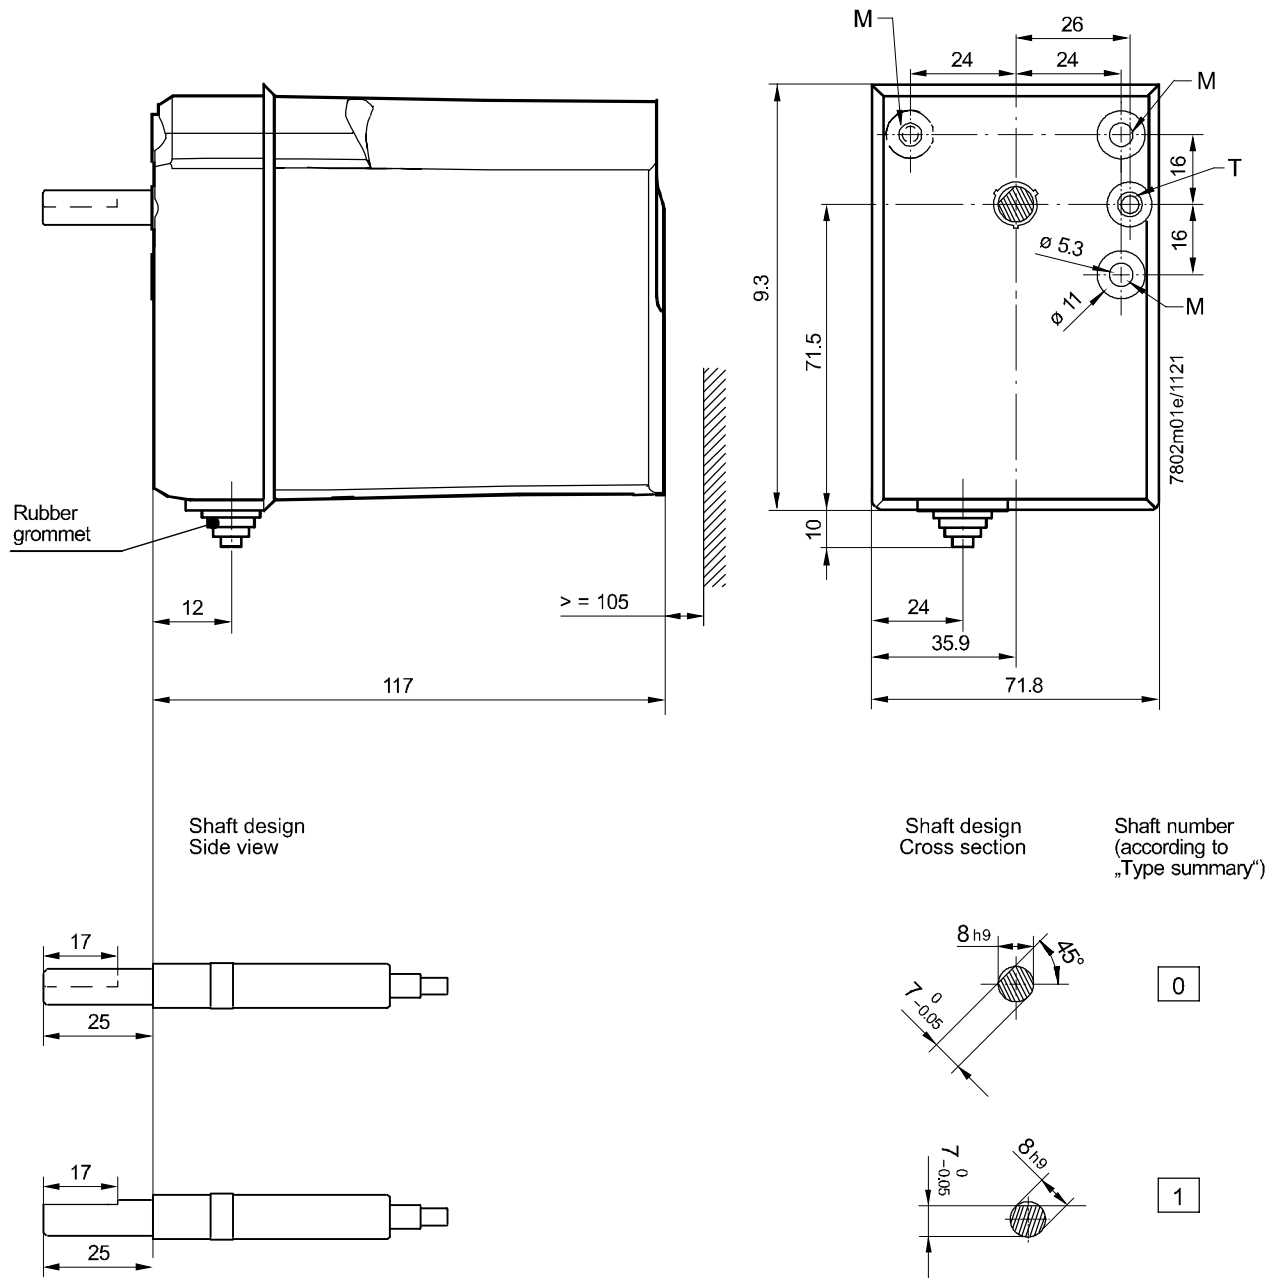


All shafts are shown in end switch position II CLOSED (as supplied).

M Through-hole $\phi 5.3$ mm
T Knockout opening $\phi 5.3$ mm




Please note!
Electric shock hazard
The ASZ potentiometer must be installed when the unit is shut down.

ASZxx.3x potentiometer

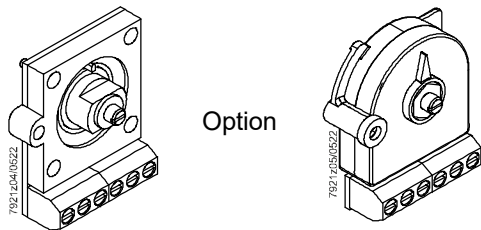


SQN7x actuators


SQN7x.xAxxxx
SQN7x.xCxxxx

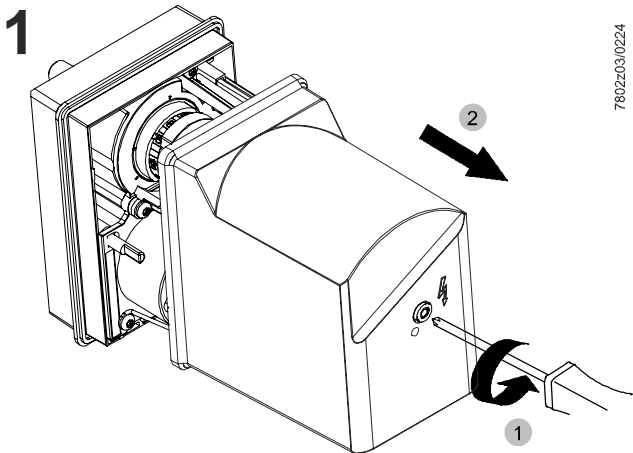


7802-03/0224

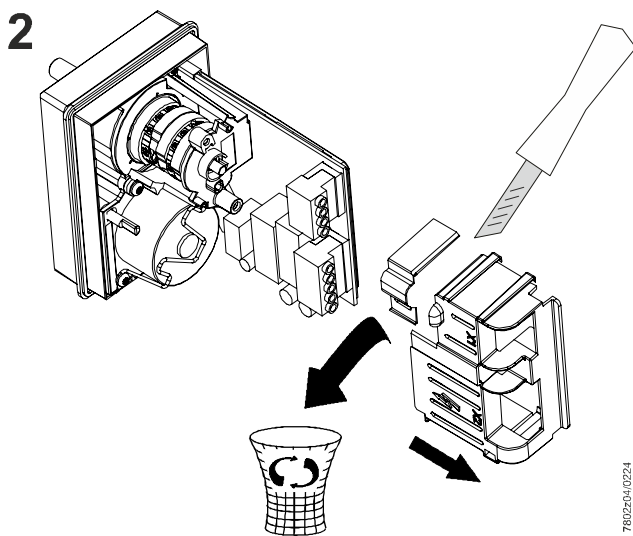





7802-04/0224

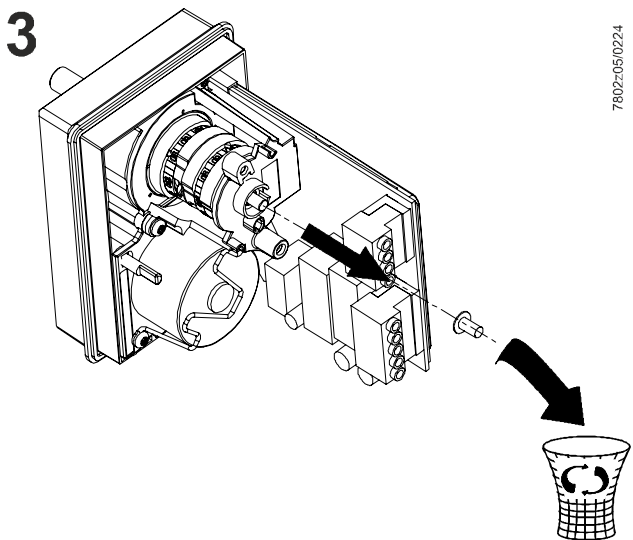



7802-05/0224

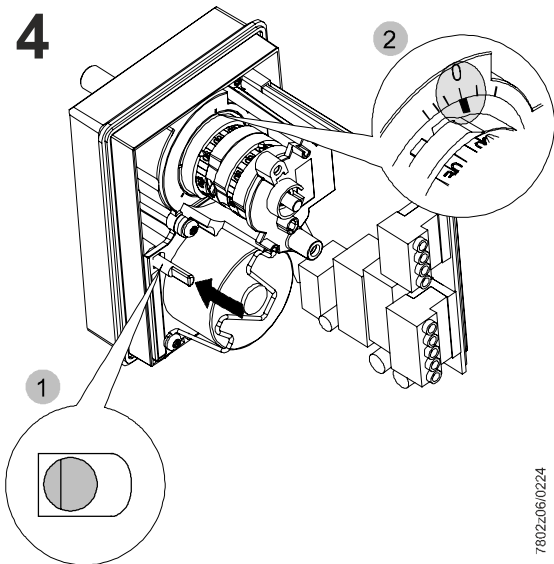


7802-06/0224

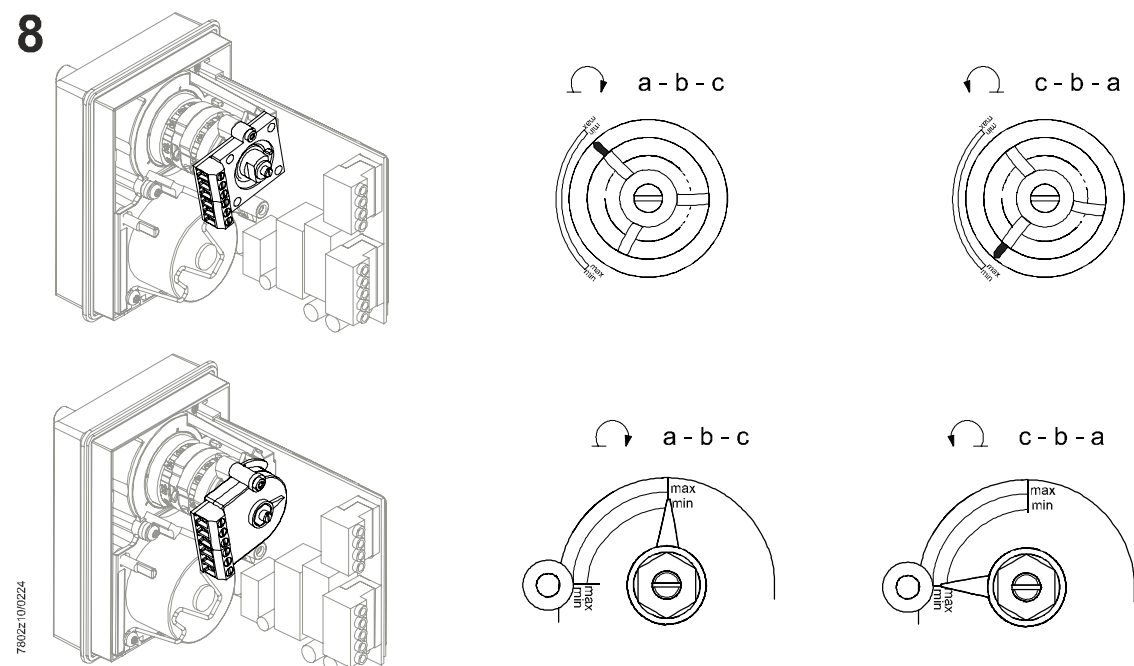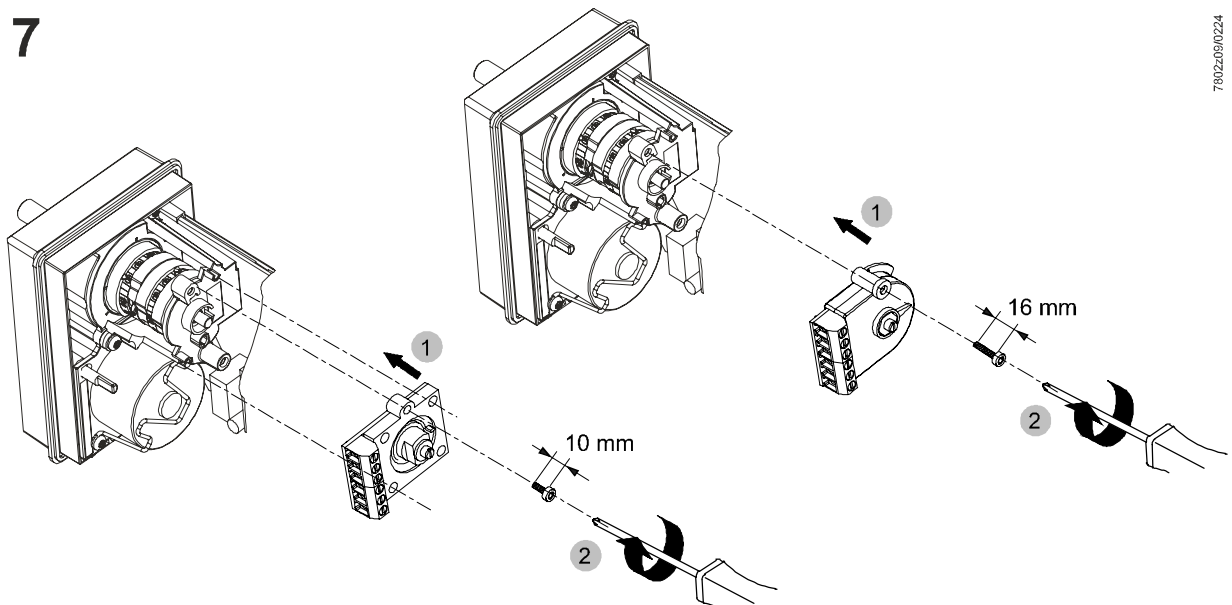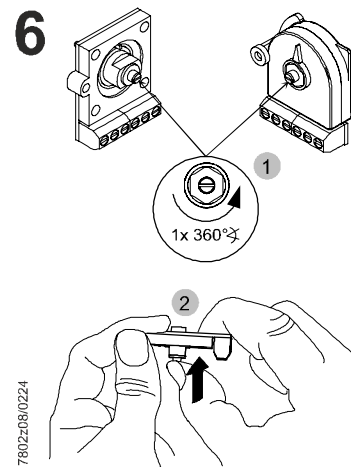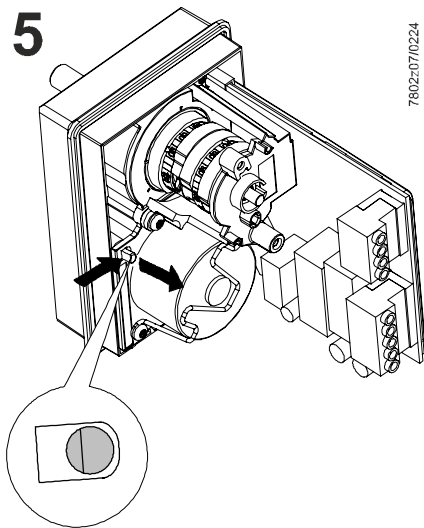

9

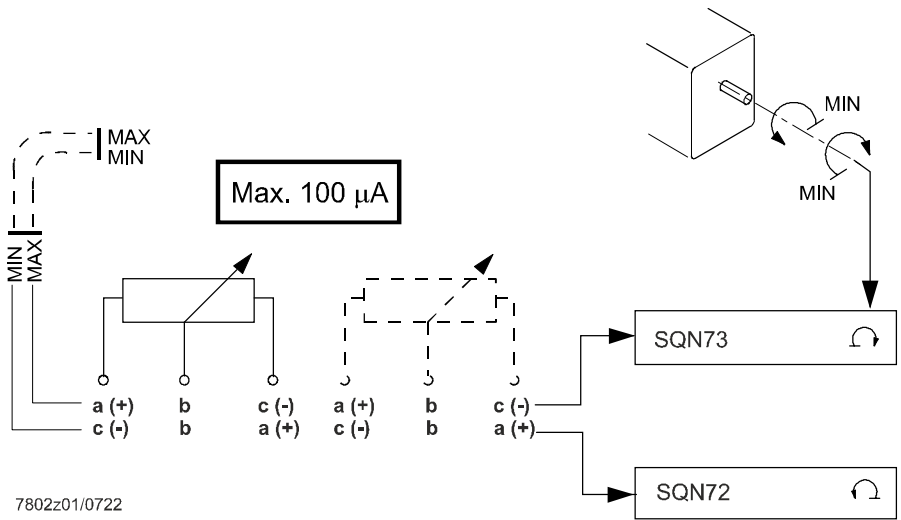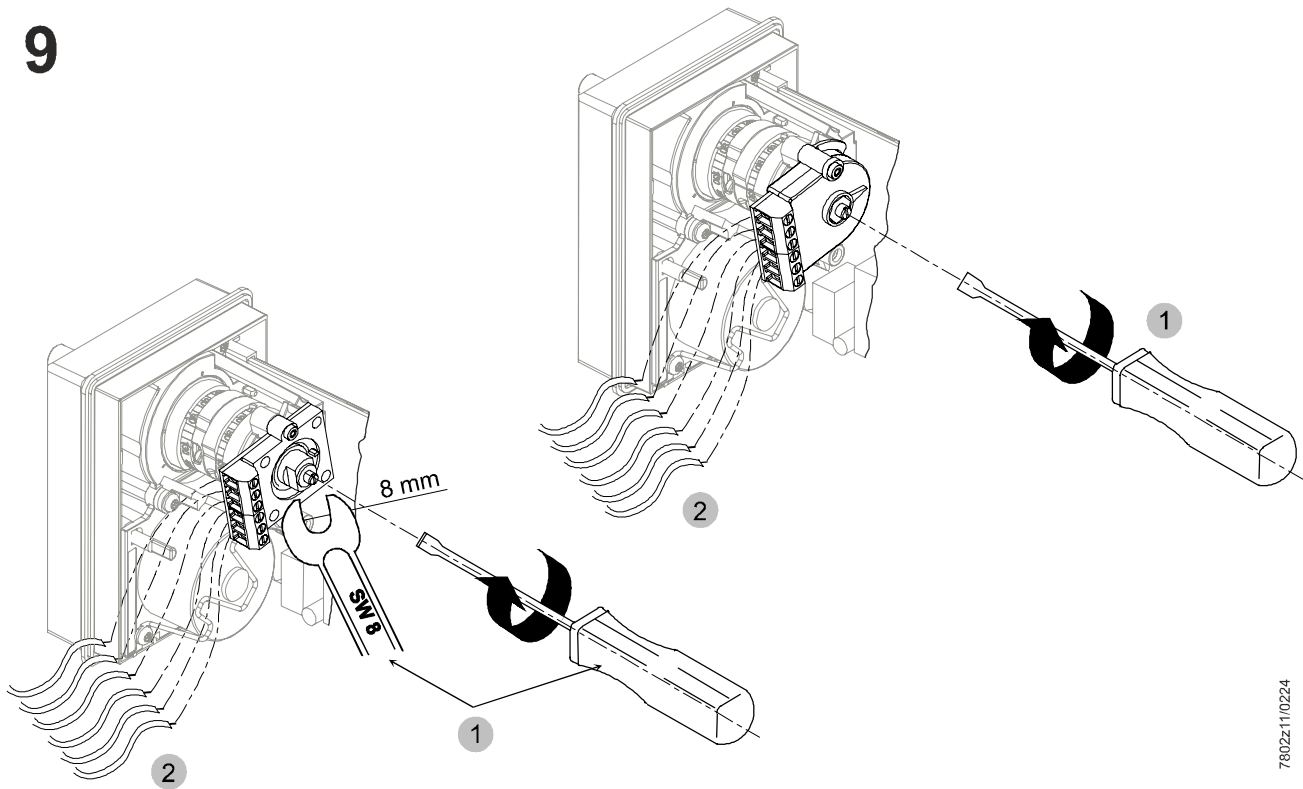

10

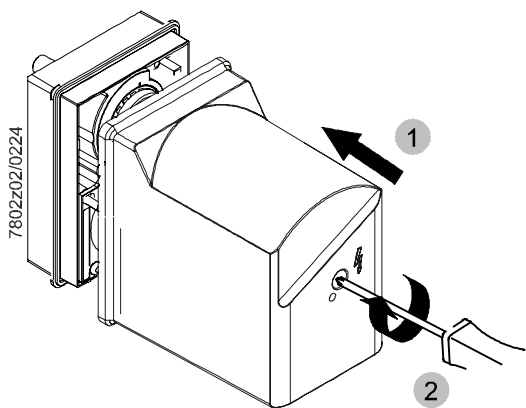



- 1 Put on the housing cover
- 2 Secure the housing cover

Fitting the SQN72/SQN73 onto the VKF1x butterfly valve

VKF10/VKF11

VKF10/VKF11
contents




7673z05/1021

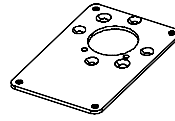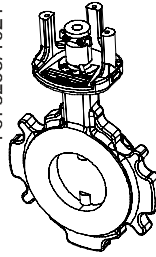

M5x12





M5x16

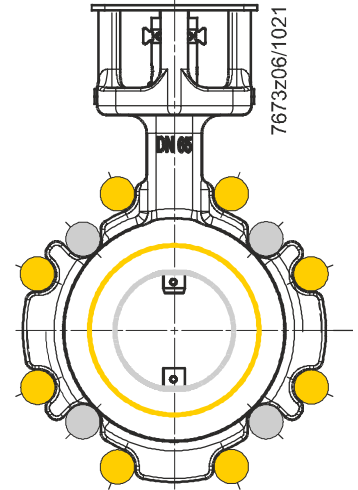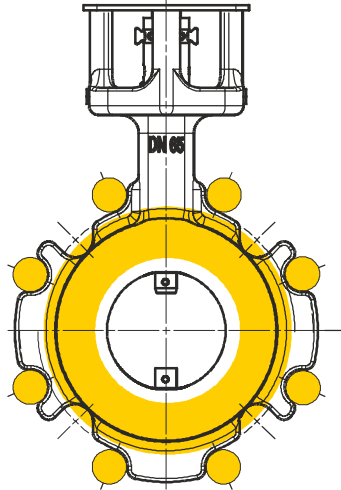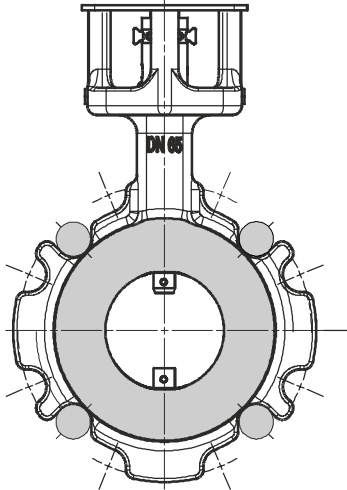


Nominal size	Swing thru	With mechanical stop	Suitable for flange size	Tightening torque	Mounting			
					DN ISO	DN ASME	DN+1 ISO	DN+1 ASME
32	VKF10.032	VKF11.032	DN32 + DN40	50 Nm	4 x M16	4 x ½	4 x M16	4 x ½
40	VKF10.040	VKF11.040	DN40 + DN50	50 Nm	4 x M16	4 x ½	4 x M16	4 x 5/8
50	VKF10.050	VKF11.050	DN50 + DN65	50 Nm	4 x M16	4 x 5/8	4 x M16	4 x 5/8
65	VKF10.065	VKF11.065	DN65 + DN80	50 Nm	4 x M16	4 x 5/8	8 x M16	4 x 5/8
80	VKF10.080	VKF11.080	DN80 + DN100	50 Nm	8 x M16	4 x 5/8	8 x M16	4 x 5/8
100	VKF10.100	VKF11.100	DN100 + DN125	80 Nm	8 x M16	8 x 5/8	8 x M16	8 x ¾
125	VKF10.125	VKF11.125	DN125 + DN150	160 Nm	8 x M16	8 x ¾	8 x M20	8 x ¾
150	VKF10.150	VKF11.150	DN150 + DN200	160 Nm	8 x M20	8 x ¾	12 x M20	8 x ¾
200	VKF10.200	VKF11.200	DN200	160 Nm	12 x M20	8 x ¾	---	---

Mounting position of the mounting plate

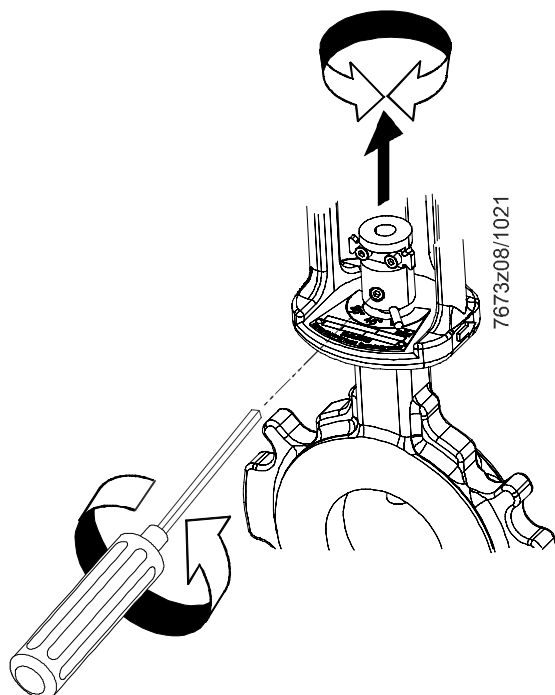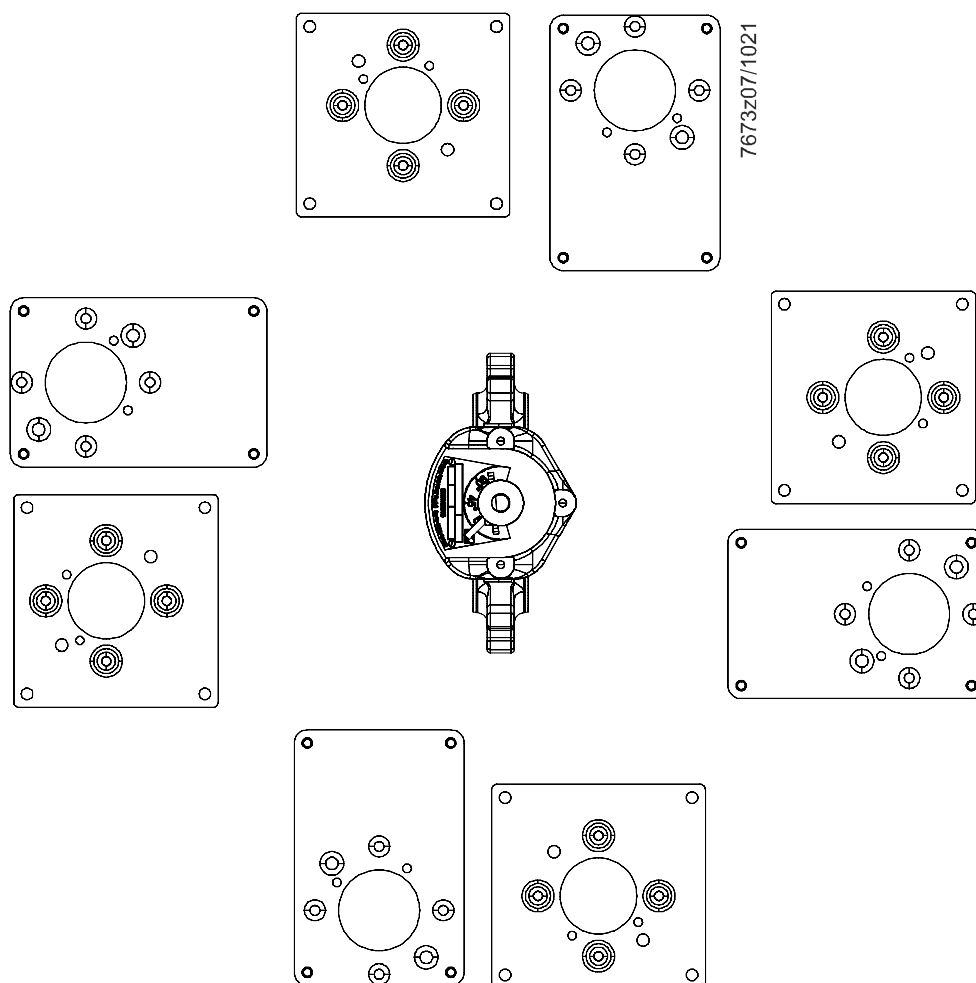


Loosen the screw. Align the coupling to suit the mounting position of the mounting plate. Tighten the screw again (max. 2 Nm).

Step 1:

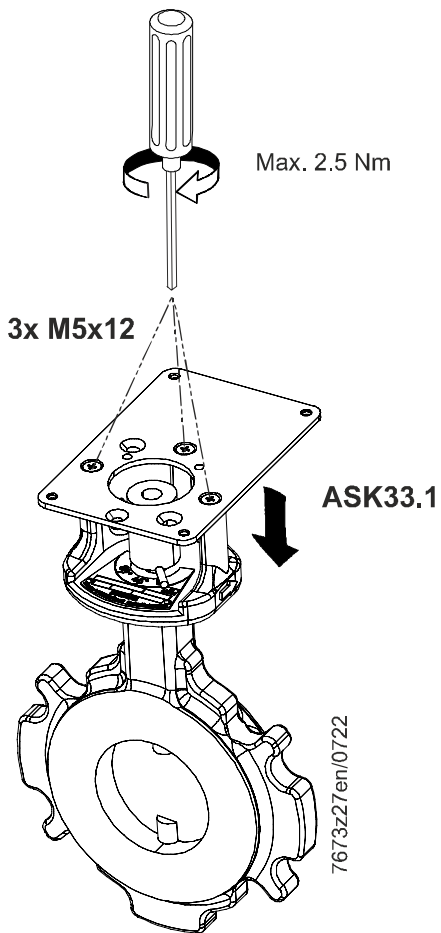


Step 2:

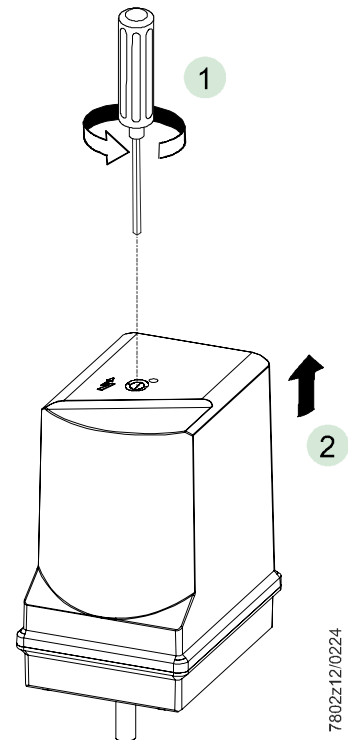


Step 3:


Release the coupling while pressing the pressure pin down

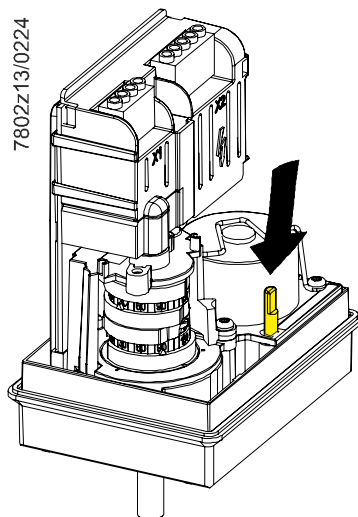

Step 4:

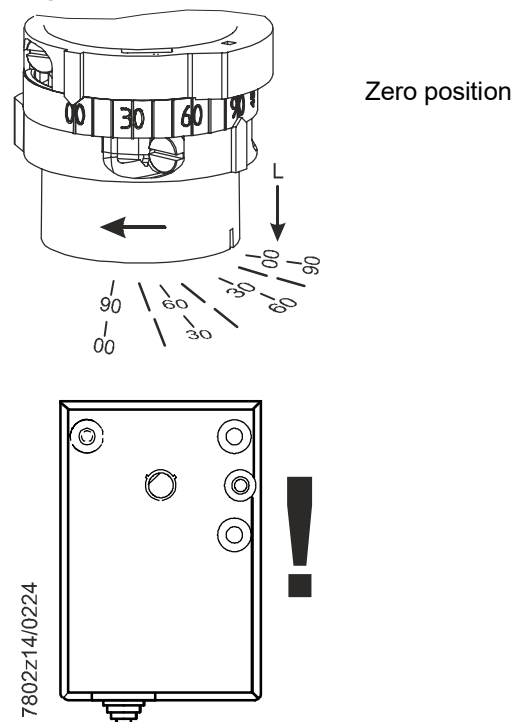


Step 5:

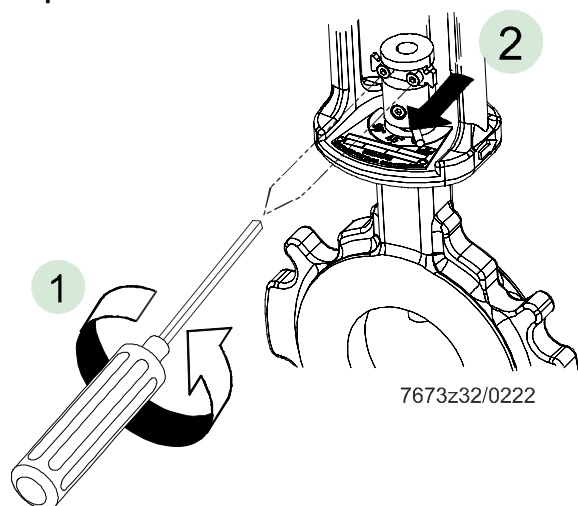


- 1 Loosen the screws.
- 2 Pull the plate in the direction of the arrow and mount the SQN72/SQN73

Step 7:


Lock the coupling while loosening the pressure pin

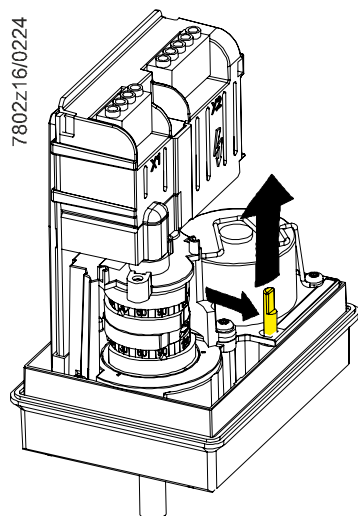

Step 6:

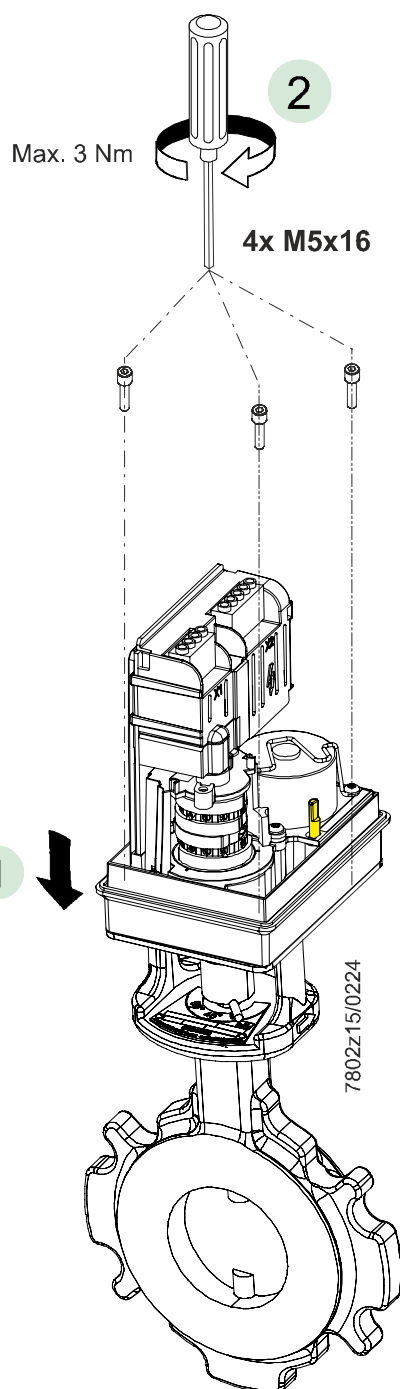


Step 8:

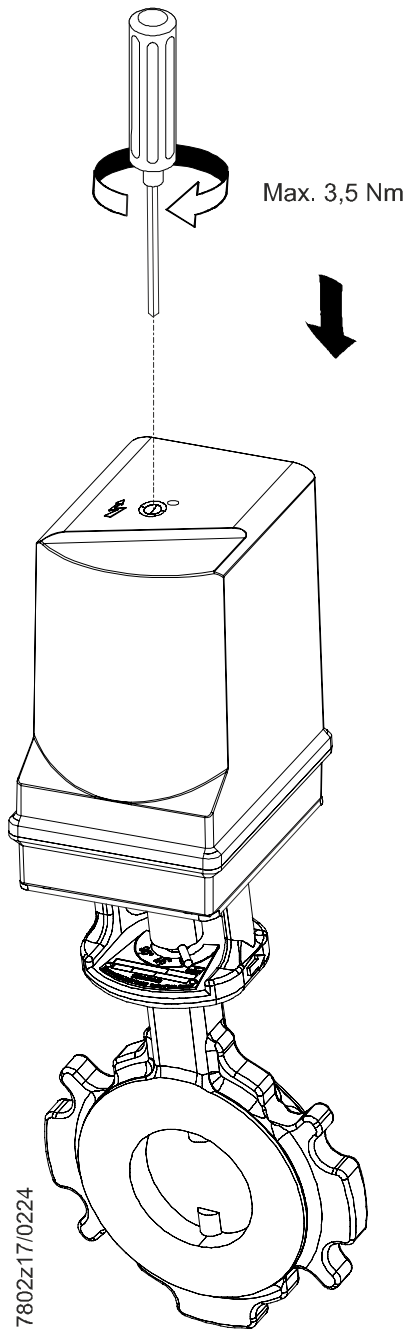

Step 9:


Tighten the screws (max. 2 Nm).

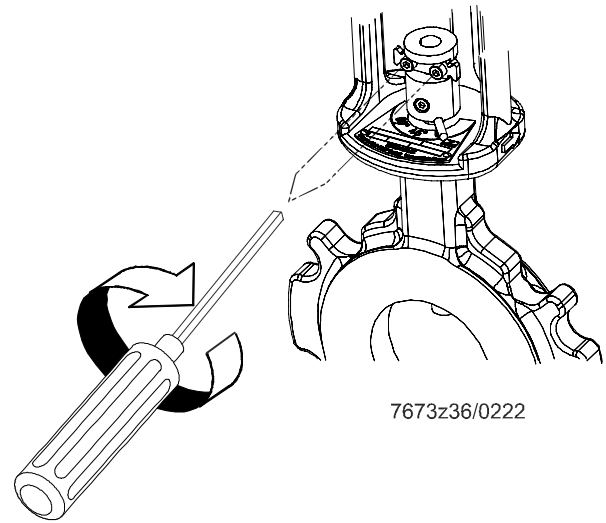

Mounting the SQN72 onto the VKP40 butterfly valve

Step 1

Example VKP40 + SQN72


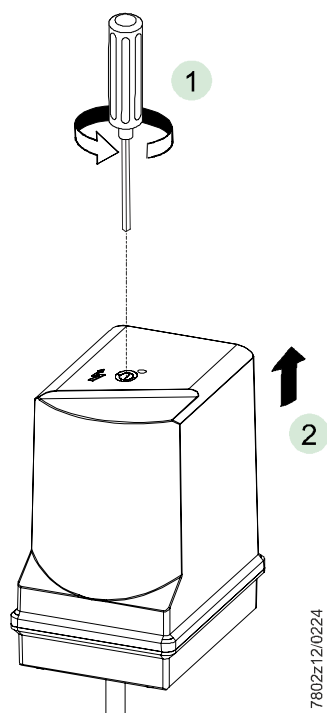


Step 2

For information on settings, refer to VKP40 Data Sheet N7646




7646z53/1223

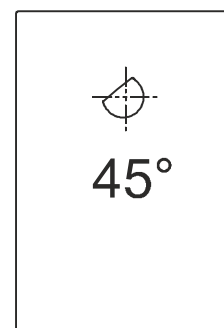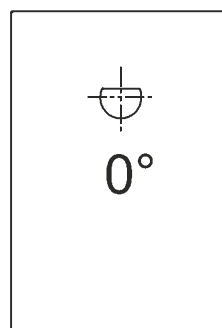


Note
0° alignment.
With a 0° alignment (SQN7x.xxxXx1), steps 4 to 7 are not necessary.

Step 3

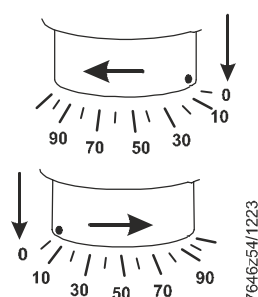


Zero position

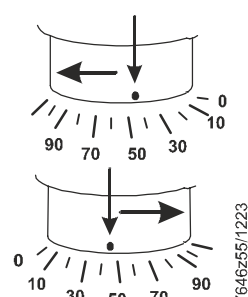

45° position


Step 4

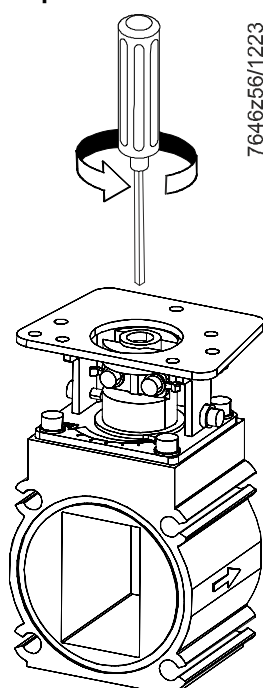

Conversion of the VKP40 coupling for the SQN72, 45° D-shaft


Use an Allen key (4 mm) and turn the coupling and the VKP40 cylinder counterclockwise until it stops. Keep turning and loosen the coupling screw.

Step 5

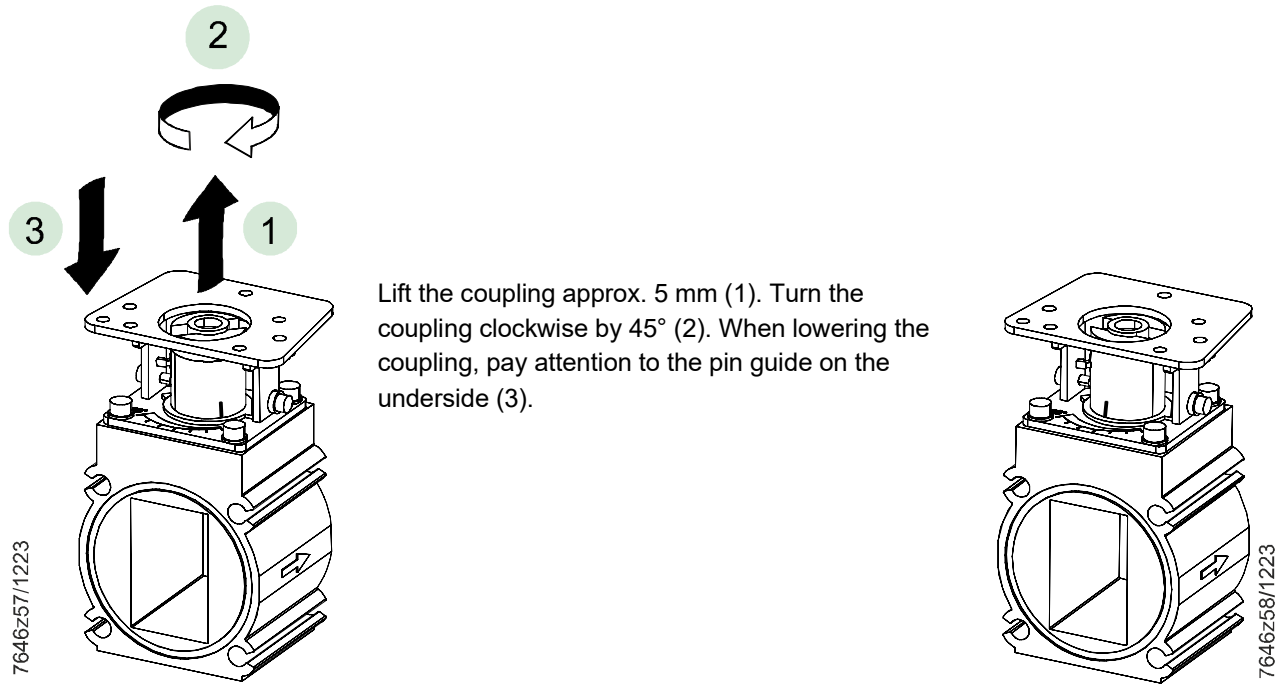


Step 6

Turn the central coupling screw clockwise until the coupling and the VKP40 cylinder reach the mechanical stop. The position display of the VKP40 must show a position beyond 90°.

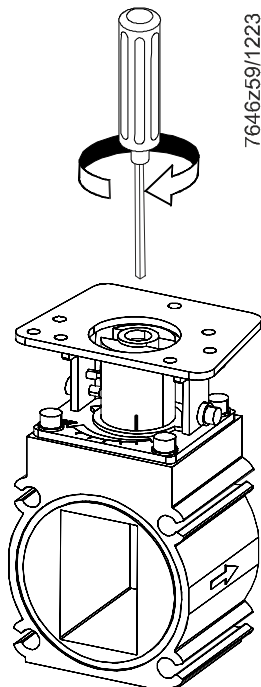

Step 7


Use the Allen key to turn the VKP40 cylinder counterclockwise back to the 0° position. The VKP40 is now set to use the 45° D-shaft on the SQN72.

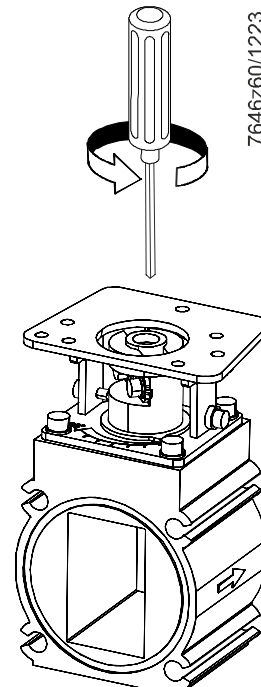


Mounting the SQN72 onto the VKP40 butterfly valve (continued)

Step 8


Loosen the screws (1). Pull the plate in the direction of the arrow (2) and mount the SQN72.

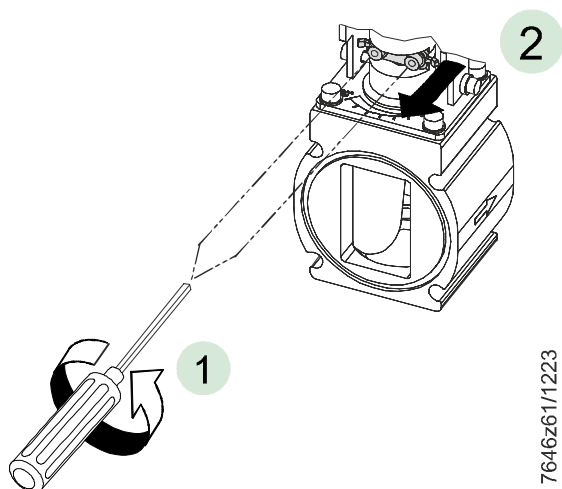

Step 9

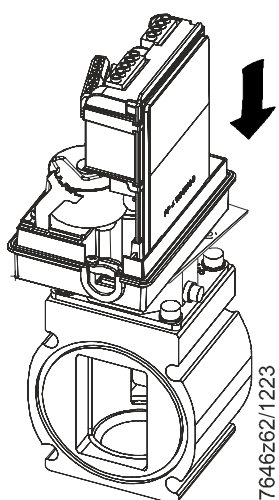


Step 10

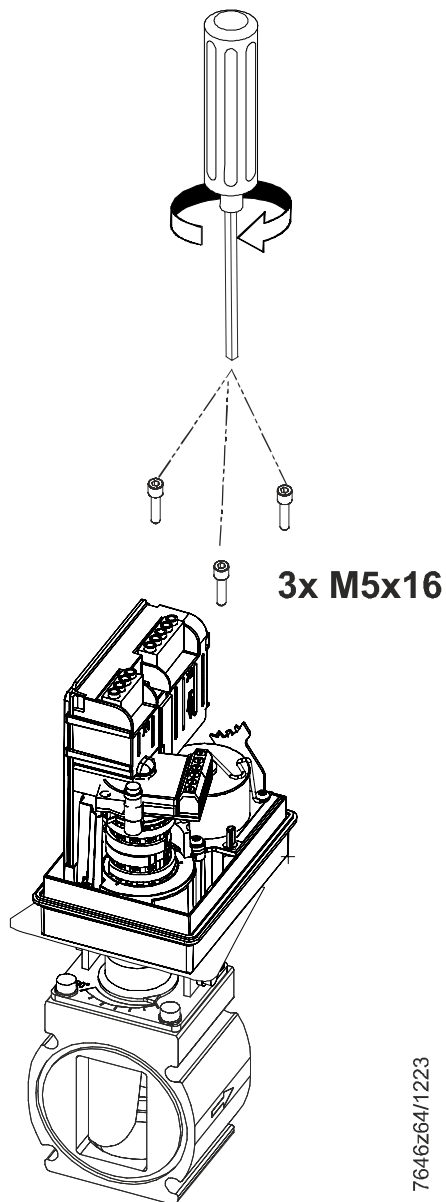

Mounting the SQN72 onto the VKP40 butterfly valve (continued)

Step 11

Tighten the screws.

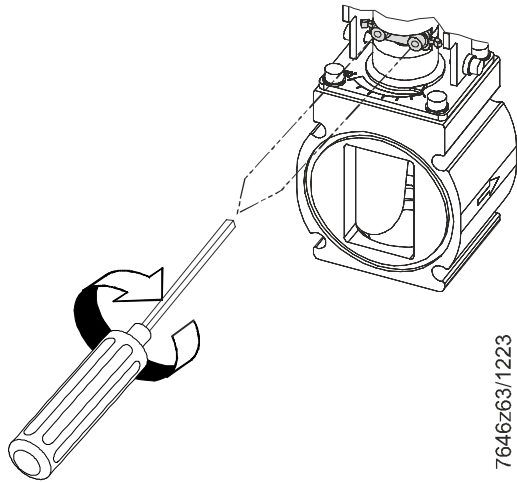

Step 12

