


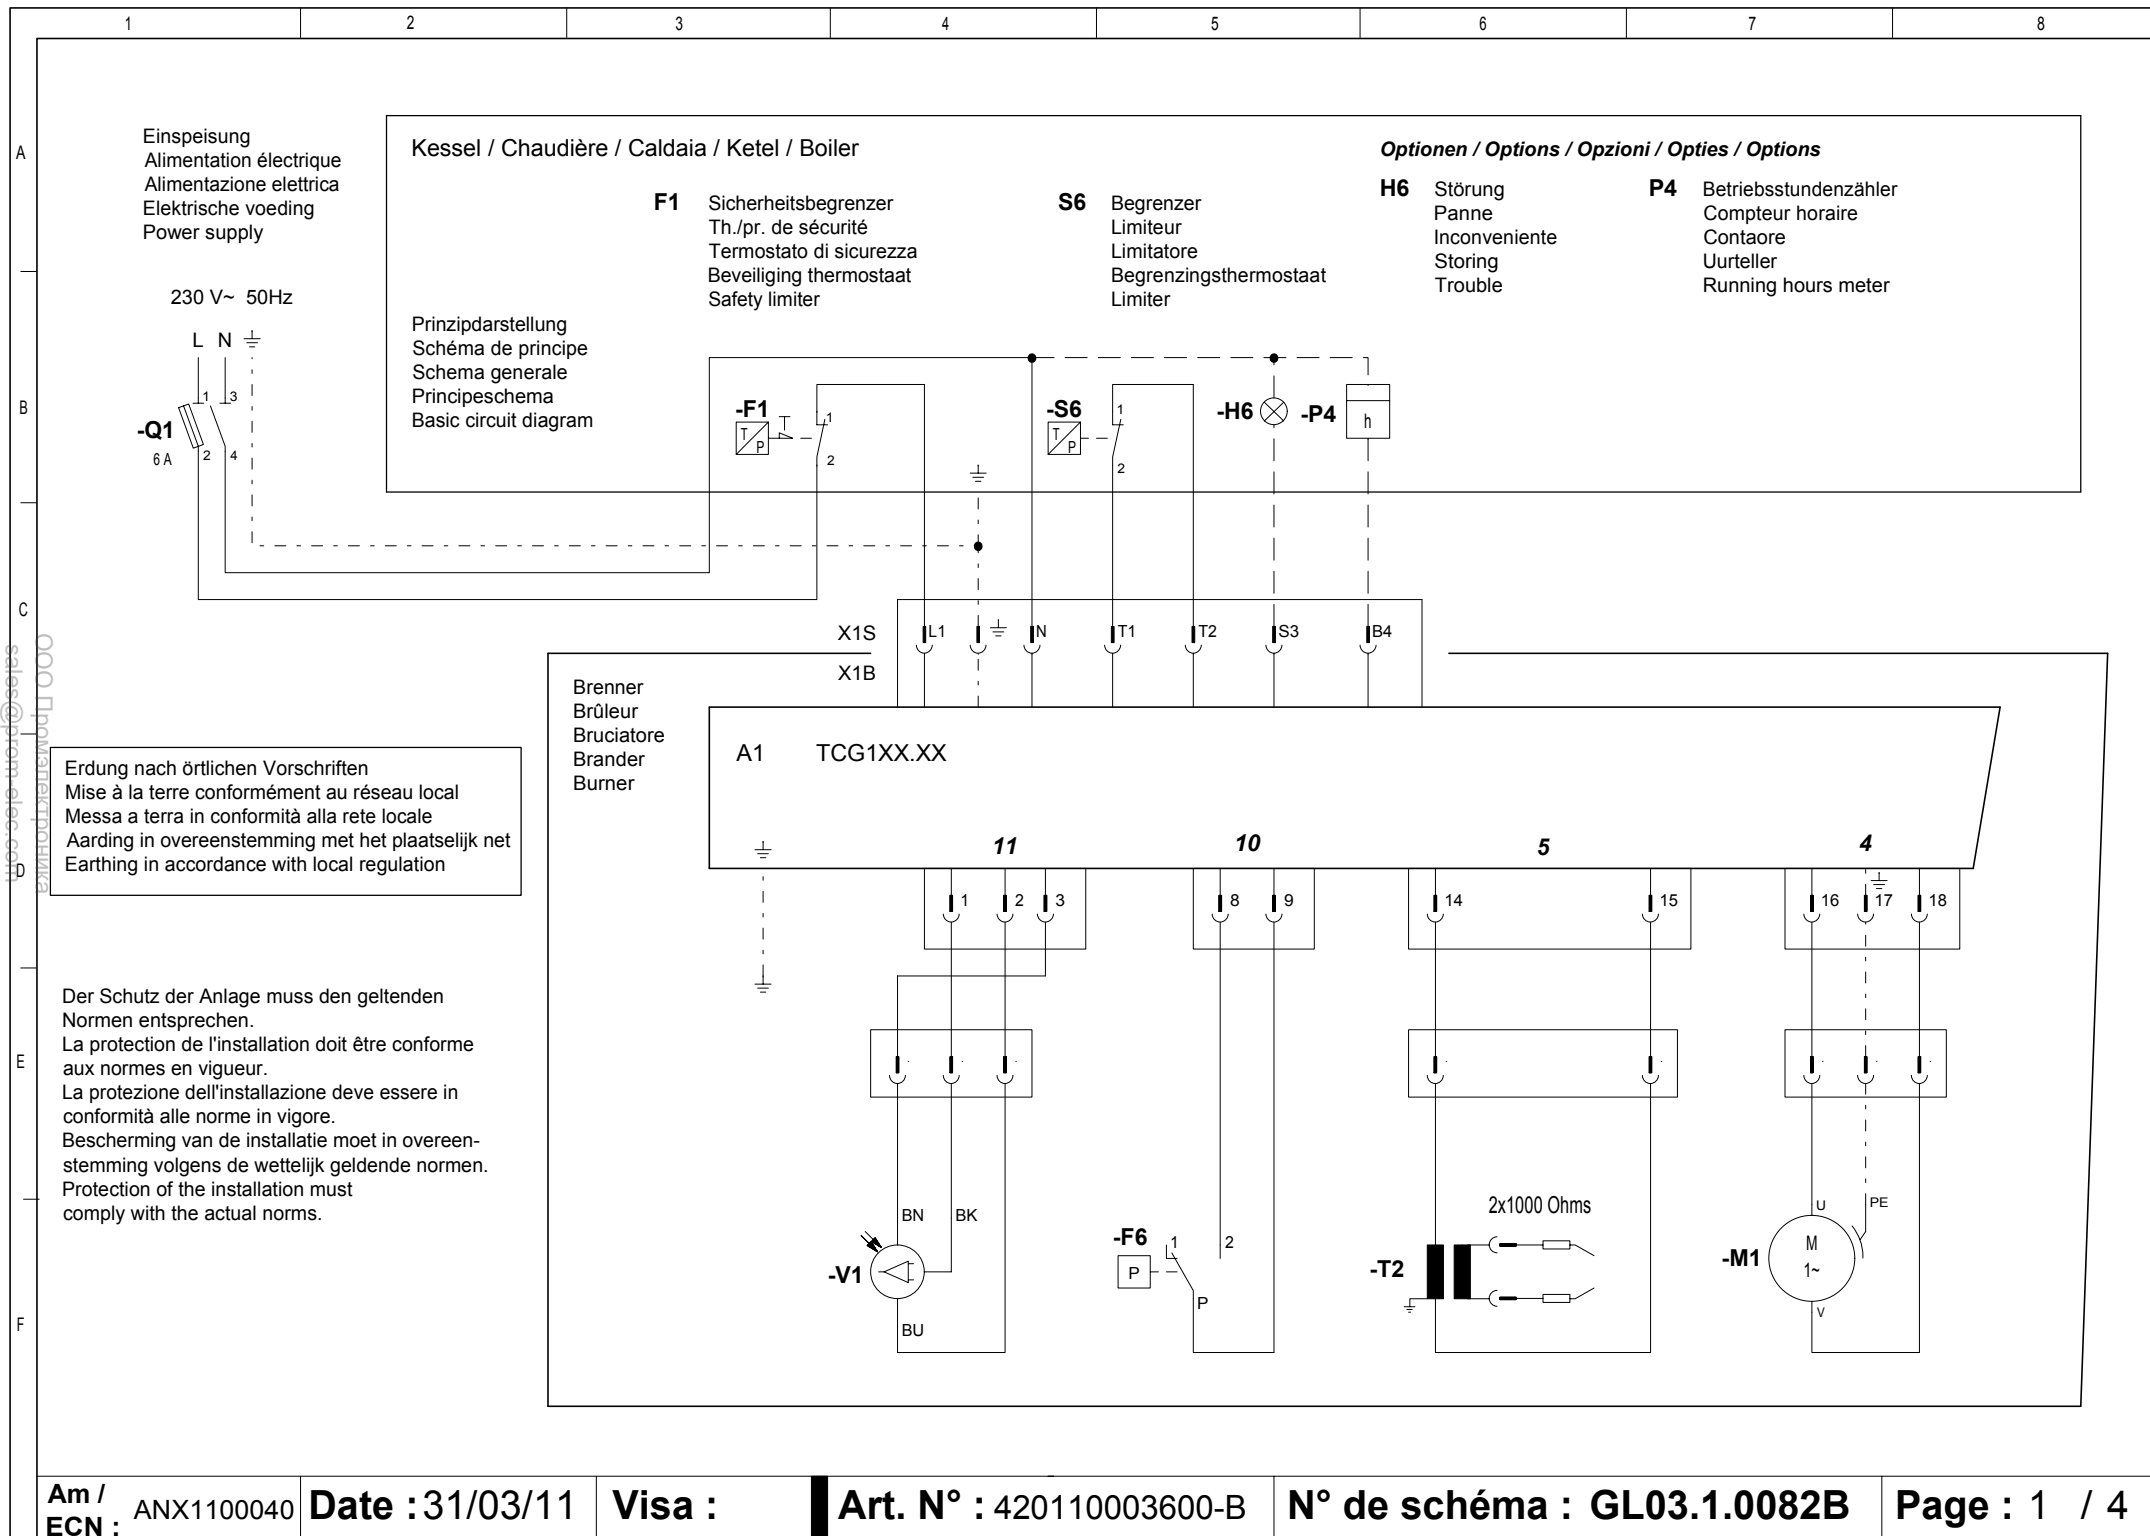

	1	2	3	4	5	6	7	8
A								
		"DE"	"FR"	"IT"	"NL"	"EN"		
B		A1	Feuerungsautomat	Coffret de contrôle	Programmatore di comando	Bedienings en veiligheidskoffer	Control and safety unit	
		F4	Gasdruckwächter	Manostat gaz	Pressostato gas	Gaspresostaat	Gas pressure switch	
C		F6	Luftdruckwächter	Manostat d'air	Pressostato aria	Luchtpresostaat	Air pressure switch	
		H6	Störung	Panne / Défaut	Inconveniente	Storing	Trouble	
		M1	Brennermotor	Moteur du brûleur	Motore del bruciatore	Brandermotor	Burner motor	
		S4	Schalter Gas/0/Öl	Inter. Gaz/0/Fuel	Interr. Gas/0/Gasolio	Schak. Gas/0/Olie	Gas/0/Fuel oil switch	
		S5	Entstörknopf	Bouton de réarmement	Pulsante di riarmo	Ontgrendelingsknop	Reset button	
		T2	Zündtrafo	Transformateur d'allumage	Trasformatore d'accensione	Ontstekingstransformator	Ignition transformer	
		V1	Flammenwächter	Cellule	Rivelatore di fiamma	Fotocel	Cell	
		Y1	Ölventil	Vanne fuel	Valvola gasolio	Olieventiel	Fuel oil valve	
D		Y12	Gasventil gasseitig	Vanne gaz de sécurité	Valvola sicurezza gas	Veiligheidsventiel gas	Safety gas valve	
		Y13	Gasventil brennerseitig	Vanne gaz principale	Valvola principale gas	Hoofdafsluiter gas	Gas valve burner side	
		Y16	Ölsicherheitsventil	Vanne fuel de sécurité	Valvola di sicurezza gasolio	Veiligheidsventiel olie	Fuel-oil safety valve	
E								
F								
	Am / ECN :	ANX1100040	Date : 31/03/11	Visa :	Art. N° : 420110003600-B	N° de schéma : GL03.1.0082B	Page : 3	/ 4

