 
 
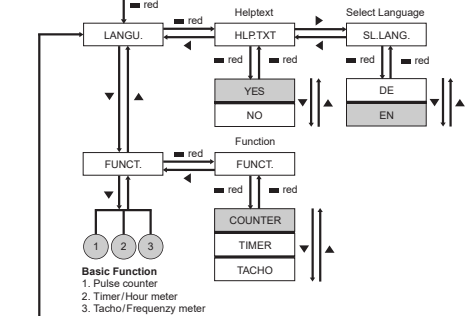 
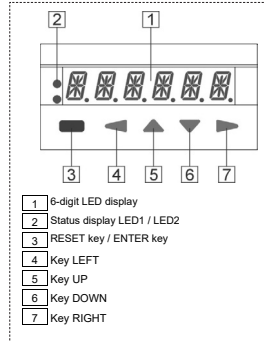 
 


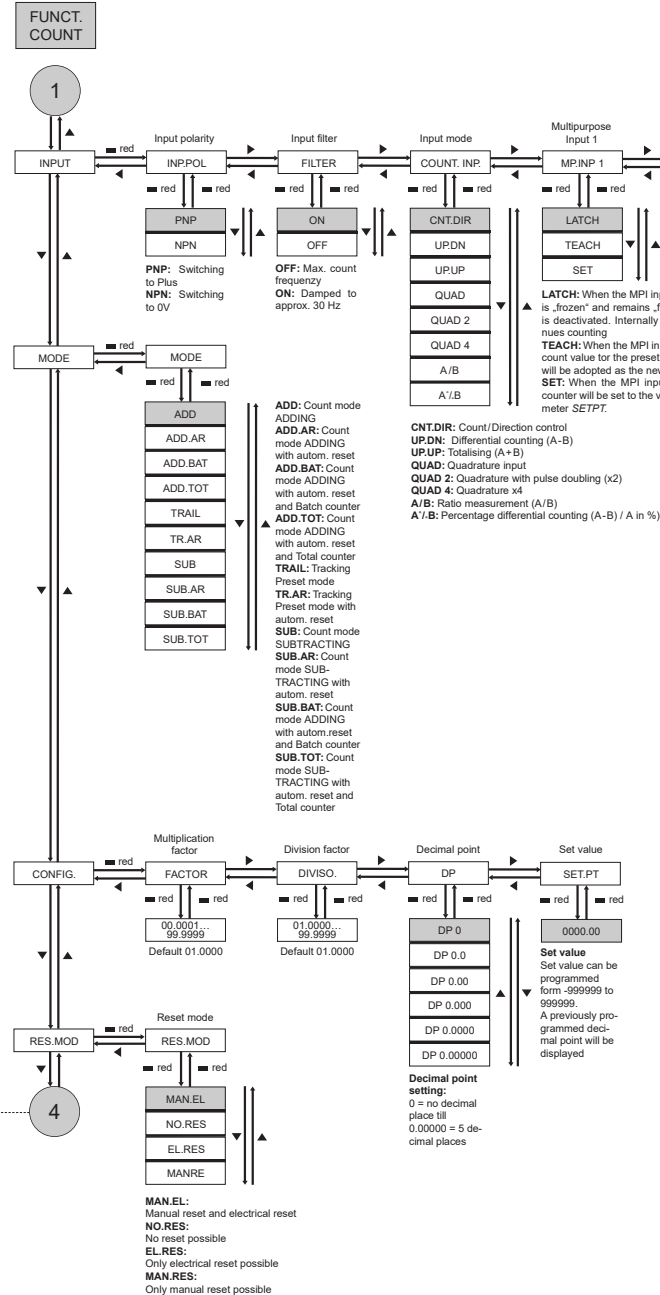

Changing the basic function causes all parameters to be reset to factory settings.

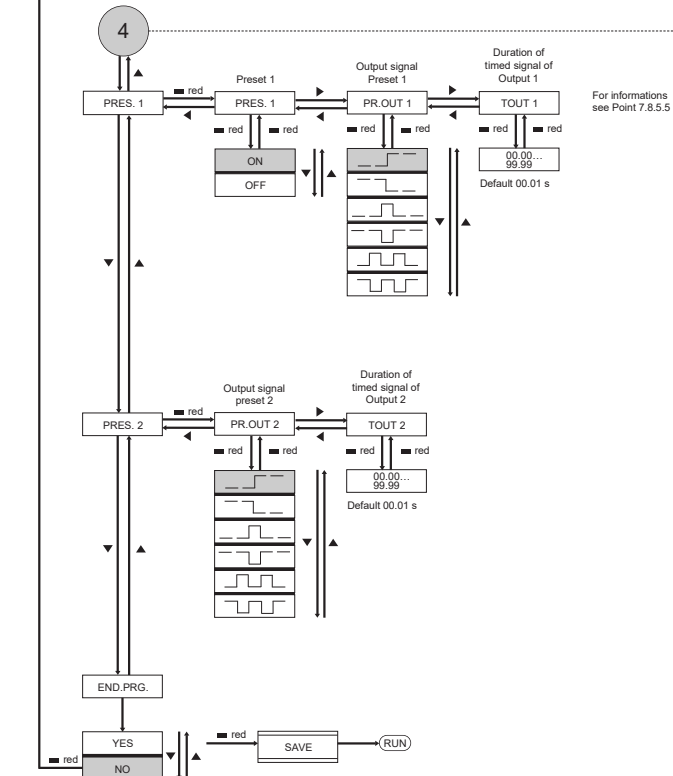




Switching the display during operation

Pressing the DOWN key or the UP key once causes the name of the currently selected display function to be displayed for 2 sec. If within this time the DOWN key or the UP key is pressed a second time, then the display switches to the next or previous display function. This is confirmed by displaying the new name for a period of 2 sec. After 2 sec the count value that corresponds to the selected display function is displayed.

ACTUAL	Auto	0.00.00	Main counter
BATCH	Auto	0	Batch counter (BATCH only if BATCH mode selected)
TOTAL	Auto	0.00.00	Total counter (TOTAL only if TOTAL mode selected)
PRES. 1	Auto	0.10.00	Preset 1
PRES. 2	Auto	0.20.00	Preset 2

Entry into the default setting

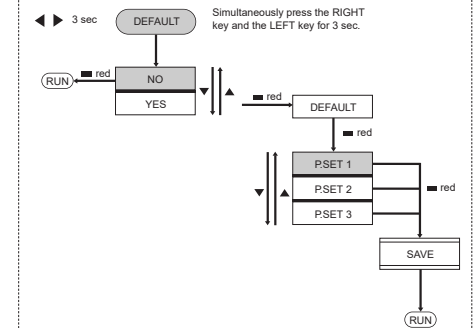

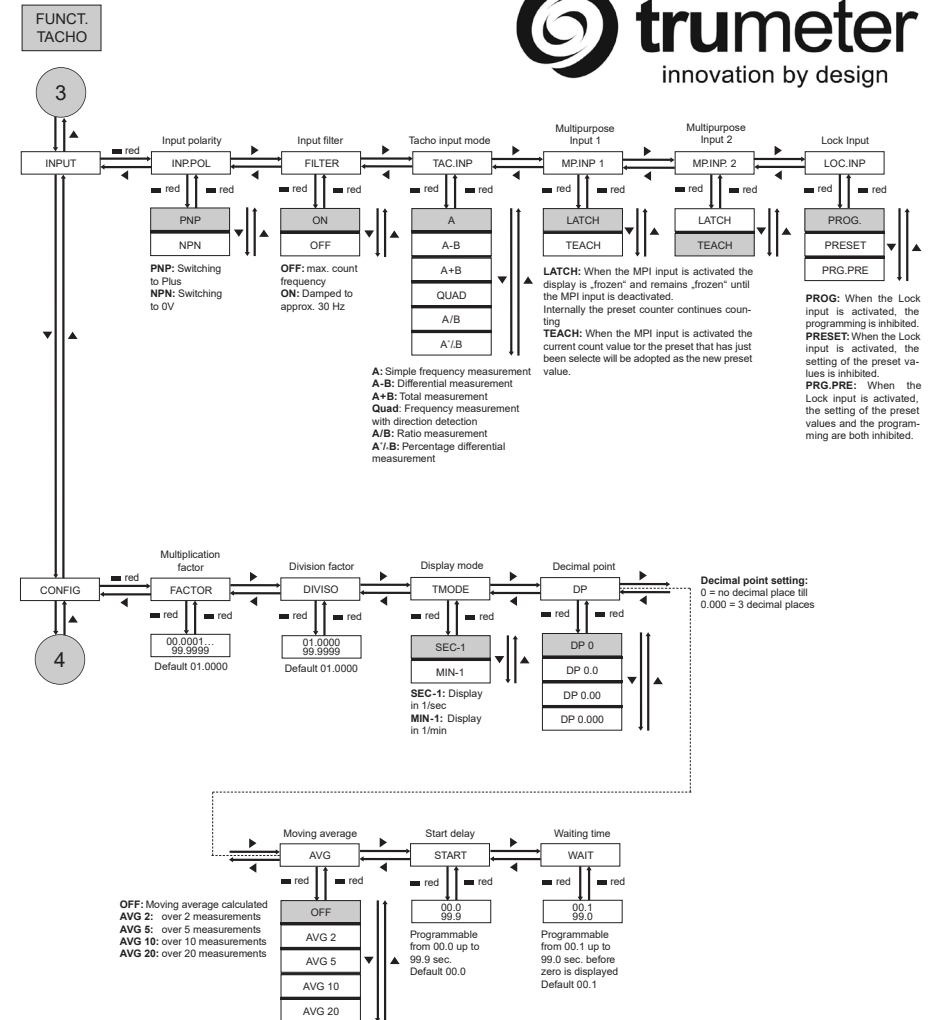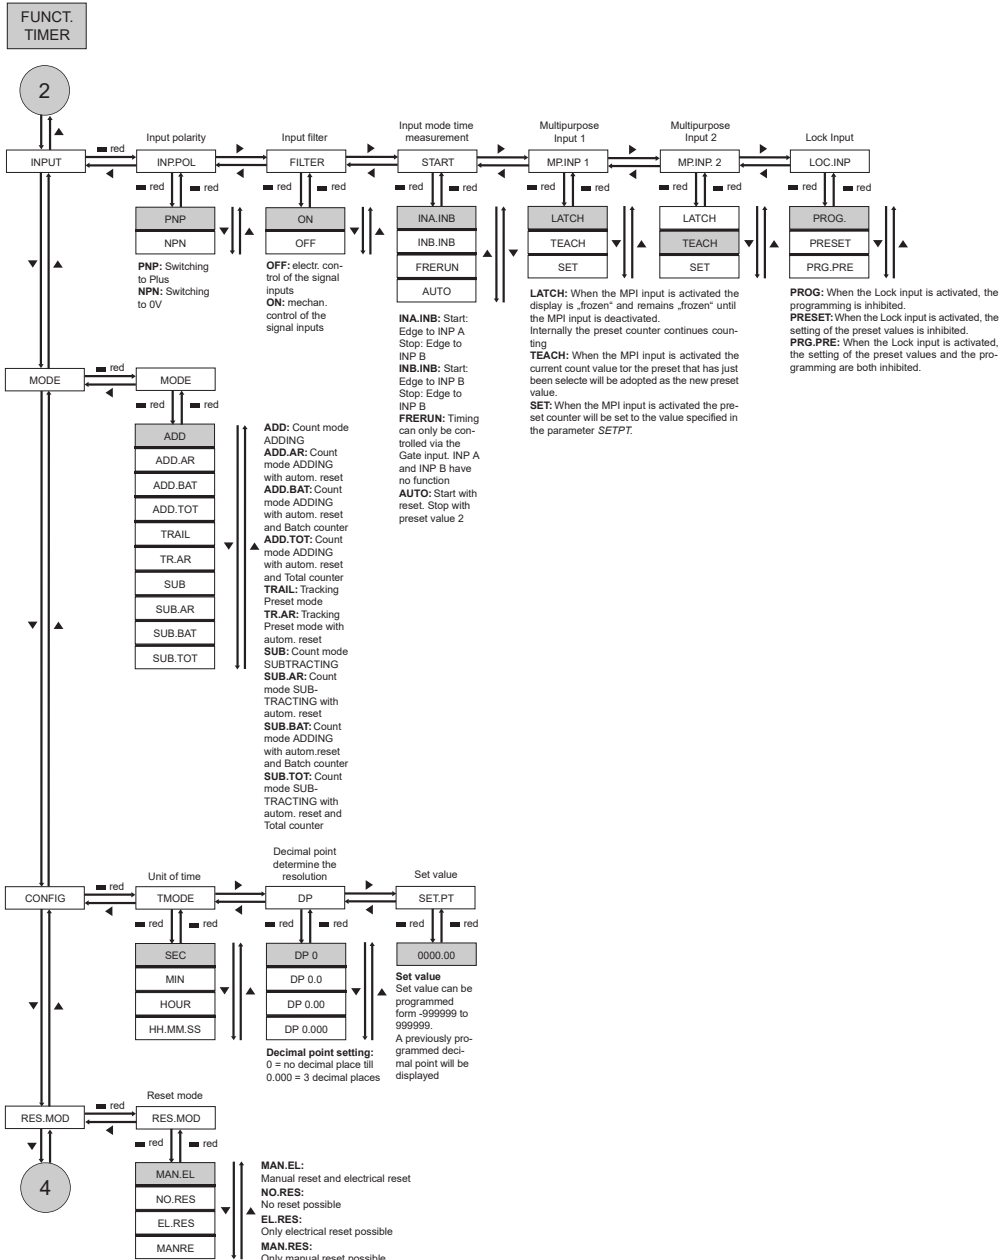

Contact / Kontakt / Contacter / Contacto / Contatto

Europe
Trumeter
Pilot Mill,
Alfred Street,
Bury, BL9 9EF
web: www.trumeter.com
Tel: +44 161 674 0960
Email: sales.uk@trumeter.com

The Americas
Trumeter
6601 Lyons Rd, Suite H-7
Coconut Creek, Florida
FL 33073,
USA
Tel: +1 954 725 6699
Email: sales.usa@trumeter.com

Asia Pacific
Innovative Design Technologies Sdn.Bhd
Lot 5881, Lorong Iks Bukit Minyak 1
Taman Perindustrian Iks,
14000 Bukit Tengah
Penang, Malaysia
Web: www.idtworld.com
Tel: + 604 5015700
Email: info@idtworld.com