


D Montageanweisung  
F Instructions d'installation  
I Istruzioni di montaggio  
NL Installatievoorschrift  
DK Installationsinstruktus  
N Installationsinstruktioner  
FIN Asennusohje  
S Installation instruktioner  
E Instrucciones de montaje


# ML6420A30xx/ML7420A60xx

## Electric Linear Valve Actuators


### INSTALLATION INSTRUCTIONS

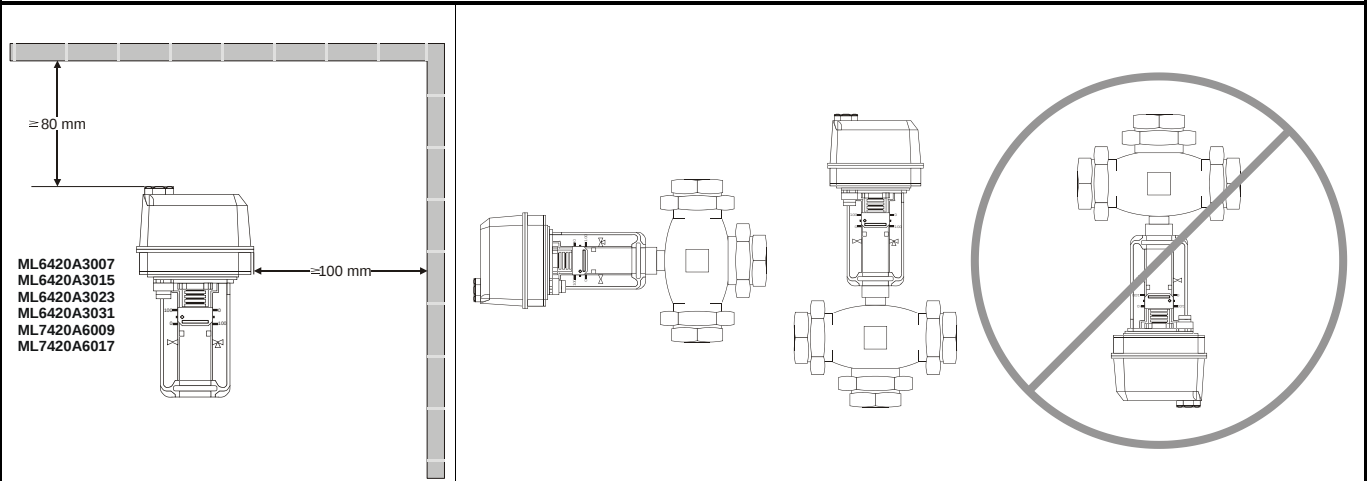


#### A1-A6: Installation

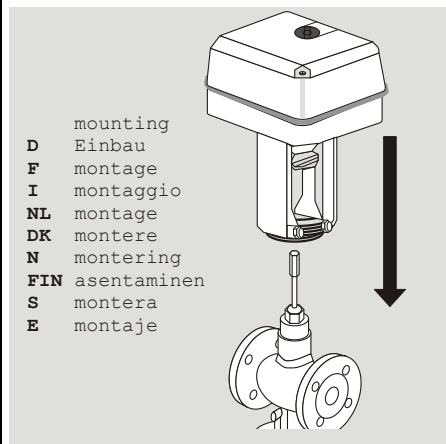


#### A1

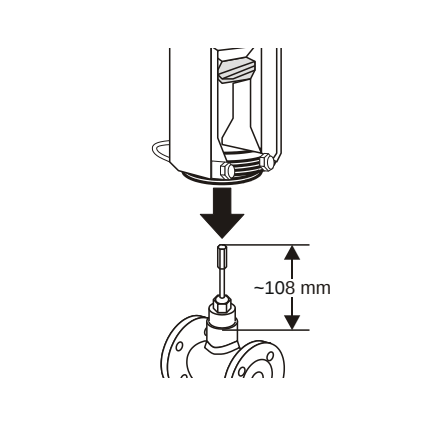


#### A2

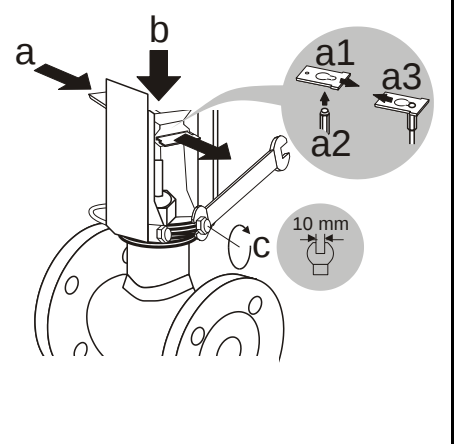


#### A3

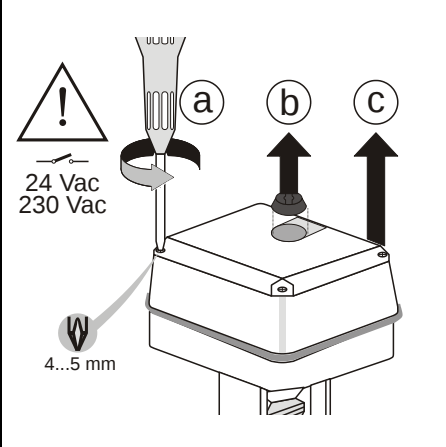


#### A4a: ML6420A3007, A3023 (24 V)

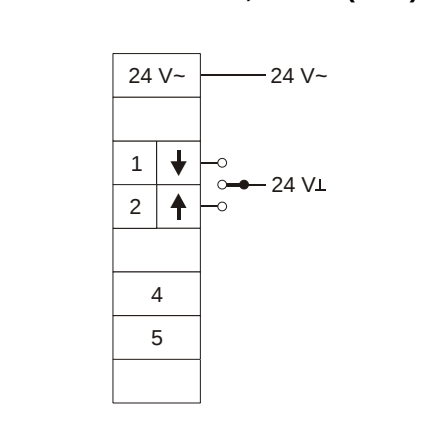

#### A4b: ML6420A3015, A3031 (230 V)

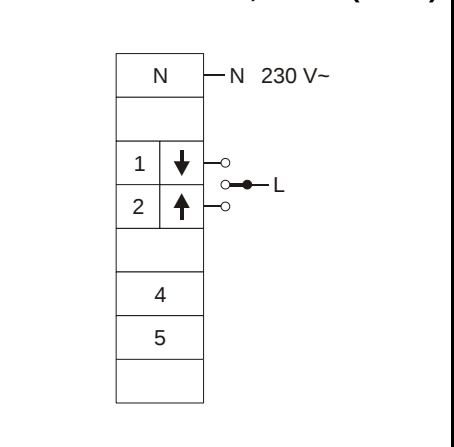

MU1B-0234GE51 R0216E

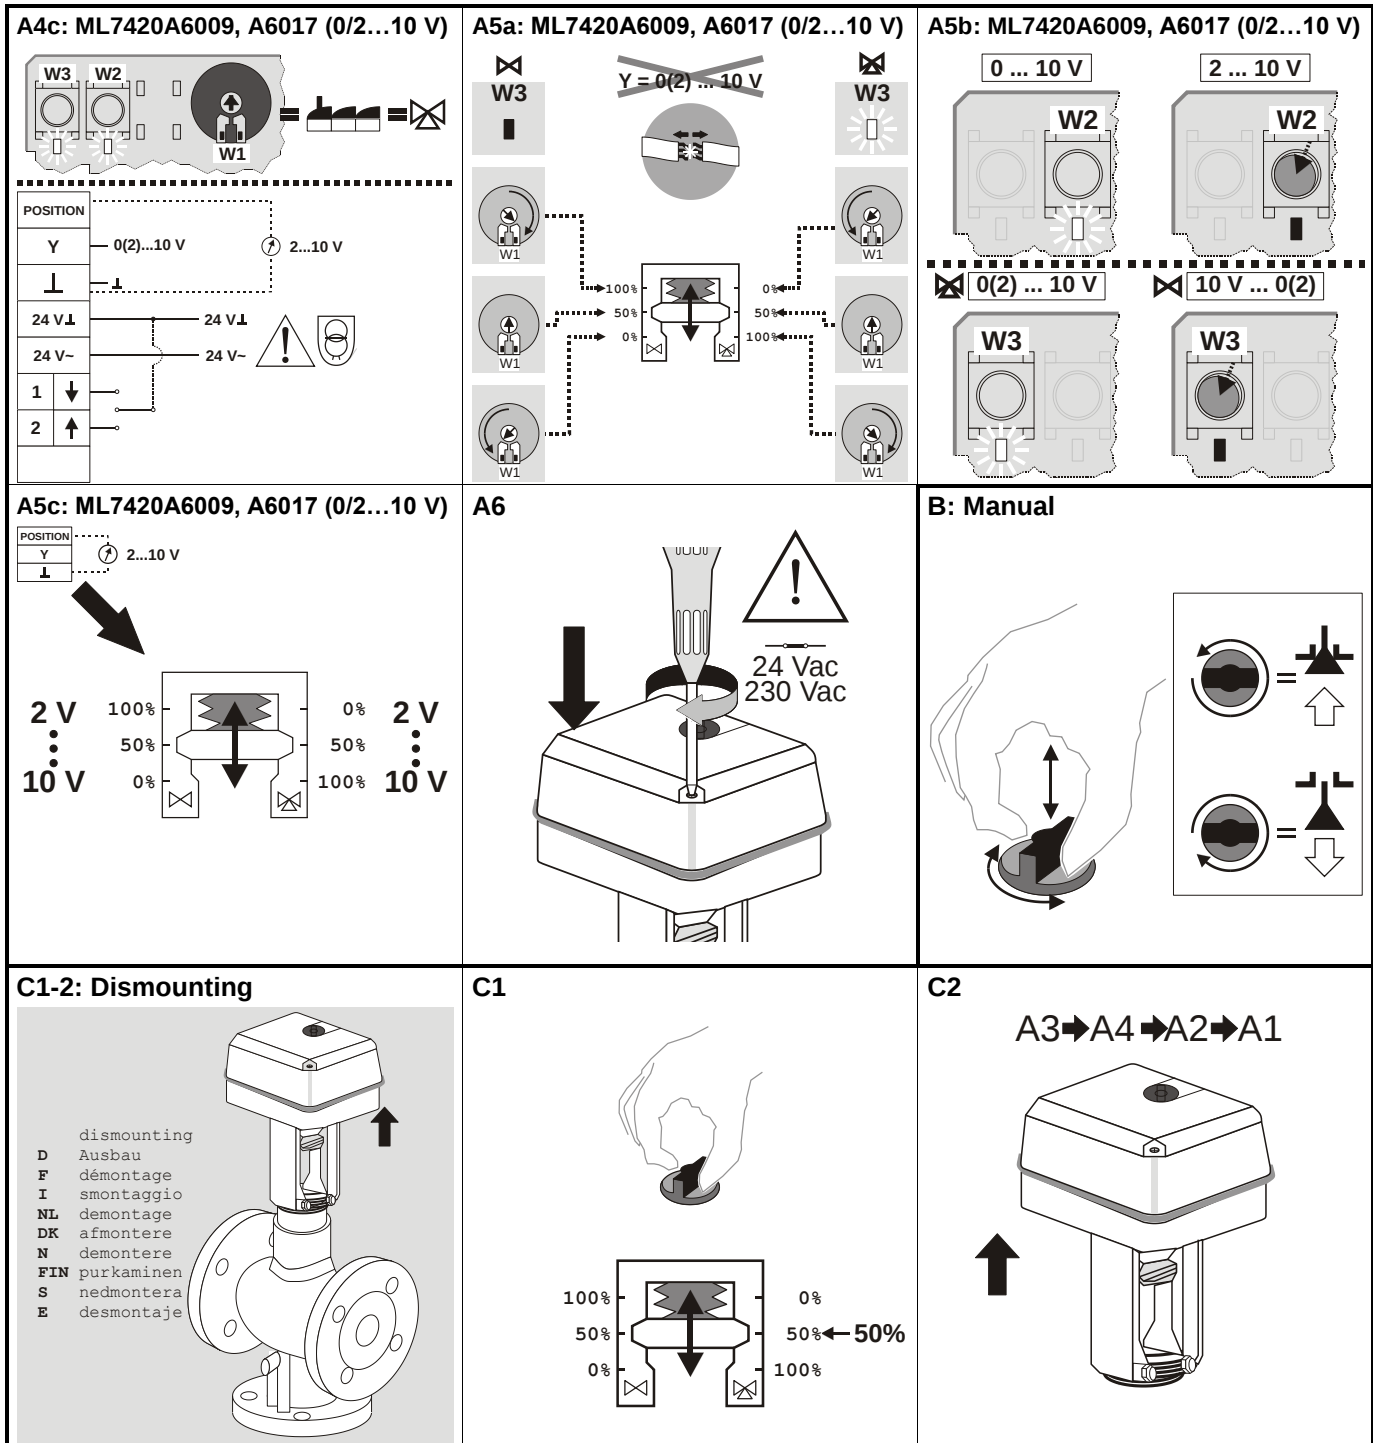

Subject to change without notice.

MU1B-0234GE51 R0216E