


Braukmann BA295S

Einbau-Anleitung für Ersatzteile • Installation Instructions for spare parts

1. Austausch Kartuscheneinsatz • *Exchange of valve cartridge insert*


1

Absperrventile schließen
Close shutoff valves

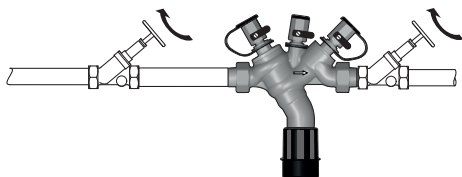


2

Kurz über Kugelhähne druckentlasten
Briefly vent the appliance through the ball valves

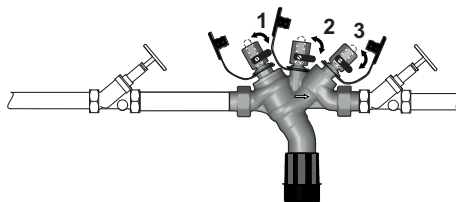


3

Gehäuse öffnen
Unscrew the valve cap from the housing

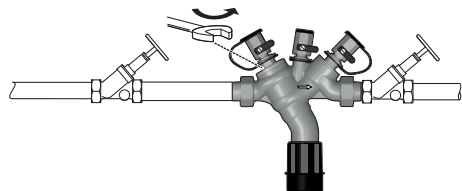


4

Kartuscheneinsatz austauschen
Exchange the valve cartridge insert

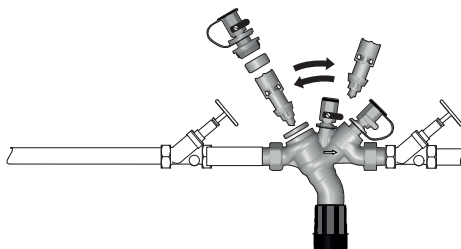


5

Gehäuse schließen
Screw the valve cap back into the housing

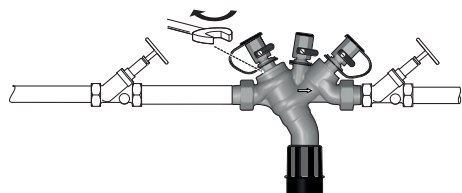

6


Absperrventile öffnen
Open shutoff valves

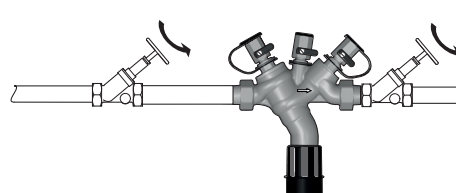

2. Austausch Kartuscheneinsatz • Exchange of valve cartridge insert


①

Absperrventile schließen
Close shutoff valves

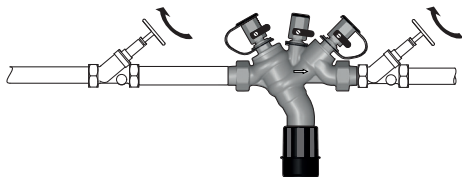


②

Kurz über Kugelhähne druckentlasten
Briefly vent the appliance through the ball valves

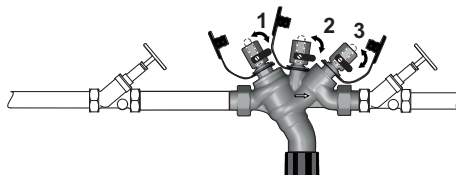


③

Gehäuse öffnen
Unscrew the valve cap from the housing

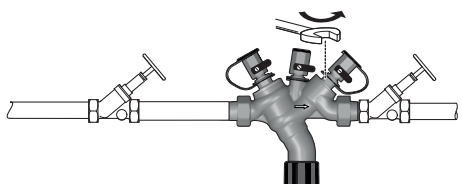

④


Rückflussverhinderer austauschen
Exchange the check valve

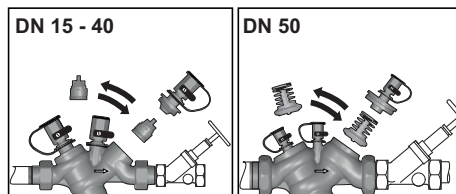

Achtung, Teil steht unter Federspannung
Caution, part is spring-loaded


⑤

Gehäuse schließen
Screw the check valve cap back into the housing

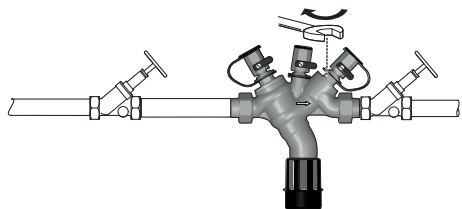

⑥

Absperrventile öffnen
Open shutoff valves

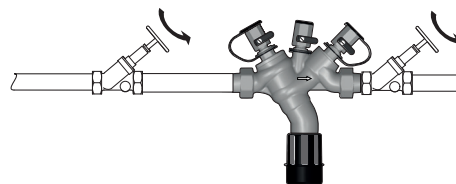

Manufactured for
and on behalf of
Pittway Sàrl, Z.A., La Pièce 4,
1180 Rolle, Switzerland
by its authorised representative
Ademco 1 GmbH

For more information
homecomfort.resideo.com/europe

Ademco 1 GmbH, Hardhofweg 40,
74821 MOSBACH, GERMANY

Phone: +49 6261 810
Fax: +49 6261 81309