



EN. Heat/Cool Exchange Mode

- a. Go to installer parameters by pressing and holding  and the + button for 5 seconds
- b. Go to parameter 19HC, select the value "1" and press 
- c. To activate the cool mode press and hold + and - for 5 secs

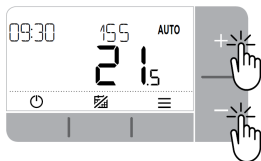


- d. Once cooling is activated the snowflake symbol will appear

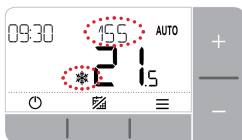


- e. You can adjust the cooling schedule in the same way you did for heating

ES. Cambio modo calefacción/refrigeración

- a. Entre en el menú avanzado pulsando y manteniendo presionados los botones  y + durante 5 segundos
- b. En el parámetro 19HC, seleccione "1" y presione 
- c. Para activar el modo refrigeración presione y mantenga pulsados + y - durante 5 segundos

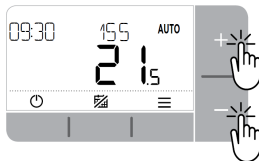

- d. Una vez el modo refrigeración esté activado, aparecerá el símbolo de un copo de nieve

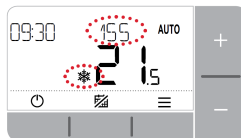

- e. Puede ajustar la programación de refrigeración en el mismo modo que lo hace para calefacción