



# RT Pressure switch

# RT Differential pressure switch

## Description

An RT pressure switch contains a pressure operated single-pole changeover contact, the position of which depends on the pressure in the inlet connection and the set scale value.

The RT series includes pressure switches for general applications within industrial and marine refrigeration.


The RT series also includes differential pressure switches, pressure switches for neutral zone regulation, and special pressure switches with gold-plated contact surfaces for PLC applications.

## Features & benefits

- Versions with enclosure IP66
- Wide regulating range
- Wide range of units for industrial and marine applications
- Suitable for alternating and direct current (AC and DC)
- Interchangeable contact system
- Special versions for PLC applications
- Safety Integrity Level: SIL 2 according to IEC 61508

## Ordering

### Product code numbers

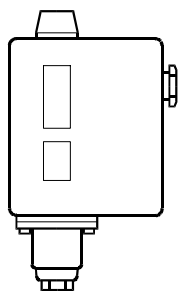


Pressure switches for R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D

For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Pressure | Type   | Regulation range [bar] | Differential Δp [bar] | Reset       | Max. working pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.   |                       |
|----------|--------|------------------------|-----------------------|-------------|--------------------------------|-----------------------------------------|------------|-----------------------|
|          |        |                        |                       |             |                                |                                         | Connection |                       |
|          |        |                        |                       |             |                                |                                         | ¼ in flare | G 3/8 A <sup>1)</sup> |
| Low      | RT 1   | -0.8 – 5               | 0.5 – 1.6             | Auto.       | 22                             | 25                                      | 017-524566 | –                     |
|          |        | -0.8 – 5               | 0.5                   | Man. (Min.) | 22                             | 25                                      | 017-524666 | –                     |
|          | RT 200 | 0.2 – 6                | 0.25 – 1.2            | Auto        | 22                             | 25                                      | –          | 017-523766            |
| High     | RT 117 | 10 – 30                | 1 – 4                 | Auto        | 42                             | 47                                      | –          | 017-529566            |

<sup>1)</sup>BSP ext. thread, ISO 228-1.

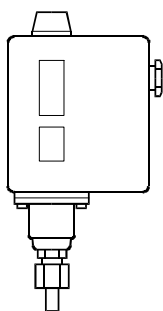

Pressure switches for R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R507A, R717

For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Pressure | Type  | Regulation range [bar] | Differential $\Delta p$ [bar] | Reset       | Max. working pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.                        |                                                             |
|----------|-------|------------------------|-------------------------------|-------------|--------------------------------|-----------------------------------------|---------------------------------|-------------------------------------------------------------|
|          |       |                        |                               |             |                                |                                         | Connection                      |                                                             |
|          |       |                        |                               |             |                                |                                         | Cutting ring $\varnothing 6$ mm | G 3/8 A <sup>1)</sup> + weld nipple $\varnothing 6.5/10$ mm |
| Low      | RT 1A | -0.8 – 5               | 0.5 – 1.6                     | Auto        | 22                             | 25                                      | 017-501966                      | 017-500166                                                  |
|          |       | -0.8 – 5               | 0.5                           | Man. (Min.) | 22                             | 25                                      | 017-502766                      | 017-500266                                                  |
|          |       | -0.8 – 5               | 1.3 – 2.4                     | Auto        | 22                             | 25                                      | –                               | 017-500766                                                  |
| High     | RT 5A | 4 – 17                 | 1.2 – 4                       | Auto        | 22                             | 25                                      | 017-505266                      | 017-504666                                                  |
|          |       | 4 – 17                 | 1.3                           | Man. (Max.) | 22                             | 25                                      | 017-506166                      | 017-504766                                                  |

<sup>1)</sup>BSP ext. thread, ISO 228-1.

Safety pressure switches with EN 12263 approval and CE marked acc. PED (Pressure Equipment Directive) \*)

R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R507A, R717 \*\*)

For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Pressure | Type                  | Regulation range [bar] | Differential (fixed) $\Delta p$ [bar] | Reset [bar] | Max. working pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.   |                                 |                                                             |                     |
|----------|-----------------------|------------------------|---------------------------------------|-------------|--------------------------------|-----------------------------------------|------------|---------------------------------|-------------------------------------------------------------|---------------------|
|          |                       |                        |                                       |             |                                |                                         | Connection |                                 |                                                             |                     |
|          |                       |                        |                                       |             |                                |                                         | ¼ in flare | Cutting ring $\varnothing 6$ mm | G 3/8 A <sup>1)</sup> + weld nipple $\varnothing 6.5/10$ mm | G ½ A <sup>1)</sup> |
| High     | RT 6W                 | 5 – 25                 | 3.0                                   | Auto        | 34 <sup>3)</sup>               | 38                                      | 017-503166 | –                               | –                                                           | –                   |
|          | RT 6B                 | 10 – 28                | 1.0 <sup>4)</sup>                     | Man. (Max.) | 34 <sup>3)</sup>               | 38                                      | 017-503466 | –                               | –                                                           | –                   |
|          | RT 6S                 | 10 – 28                | 1.0 <sup>4)</sup>                     | Man. (Max.) | 34 <sup>3)</sup>               | 38                                      | 017-507566 | –                               | –                                                           | –                   |
| High     | RT 30AW <sup>2)</sup> | 1 – 10                 | 0.8                                   | Auto        | 22                             | 25                                      | –          | –                               | –                                                           | 017-518766          |
|          | RT 30AB <sup>2)</sup> | 1 – 10                 | 0.6 <sup>4)</sup>                     | Man. (Max.) | 22                             | 25                                      | –          | –                               | –                                                           | 017-518866          |
|          | RT 30AS <sup>2)</sup> | 1 – 10                 | 0.4 <sup>4)</sup>                     | Man. (Max.) | 22                             | 25                                      | –          | –                               | –                                                           | 017-518966          |
| High     | RT 6AW                | 5 – 25                 | 3.0                                   | Auto        | 34 <sup>3)</sup>               | 38                                      | –          | 017-513166                      | 017-503266                                                  | –                   |
|          | RT 6AB                | 10 – 28                | 1.5 <sup>4)</sup>                     | Man. (Max.) | 34 <sup>3)</sup>               | 38                                      | –          | 017-513366                      | 017-503566                                                  | –                   |
|          | RT 6AS                | 10 – 28                | 1.5 <sup>4)</sup>                     | Man. (Max.) | 34 <sup>3)</sup>               | 38                                      | –          | 017-514666                      | 017-507666                                                  | –                   |

\*) Meets the requirements in VBG 20 on safety equipment and excess pressures.

W=Wächter (pressure control).

B= Begrenzer (pressure control with external reset).

S= Sicherheitsdruckbegrenzer (pressure control with internal reset).

A rupture in the bellows system of the unit will cause the compressor to stop.

\*\*) Only for RT 6AW, RT 6AB, RT 6AS, RT 30AW, RT 30AB, RT 30AS

<sup>1)</sup>BSP ext. thread, ISO 228-1.

<sup>2)</sup>Approved for PED also acc. to EN12953-9 and EN12922-11.

<sup>3)</sup>Max. working pressure acc. to PED is limited to 28 bar.

<sup>4)</sup>Max.

Pressure switches with adjustable neutral zone for R22, R134a, R404A, R407A, R407C, R407F, R507A, R717 \*)


For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Pressure | Type    | Regulation range [bar] | Differential $\Delta p$ [bar] | Adjustable neutral zone NZ $\Delta p$ [bar] | Max. working Pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.                        |                                                             |
|----------|---------|------------------------|-------------------------------|---------------------------------------------|--------------------------------|-----------------------------------------|---------------------------------|-------------------------------------------------------------|
|          |         |                        |                               |                                             |                                |                                         | Connection                      |                                                             |
|          |         |                        |                               |                                             |                                |                                         | Cutting ring $\varnothing 6$ mm | G 3/8 A <sup>1)</sup> + weld nipple $\varnothing 6.5/10$ mm |
| Low      | RT 1AL  | -0.8 – 5               | 0.2                           | 0.2 – 0.9                                   | 22                             | 25                                      | 017L001666                      | 017L003366                                                  |
|          | RT 200L | 0.2 – 6                | 0.25                          | 0.25 – 0.7                                  | 22                             | 25                                      | –                               | 017L003266 <sup>2)</sup>                                    |
| High     | RT 5AL  | 4 – 17                 | 0.35                          | 0.35 – 1.4                                  | 22                             | 25                                      | 017L001766 <sup>2)</sup>        | 017L004066                                                  |
|          | RT 117L | 10 – 30                | 1.0                           | 1 – 3.0                                     | 42                             | 47                                      | –                               | 017L004266 <sup>2)</sup>                                    |

<sup>1)</sup>BSP ext. thread, ISO 228-1.

<sup>2)</sup>Without nipple.

<sup>\*)</sup>Only for RT 1AL, RT 5AL.

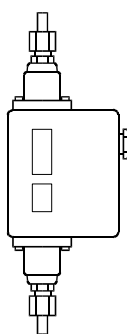

Differential pressure switches for R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R507A, R717

For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Type                  | Regulation range [bar] | Differential $\Delta p$ [bar] | Operating range for LP bellows [bar] | Max. working Pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.                        |                                                             |
|-----------------------|------------------------|-------------------------------|--------------------------------------|--------------------------------|-----------------------------------------|---------------------------------|-------------------------------------------------------------|
|                       |                        |                               |                                      |                                |                                         | Connection                      |                                                             |
|                       |                        |                               |                                      |                                |                                         | Cutting ring $\varnothing 6$ mm | G 3/8 A <sup>1)</sup> + weld nipple $\varnothing 6.5/10$ mm |
| RT 260A               | 0.5 – 4                | 0.3                           | -1 – 18                              | 22                             | 25                                      | 017D001466                      | 017D002166                                                  |
|                       | 0.5 – 4                | 0.3                           | -1 – 18                              | 22                             | 25                                      | –                               | 017D002266 <sup>2)</sup>                                    |
|                       | 0.5 – 6                | 0.5                           | -1 – 36                              | 42                             | 47                                      | 017D001566                      | 017D002366                                                  |
|                       | 1.5 – 11               | 0.5                           | -1 – 31                              | 42                             | 47                                      | 017D001666                      | 017D002466                                                  |
| RT 262A               | 0.1 – 1.5              | 0.1                           | -1 – 9                               | 11                             | 13                                      | 017D001366                      | 017D002566                                                  |
| RT 265A <sup>3)</sup> | 1 – 6                  | 0.5                           | -1 – 36                              | 42                             | 47                                      | –                               | 017D007266                                                  |

<sup>1)</sup>BSP ext thread, ISO 228-1.

<sup>2)</sup>Man. (Max.) reset.

<sup>3)</sup>Filter monitor: Alarm  $\Delta p = 0.8$  bar, cut-out  $\Delta p = 1$  bar (factory setting).






Differential pressure switches with adjustable neutral zone for R22, R134a, R404A, R407A, R407C, R407F, R422B, R422D, R507A, R717

For complete list of approved refrigerants, visit [www.products.danfoss.com](http://www.products.danfoss.com) and search for individual code numbers, where refrigerants are listed as part of technical data.

| Type      | Regulation range [bar] | Differential $\Delta p$ [bar] | Adjustable neutral zone NZ [bar] | Operating range for LP bellows [bar] | Max. working pressure PS [bar] | Max. test pressure P <sub>e</sub> [bar] | Code no.                                                    |
|-----------|------------------------|-------------------------------|----------------------------------|--------------------------------------|--------------------------------|-----------------------------------------|-------------------------------------------------------------|
|           |                        |                               |                                  |                                      |                                |                                         | Connection                                                  |
|           |                        |                               |                                  |                                      |                                |                                         | G 3/8 A <sup>1)</sup> + weld nipple $\varnothing 6.5/10$ mm |
| RT 262 AL | 0.1 – 1.5              | 0.1                           | 0.1 – 0.33                       | -1 – 9                               | 11                             | 13                                      | 017D004366                                                  |

<sup>1)</sup>BSP ext thread, ISO 228-1.

## Accessories code numbers
     
| Contact system versions                  | Contact system                                                                              | Description                                                                                                                                                                                                                     | Contact load                                                                                   | Code no.   |
|------------------------------------------|---------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|------------|
| With automatic reset                     | <br>SPDT   | Single-pole changeover switch with terminal board proof against leakage current. Fitted in all standard versions of type RT. Snap action changeover contacts.                                                                   | Alternating current <sup>2)</sup><br>Ohmic:                                                    | 017-403066 |
| With manual (max.) reset                 | <br>SPDT   | For manual reset of unit after contact changeover on rising pressure. For HP units prepared for reset facility.                                                                                                                 | AC 1 = 10 A, 400 V<br>Inductive:                                                               | 017-404266 |
| With manual (min.) reset                 | <br>SPDT   | For manual reset of unit after contact changeover on falling pressure. For LP-units prepared for reset facility                                                                                                                 | AC 3 = 4 A, 400 V<br>AC 15 = 3 A, 400 V<br>Direct current<br>DC 13 = 12 W, 220 V               | 017-404166 |
| With automatic reset, gold plated        | <br>SPDT  | Single-pole changeover switch with gold plated (oxide-free) contact surfaces. Increases cut-in reliability on alarm and monitoring systems, etc. Snap action changeover contacts. Terminal board proof against leakage current. | Alternating current <sup>2)</sup><br>Ohmic:                                                    | 017-424066 |
|                                          |                                                                                             |                                                                                                                                                                                                                                 | AC 1 = 10 A, 400 V<br>Inductive:                                                               |            |
|                                          |                                                                                             |                                                                                                                                                                                                                                 | AC 3 = 2 A, 400 V<br>AC 15 = 1 A, 400 V<br>Direct current<br>DC 13 = 12 W, 220 V               |            |
| Cuts in two circuits simultaneously      | <br>SPST | Single-pole changeover switch that cuts in two circuits simultaneously on rising pressure. Snap action changeover contacts. Terminal board proof against leakage current.                                                       | Alternating current <sup>2)</sup><br>Ohmic:                                                    | 017-403466 |
|                                          |                                                                                             |                                                                                                                                                                                                                                 | AC 1 = 10 A, 400 V<br>Inductive:                                                               |            |
|                                          |                                                                                             |                                                                                                                                                                                                                                 | AC 3 = 3 A, 400 V<br>AC 15 = 2 A, 400 V<br>Direct current<br>DC 13 = 12 W, 220 V <sup>3)</sup> |            |
| With non snap action changeover contacts | <br>SPDT | Single-pole changeover switch with non-snap action changeover contacts.                                                                                                                                                         | Alternating or direct current<br>25 VA, 24 V                                                   | 017-018166 |

<sup>1)</sup> RT pressure switches meet the conditions of EN 60947-2-9.

<sup>2)</sup> Max. starting current (L.R.) = 7 × AC 3.

<sup>3)</sup> If current is led through the contacts 2 and 4, i.e. terminals 2 and 4 connected but not terminal 1, the max. permissible load is increased by 90 W, 220V.

The switches are shown in the position they assume on falling pressure, i.e. after downward movement of the RT main spindle.

The setting pointer of the switch shows the scale value at which contact changeover occurs on falling pressure.

An exception is RT with switch code no. 017-404266 with Man. reset, where the setting pointer shows the scale value at which contact changeover occurs on rising pressure.

## Functions

### Settings

RT with automatic reset – LP

The knob is used to set the lowest pressure at which the contact system must be activated (cut-out or cut-in).

This value can be read on the main scale of the unit.

The differential roller must be used to set the differential.

Highest activating pressure = lowest activating pressure + set differential.

RT with manual reset – LP

RT pressure switches RT 1 and RT 1A are obtainable in versions with min. reset. When the pressure falls to the setting value the pressure control cuts out.

Manual reset becomes possible when the pressure in the bellows system has risen to a value corresponding to the set value + the differential.

On falling pressure the follower activates the contact system arm and the contact changes over.

The scale is calibrated so that the scale value corresponds to contact changeover on falling pressure.

RT with automatic reset – HP

The knob can be used to set the lowest pressure at which the contact system must be activated (cut-out or cut-in).

This value can be read on the main scale of the unit.

The differential must be set with the differential roller. Highest activating pressure = lowest activating pressure + set differential.

RT with manual reset – HP

Pressure switch RT 5A is obtainable with max. reset. When the pressure has risen to the set value the pressure control cuts out.

Manual reset only becomes possible when the pressure has fallen to a value corresponding to the set pressure minus the differential.

The differential roller is then used as a follower. On rising pressure the differential roller activates the contact system arm and the contact changes over.

The scale is calibrated so that the scale values correspond to contact changeover on rising pressure, which is opposite to RT units with automatic reset.

## Product details

### General data

Table: Technical Data

|                                       |                                                                                |
|---------------------------------------|--------------------------------------------------------------------------------|
| <b>Cable connection</b>               | 2 × Pg 13.5<br>Cable diameter 6 – 14 mm                                        |
| <b>Enclosure</b>                      | IP66 to EN 60529 / IEC 529, except for versions with ext. reset which are IP54 |
| <b>Ambient temperature</b>            | -50 – 70 °C for pressure control housing                                       |
| <b>Contact load</b>                   | See "Ordering, Accessories"                                                    |
| <b>Solid / stranded</b>               | 0.2 – 2.5 mm <sup>2</sup>                                                      |
| <b>Flexible, without ferrules</b>     | 0.2 – 2.5 mm <sup>2</sup>                                                      |
| <b>Flexible, with ferrules</b>        | 0.2 – 1.5 mm <sup>2</sup>                                                      |
| <b>Tightening torque</b>              | max. 1.5 Nm                                                                    |
| <b>Rated impulse voltage</b>          | 4 kV                                                                           |
| <b>Pollution degree</b>               | 3                                                                              |
| <b>Short circuit protection, fuse</b> | 10 Amp                                                                         |
| <b>Insulation</b>                     | 400 V                                                                          |

## Design

### Terminology

#### Floating control

A form of delayed control where the correcting element (e.g. valve, damper, or similar) moves towards one extreme position at a rate independent of the magnitude of the error when the error exceeds a definite positive value, and towards the opposite extreme position when the error exceeds a definite negative value.

#### Hunting

Periodic variations of the controlled variable from the fixed reference.

#### Neutral zone

The interval between the make points of the two contacts.

#### "Snap function"

A certain contact force is maintained until the irrevocable "snap" is initiated. The time during which the contact force approaches zero is thus limited to a very few milliseconds. Therefore contact bounce cannot occur as a result of, for example, slight vibrations, before the cut-out point.

Contact systems with "Snap function" will change over even when micro-welds are created between the contacts during cut-in. A very high force is created during cut-out to separate the contacts. This force immediately shears off all the welds. Thus the cut-out point of the unit remains very accurate and completely independent of the magnitude of the current load.

#### 5. Setting knob

#### 9. Regulation range scale

#### 10. Loop terminal

#### 11. Pg 13.5 screwed cable entry

#### 12. Main spring

#### 14. Terminals

#### 15. Main spindle

#### 16. Switch

#### 17. Guide bush

#### 18. Contact arm

#### 19. Differential setting nut

#### 23. Bellows element


#### 25. Fixing hole

#### 27. Connection

#### 38. Earth terminal

#### 39. Blow-out disc

#### 44. Pressure setting spindle

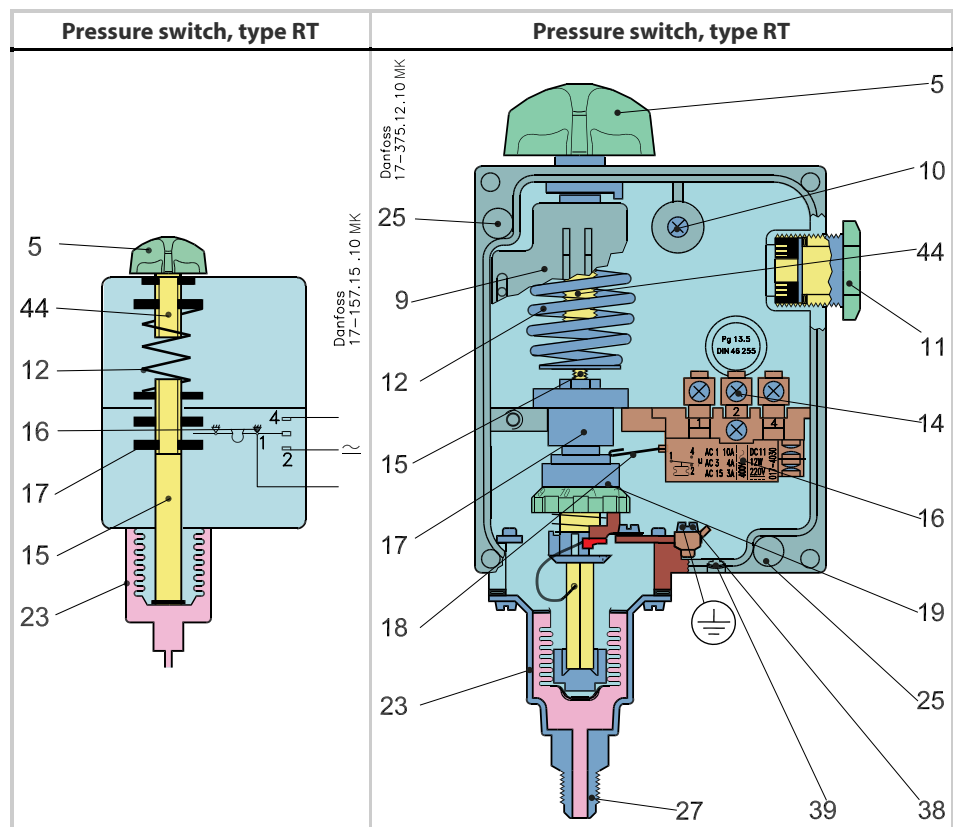

The bellows in the RT pressure switch is connected to the low or high pressure side of the controlled system via the connection.

By turning the setting knob (5) the main spring (12) can be set to balance the pressure in the bellows.

A rise in pressure compresses the bellows and moves the main spindle (15) upwards until spring and bellows pressure are in equilibrium. The main spindle (15) is fitted with a guide bush (17) and a differential pressure setting nut (19) that together transfer the main spindle movement to the switch (16).

The RT 6W, RT 6B, RT 6S, RT 6AW, RT 6AB, RT 6AS, RT 30AW, RT 30AB, RT 30AS, RT 36B, RT 36S are equipped with a double bellows (an outer bellows and a regulating bellows).

These units have been tested and approved by TÜV (Technischer Überwachungs Verein, Germany) according to EN 12263.

General for EN 12263 approved units.

1. The units are equipped with a double bellows system. When pressure in the plant exceeds the set value, the unit will automatically stop the plant. The double bellows system prevents loss of system charge in the

event of bellows rupture.

2. Versions with designation W or AW cut again automatically when the pressure has fallen to the set value minus the differential.
3. Versions with designation B or AB are cut manually with the external reset button. This is possible when the pressure has fallen to the set value minus differential.
4. Versions with designation S or AS can be cut in manually with the internal reset arm when the pressure has fallen to the set value minus differential.

As laid down by EN 12263 requirements, if a rupture occurs in the regulating bellows of the unit, the refrigerating system compressor will be stopped and can only be restarted when the pressure control has been replaced.

A rupture in the outer bellows will cause the cut-out pressure of RT 36 to fall 2.5 bar, and the cut-out pressure of RT 6 and RT 30 to fall 4.5 bar under the set value. This means that the unit cuts out at normal condensing pressure and thus provides a fail-safe function.

All RT pressure switches, including those which are EN 12263 approved, operate independently of changes in the ambient temperature around the control housing. Therefore the set cut-out pressure and differential are held constant provided the permissible ambient temperatures are not exceeded.

#### 5. Setting knob

9. Regulation range scale

11. Pg 13.5 screwed cable

entry 12. Main spring

15. Main spindle

16. Switch

17. Upper guide bush

18. 18a, 18b. Contact arm

20. Lower guide bush

23. Bellows element

25. Fixing hole


27. Connection

38. Earth terminal

39. Blow-out disc


40. Neutral zone setting nut

44. Pressure setting spindle

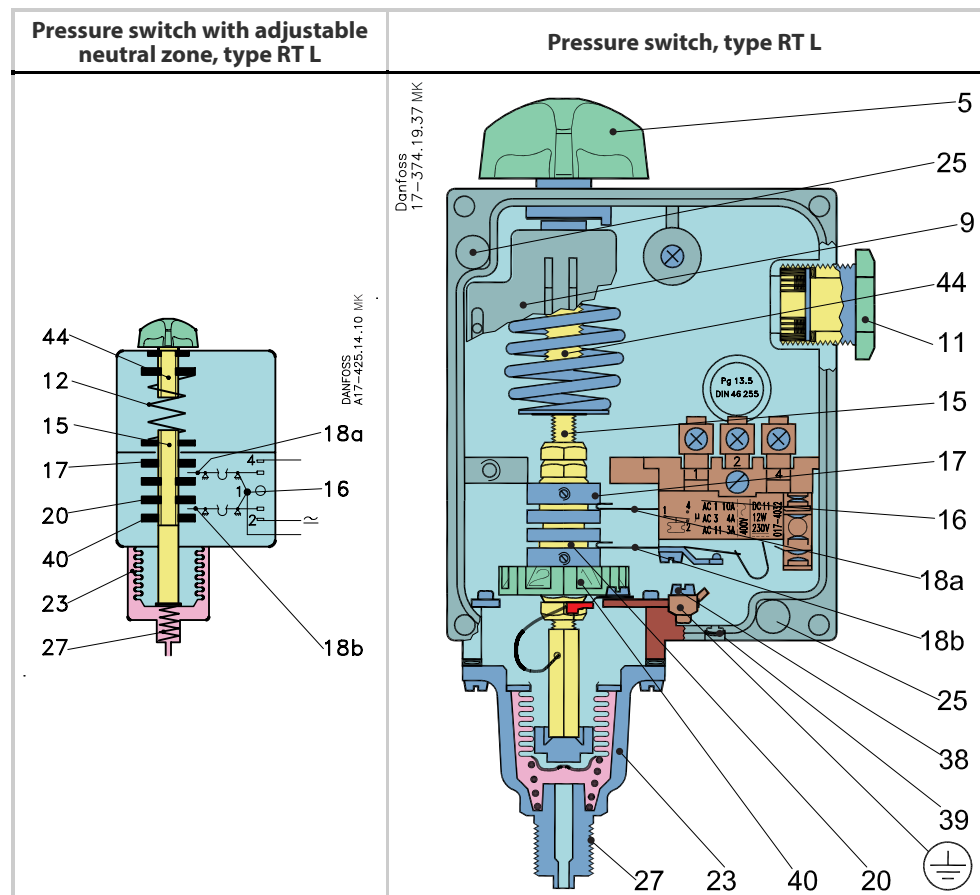


RT L pressure switches are fitted with a switch with an adjustable neutral zone. This enables the units to be used for floating control. The neutral zone switch contact arms (18a) and (18b) are operated by the spindle guide bushes (17) and (20).

The upper guide bush (17) is fixed while the lower guide bush (20) can be moved up or down by the setting nut (40). In this way the neutral zone can be varied between a minimum value (equal to the mechanical differential of the unit) and a maximum value (depending on the type of RT unit).

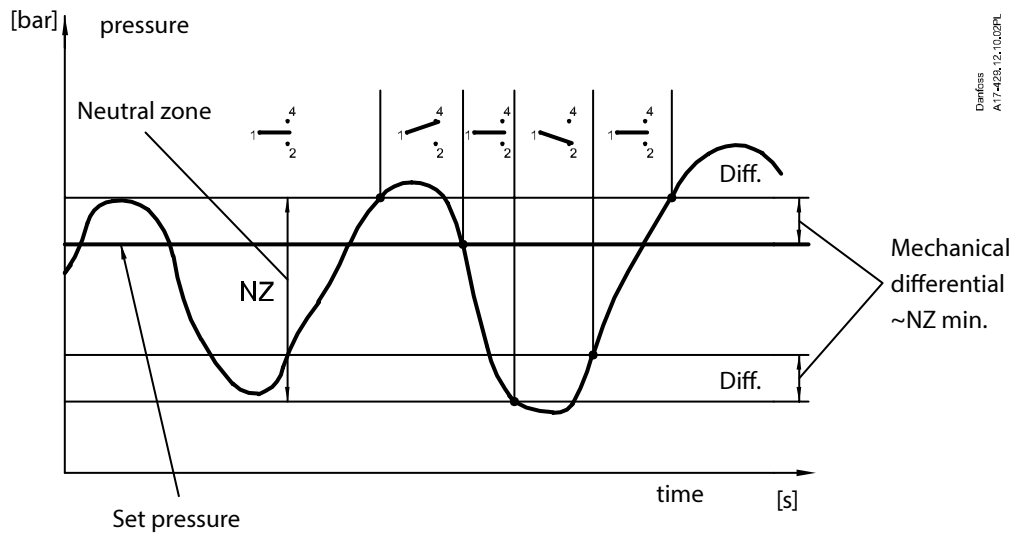

- 3. LP connection
- 4. LP bellows element
- 5. Setting disc
- 9. Regulation range scale
- 10. Coil clamp
- 11. Pg 13.5 screwed cable entry
- 12. Main spring
- 14. Terminals
- 15. Main spindle
- 16. Switch
- 17. Upper guide bush
- 18. Contact arm
- 20. Lower guide bush
- 24. HP bellows element
- 25. Fixing hole
- 34. HP connection
- 38. Earth terminal
- 39. Blow-out disc

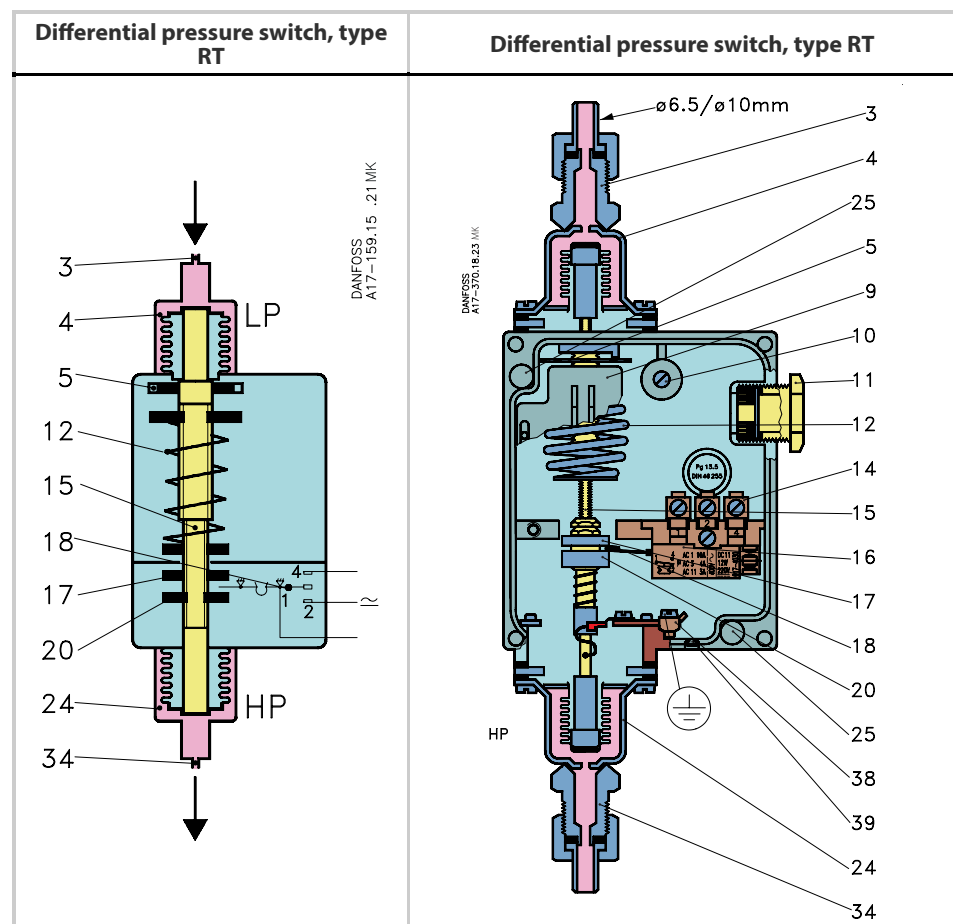



An RT differential pressure switch contains a single-pole changeover switch that makes or breaks depending on the pressure differential between two counteracting bellows elements (LP and HP).


Differential pressure switches are used primarily as protection against too low a differential pressure across liquid circulation pumps. A secondary application is the safeguarding of lubricating oil pressure in refrigeration compressors.

The function of the pressure switch is conditional only on the differential pressure, i.e. the difference in pressure between the two counteracting bellows, whereas it is independent of the absolute pressure on both bellows.





The bellows (4) and (24) are respectively connected to the LP port (lowest pressure) and the HP port (highest pressure).

The main spring (12) can be set for different differential pressures by the setting disc (5). If the differential pressure between highest and lowest pressures falls, the spindle (15) moves downwards and via the upper guide bush (17), actuates the switch contact arm (18). The reverse function occurs if the differential pressure rises.

Dimensions

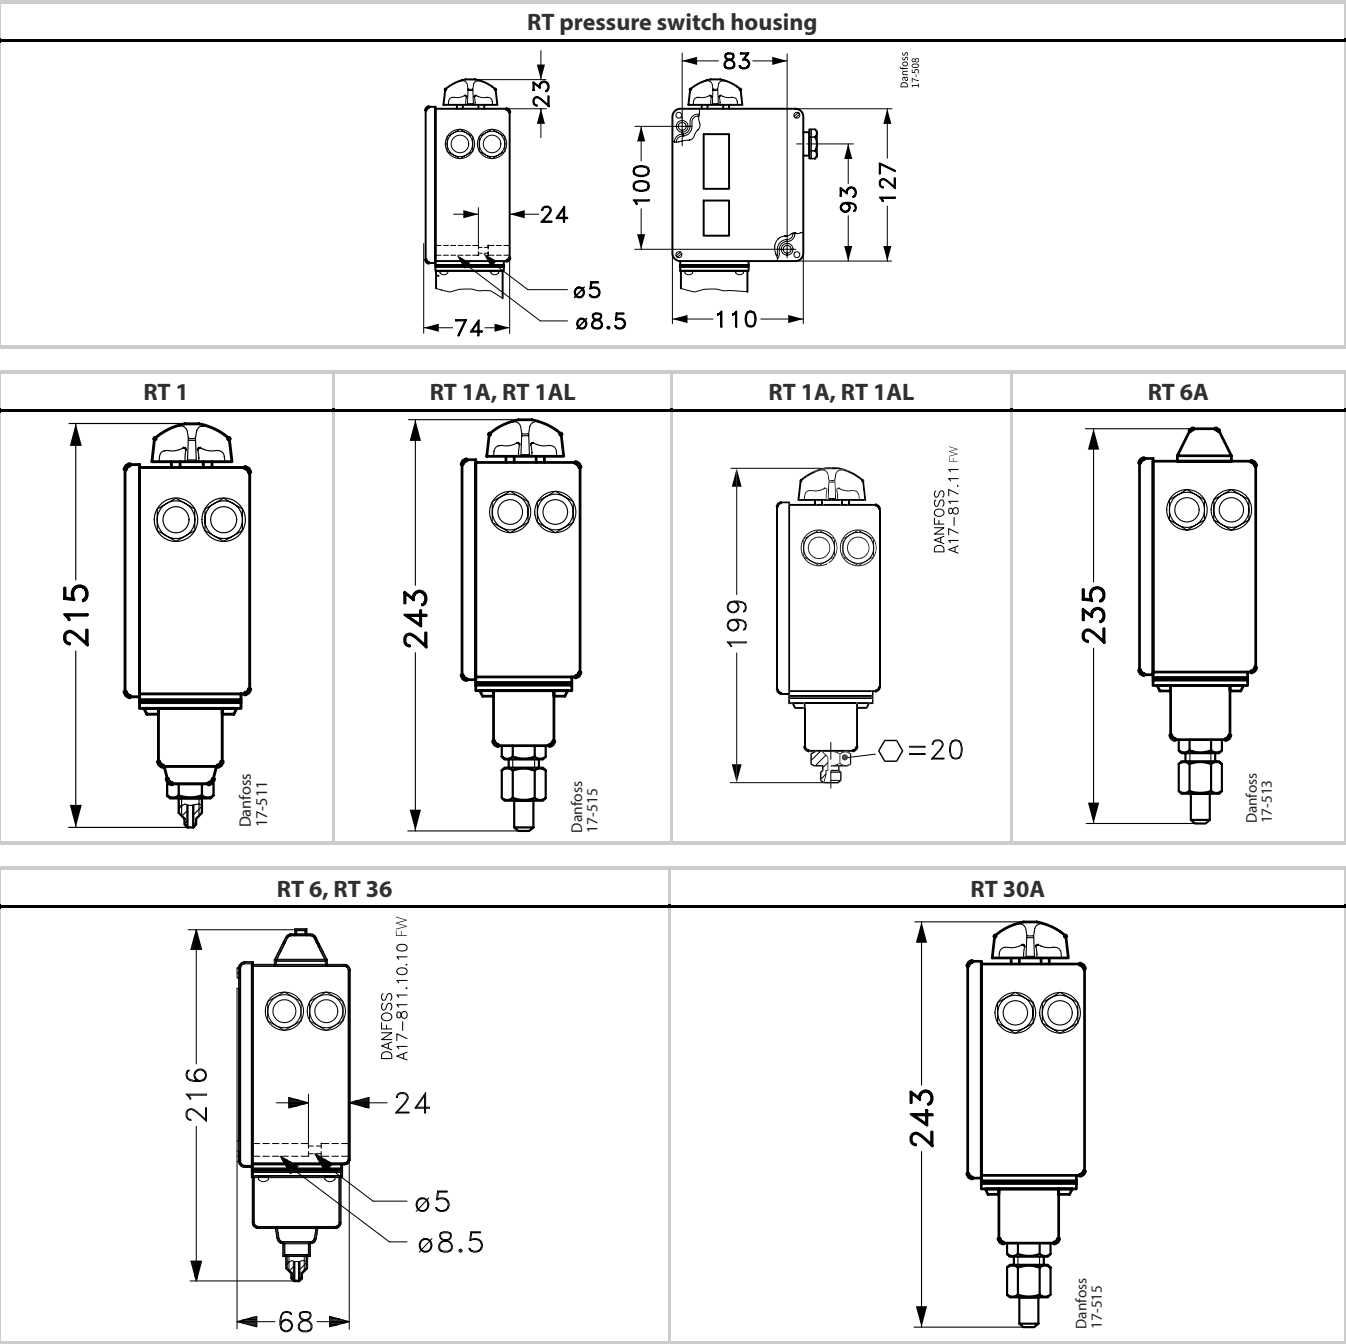

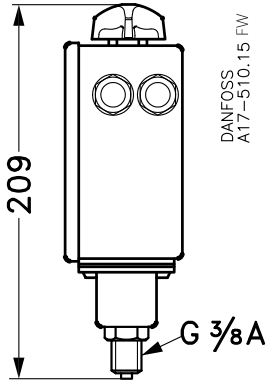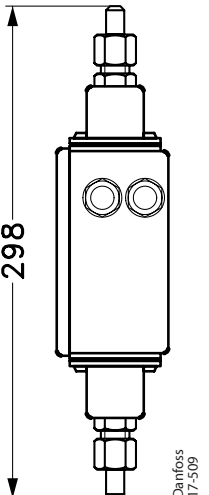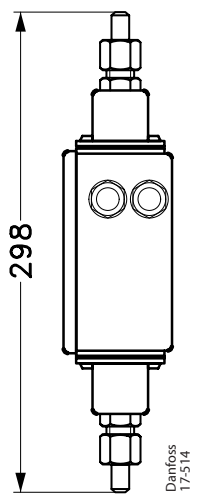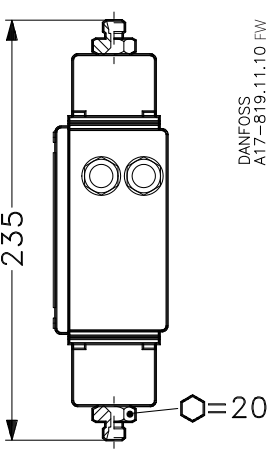

| RT 117, RT 117L, RT 200, RT 200L                                                                                                                                                   | RT 260A                                                                                                                         | RT 262A                                                                                                                          | RT 260A, RT 262A                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div><p>209</p><p>DANFOSS<br/>A17-510.15 FW</p><p>G 3/8 A</p><p>Net weight approx. 1 kg</p></div> | <div><p>298</p><p>Danfoss<br/>17-509</p></div> | <div><p>298</p><p>Danfoss<br/>17-514</p></div> | <div><p>235</p><p>DANFOSS<br/>A17-819.1.1.10 FW</p><p>Hex = 20</p></div> |

## Certificates, declarations and approvals

The list contains all certificates, declarations, and approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list.

When you click on the link you will be directed to the latest version of the 'Declaration of Conformity'. Products developed and sold before this date of issue conform to the directives/standards in force at the time of their sale.

| Approval type                 | Title                                                          | Certification body                             | Approval topic              |
|-------------------------------|----------------------------------------------------------------|------------------------------------------------|-----------------------------|
| CCC Declaration               | <a href="#">Danfoss CCC<br/>2024010305641306</a>               | CCC - China Compulsory Certification           | CCC                         |
| Manufacturer's Declaration    | <a href="#">Danfoss MD 060-9639.AB</a>                         | Danfoss                                        | China RoHS                  |
| EU Declaration                | <a href="#">Danfoss EU 060-9650AF</a>                          | Danfoss                                        | LVD, EU RoHS                |
| Electrical Safety Certificate | <a href="#">EAC KZ 7100841.01.01.01391</a>                     | EAC - Eurasian Customs Union                   | EMC                         |
| Export Control Declaration    | <a href="#">Pressure switches &amp;<br/>Thermostats</a>        | Danfoss                                        |                             |
| UA Declaration                | <a href="#">Danfoss UA 2024-07-25 cooling<br/>sensors</a>      | Danfoss                                        | EMC, LVD                    |
| UA Declaration                | <a href="#">Danfoss UA 2023-01-10<br/>Regulators PL01 PL04</a> | Danfoss                                        | PED, Pressure               |
| Pressure Safety Certificate   | <a href="#">LLC CDC EURO-TYSK<br/>UA.TR.089.1015.05-22</a>     | LLC CDC EURO TYSK - Ukraine                    | Pressure                    |
| Marine Certificate            | <a href="#">KR HMB 17529-AE002</a>                             | KR - Korean Register of Shipping               | Marine                      |
| Quality Assurance Certificate | <a href="#">DEMKO 12 ATEX Q1209493 Rev.<br/>13</a>             | UL Demko - UL International<br>DEMKO A - S     | ATEX, Explosive             |
| CCC Declaration               | <a href="#">Danfoss CCC<br/>2020970305003387</a>               | Danfoss                                        | CCC                         |
| Marine Certificate            | <a href="#">NKK TA24042M</a>                                   | ClassNK - The Japanese Marine Association      | Marine                      |
| Marine Certificate            | <a href="#">BV 03407-J0 BV</a>                                 | BV - Bureau Veritas                            |                             |
| Marine Certificate            | <a href="#">DNV TAA000015G Rev.1</a>                           | DNV GL                                         |                             |
| Pressure Safety Certificate   | <a href="#">TÜV 0879-PESR-B(P)-21484-13-<br/>DE</a>            | TÜV NORD - Technischer ÜberwachungsVerein      | PED, Pressure               |
| Pressure Safety Certificate   | <a href="#">TÜV 01 202 969-B-21-0010</a>                       | TÜV Rheinland - Technischer ÜberwachungsVerein | PED, Pressure               |
| EU Declaration                | <a href="#">Danfoss EU 060-9656.AI</a>                         | Danfoss                                        | PED, LVD, Pressure, EU RoHS |
| Marine Certificate            | <a href="#">DNV TAA000015H Rev. 1</a>                          | DNV GL                                         |                             |
| Quality Assurance Certificate | <a href="#">TÜV 0045 202 9120 Z 00544 25<br/>D 000 00</a>      | TÜV NORD - Technischer ÜberwachungsVerein      | PED, Pressure               |

|                             |                                                       |                                                |                             |
|-----------------------------|-------------------------------------------------------|------------------------------------------------|-----------------------------|
| Pressure Safety Certificate | <a href="#"><u>TÜV 0879-PESR-B(P)-21484-12-DE</u></a> | TÜV NORD - Technischer ÜberwachungsVerein      | PED, Pressure               |
| Pressure Safety Certificate | <a href="#"><u>TÜV 01 202 969 B-21-0013 01</u></a>    | TÜV Rheinland - Technischer ÜberwachungsVerein | PED, Pressure               |
| EU Declaration              | <a href="#"><u>Danfoss EU 060-9653.AL</u></a>         | Danfoss                                        | PED, LVD, Pressure, EU RoHS |

|                                                                           | RT 1 | RT 1A | RT 1AL | RT 5A | RT 6W, RT 6B, RT 6S | RT 6AW, RT 6AB, RT 6AS | RT 30AW, RT 30AB, RT 30AS | RT 36B, RT 36S | RT 117 | RT 117L | RT 200 | RT 200L | RT 260A | RT 262A |
|---------------------------------------------------------------------------|------|-------|--------|-------|---------------------|------------------------|---------------------------|----------------|--------|---------|--------|---------|---------|---------|
| Germanischer Lloyd, GL                                                    | •    |       |        |       | •                   |                        | •                         |                | •      |         | •      |         |         |         |
| Det Norske Veritas, DNV                                                   |      |       |        |       |                     |                        |                           |                | •      |         | •      |         |         |         |
| Bureau Veritas, BV                                                        |      |       |        |       |                     |                        |                           |                | •      |         | •      |         |         |         |
| Registro Italiano Navale, RINA                                            | •    | •     |        |       |                     |                        |                           |                | •      |         | •      |         | •       | •       |
| Russian Maritime Register of Shipping, RMRS                               | •    | •     | •      | •     | •                   | •                      | •                         | •              | •      | •       | •      | •       | •       | •       |
| Nippon Kaiji Kyokai, NKK                                                  | •    | •     |        | •     |                     |                        |                           |                | •      |         | •      |         |         |         |
| Korean Register of Shipping, KRS                                          |      |       |        |       |                     |                        |                           |                | •      |         | •      |         | •       | •       |
| CE marked according to 60947-4, -5                                        | •    | •     | •      | •     | •                   | •                      | •                         | •              | •      | •       | •      | •       | •       | •       |
| CE marked acc. to PED 97/23/EC category IV, safety equipment and EN 12263 |      |       |        |       | •                   | •                      | •                         | •              |        |         |        |         |         |         |
| China Compulsory Certificate, CCC                                         | •    | •     | •      | •     | •                   | •                      | •                         | •              | •      | •       | •      | •       | •       | •       |

## Contact details

### Online support

Danfoss offers a wide range of support along with our products, including digital information, software, mobile apps and expert guidance. See the possibilities below.



#### The Danfoss Design center

Discover the Design Center, our advanced digital platform that streamlines product selection. With integrated tools and enhanced type pages, it's simpler than ever to access product information and documentation, and to select the right products. Check the availability of Danfoss products at partner locations and enjoy seamless transitions from selection to purchase with our basket-to-basket functionality. Whether you're buying from our distributors or directly from the Product Store, the Design Center simplifies your experience. Learn more at: [designcenter.danfoss.com](https://designcenter.danfoss.com).



#### The Danfoss product store

The Danfoss Product Store is a one-stop shop available 24/7 for our customers, no matter where you are in the world or what area of industry you work in. Browse our catalog, check product details and documentation, view your prices and product availability, and quickly finalize your purchase. Start browsing at: [store.danfoss.com](https://store.danfoss.com).



#### Danfoss Partner Portal/Product Data tool

Designed to support you with easy access to product data extracts, essential resources, tools, and information. The Partner Portal provides a centralized hub for product documentation, training materials, marketing assets, and technical support, ensuring you have everything you need to succeed and grow your business with Danfoss. The Partner Portal is available 24/7 at: [partner.danfoss.com](https://partner.danfoss.com) and is ready to support your business.



#### Find technical documentation

Find technical documentation you need to get your project up running. Get direct access to our official collection of data sheets, certificates and declarations, manuals and guides, 3D models and drawings, case stories, brochures, and much more. Start searching now at: [documentation.danfoss.com](https://documentation.danfoss.com).



#### Danfoss Learning

Danfoss Learning is a free online learning platform. It features courses and materials specifically designed to help engineers, installers, service technicians, and wholesalers better understand the products, applications industry topics, and trends that will help you do your job better. Find your local Danfoss website here: [learning.danfoss.com](https://learning.danfoss.com).



#### Get local information and support

Local Danfoss websites are the main sources for help and information about our company and products. Find product availability, get the latest regional news, or connect with a nearby expert - all in your own language. Find your local Danfoss website here: [danfoss.com](https://danfoss.com).

#### Danfoss A/S

Climate Solutions . danfoss.com . +45 7488 2222

---

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues description, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the products. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

---