

T87M2036

Modulating Room Thermostat

EN | User Guide
ES | Guía del Usuario
FR | Guide d'installation
NL | Gebruikershandleiding
DE | Bedienungsanleitung
IT | Guida utente

HU | Használati utasítás
CZ | Uživatelský manual
PL | Instrukcja obsługi
SK | Uživatelská príručka
RO | Ghid utilizare
TR | Kullanma Kılavuzu



T87M2036 Modulating
Room Thermostat

User Guide


EN | Room temperature
ES | Temperatura ambiente
FR | Température ambiante
NL | Ruimtetemperatuur
DE | Raumtemperatur
IT | Temperatura ambiente
HU | Helyiséghőmérséklet
CZ | Pokojová teplota
PL | Temperatura pomieszczenia
SK | Izbová teplota
RO | Temperatura camera
TR | Oda sıcaklığı




EN | Boiler on
ES | Caldera en marcha
FR | Chaudière enclenchée
NL | Ketel aan
DE | Kessel ein
IT | Caldaia accesa
HU | Kazán bekapcsolva
CZ | Zapnutý kotel
PL | Kocioł włączony
SK | Kotel je zapnutý
RO | Cazan pornit
TR | Kazan/kombi çalışıyor




EN | Turn dial one click to inquire about the set temperature
ES | Gire el dial un clic para consultar la temperatura de consigna
FR | Tourner le cadran d'un « clic » pour afficher la consigne
NL | Verdraai de ring één klik om de ingestelde temperatuur uit te lezen
DE | Drehe das Drehrad um einen Schritt um den aktuelle Sollwert abzufragen
IT | Girare la ghiera di una posizione per visualizzare la temperatura impostata
HU | A beállított hőmérsékletérték lekérdezéséhez a kézikereket forgassa el az első kattánásig
CZ | Otočte kolečkem o jeden klik na jakoukoliv stranu a zobrazí se požadovaná teplota
PL | Aby odczytać temperaturę zadaną przestaw pokrętkę o jedną pozycję
SK | Pootočením o jedno kliknutie nastavujete teplotu
RO | Rasuciti rozeta un clic pentru a afla temperatura de referinta
TR | Ayar sıcaklığını görmek için kadranı bir tık çevirin

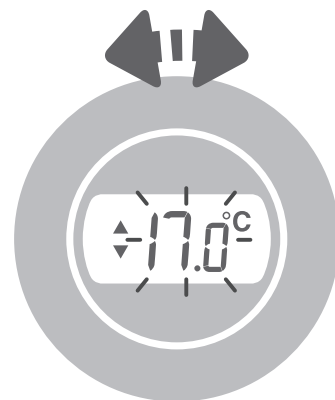

EN | Turn dial to adjust temperature setting
ES | Gire el dial para ajustar la temperatura de consigna
FR | Tourner le cadran pour ajuster la température ambiante souhaitée
NL | Verdraai de ring om de ingestelde temperatuur te wijzigen
DE | Bewege das Drehrad schrittweise um die gewünschte Temperatur zu wählen
IT | Girare la ghiera per impostare la temperatura ambiente
HU | A kívánt hőmérsékletet a kézikerek forgatásával lehet beállítani
CZ | Otočným kolečkem nastavíte požadovanou pokojovou teplotu
PL | Każda pozycja pokrętki odpowiada zmianie temperatury zadanej
SK | Pootočte ovládačom na nastavenie požadovanej teploty
RO | Rasuciti rozeta pentru a ajusta temperatura de referinta
TR | Ayar sıcaklığını değiştirmek için kadranı çevirin

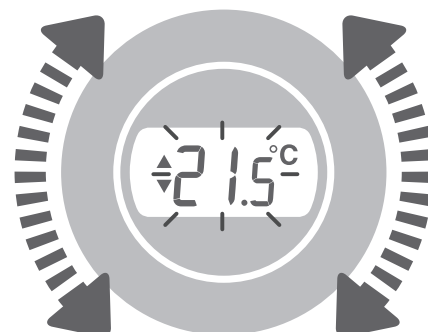

EN | **Faults**
 ES | **Fallos**
 FR | **Défaut**
 NL | **Fouten**
 DE | **Fehler**
 IT | **Errori**
 HU | **Hibajelenségek**
 CZ | **Poruchy**
 PL | **Usterki**
 SK | **Chyby**
 RO | **Defecte**
 TR | **Hatalar**

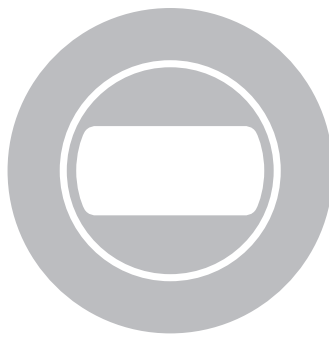


EN | **Check the wiring**
 ES | **Compruebe el conexionado**
 FR | **Vérifiez le câblage**
 NL | **Controleer de bedrading**
 DE | **Überprüfe die Verdrahtung**
 IT | **Controllare i fili di connessione**
 HU | **Ellenőrizze a bekötést**
 CZ | **Zkontrolujte zapojení**
 PL | **Sprawdź połączenia elektryczne**
 SK | **Skontrolujte napojenie**
 RO | **Verificati conectarea cablurilor**
 TR | **Kabloyu kontrol edin**




EN | **Contact your installer**
 ES | **Contacte a su instalador**
 FR | **Contactez votre installateur**
 NL | **Raadpleeg uw installateur**
 DE | **Rufe einen Installateur**
 IT | **Contattare l'installatore o l'assistenza**
 HU | **Keresse az üzembhelyezőt**
 CZ | **Porucha regulátoru, kontaktujte servis**
 PL | **Wezwij instalatora**
 SK | **Kontaktujte vášho servisného technika**
 RO | **Contactati instalatorul dvs.**
 TR | **Honeywell servisine başvurun**



EN | **See the User Guide of your boiler**
 ES | **Vea las Instrucciones de Usuario de su caldera**
 FR | **Voir le guide d'installation de la chaudière**
 NL | **Raadpleeg de handleiding van uw ketel**
 DE | **Siehe in der Bedienungsanleitung des Kessels**
 IT | **Controllare la guida utente della caldaia**
 HU | **Ellenőrizze a kazán használati utasításában leírtakat**
 CZ | **Poruchové hlášení z kotle, podívejte se do manuálu ke kotli**
 PL | **Szczegółowe informacje w instrukcji obsługi kotła**
 SK | **Preštudujte si užívateľ'skú príručku vášho kotla**
 RO | **Vezi ghidul de utilizare al cazanului**
 TR | **Kazan/kombinizin kullanma kılavuzuna bakın**

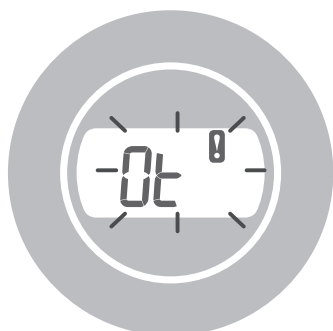

EN | **OpenTherm communication fault**
 ES | **OpenTherm fallo de comunicación**
 FR | **Défaut de communication OpenTherm**
 NL | **OpenTherm communicatie fout**
 DE | **OpenTherm Kommunikationsfehler**
 IT | **Errore di comunicazione OpenTherm**
 HU | **OpenTherm kommunikációs hiba**
 CZ | **OpenTherm komunikací porucha**
 PL | **Błąd komunikacji OpenTherm**
 SK | **OpenTherm komunikáciou porucha**
 RO | **Vina comunicare OpenTherm**
 TR | **OpenTherm iletişim hatası**

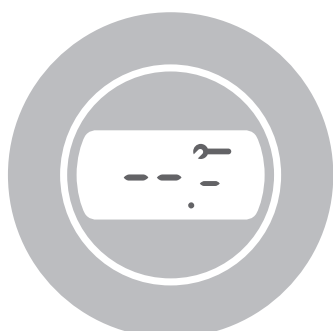

EN | **Defective thermostat**
 ES | **termostato defectuoso**
 FR | **Thermostat défectueux**
 NL | **Defecte thermostaat**
 DE | **Defekter Thermostat**
 IT | **termostato difettoso**
 HU | **hibás termosztát**
 CZ | **defective thermostat**
 PL | **Uszkodzony termostat**
 SK | **chybný termostat**
 RO | **termostat defect**
 TR | **arızalı termostat**



Pittway Sarl, Z.A. La Pièce 4,
 1180 Rolle, Switzerland

www.resideo.com Country of origin : UK

© 2020 Resideo Technologies, Inc. All rights reserved.
 The Honeywell Home trademark is used under license from Honeywell International Inc.
 This product is manufactured by Resideo Technologies, Inc. and its affiliates.

Printed in EU.