WLS70 Industrial LED Strip Light (AC) Product Manual

Original Instructions
p/n: 220753 Rev. D
07-May-26
© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com

Contents

Chapter 1 Features 3
Models 4

Chapter 2 Install the WLS70 Industrial LED Strip Light 5
Wiring 6

Chapter 3 Specifications 7
FCC Part 15 Class B for Unintentional Radiators 8
Industry Canada ICES-003(B) 8
Dimensions 8
Optical Data 9

Chapter 4 Accessories 11
Brackets 11
Cordsets 12

Chapter 5 Product Support and Maintenance 13
Clean with Mild Detergent and Warm Water 13
Repairs and Translations (No Field-Replaceable Parts) 13
Contact Us 15
Banner Engineering Corp Limited Warranty 16
Mexican Importer 16

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Chapter Contents

Models 4

Chapter 1 Features

Banner's WLS70 is a very bright LED luminaire that features an even light output and is designed for a wide variety of environments and applications, including but not limited to machine lighting, automation systems, industrial, wet and harsh environments, railcars, inspection, dairy/poultry production, agriculture, parking garages, and other indoor and outdoor spaces.

- Increase worker productivity and ergonomics with bright, high-quality, uniform light
- Exceptionally energy efficient for overall cost savings
- High efficacy models up to 143 lumens/watt
- Sturdy aluminum housing encased in a shatterproof, UV-stabilized, polycarbonate shell, making it ideal for harsh indoor and outdoor applications
- Rugged, waterproof and dustproof IP65 rated housing for use in challenging environments
- Available in lengths 300 mm, 600 mm, 900 mm, or 1200 mm
- Daisy chain option available to power to multiple lights and control intensity simultaneously via 0 V DC to 10 V DC



These AC quick-disconnect models can be used as continuous run models that can be cascaded or "daisy-chained" together for a continuous length of lighting using a double-ended accessory cordset (see "Cordsets" on page 12). WLS70 models come with a standard one-year warranty. To view or download the latest technical information about this product, including specifications, dimensions, accessories, and wiring, go to www.bannerengineering.com.

IMPORTANT: Read the following instructions before operating the light. Please download the complete WLS70 Industrial LED Strip Light (AC) technical documentation, available in multiple languages, from www.bannerengineering.com for details on the proper use, applications, Warnings, and installation instructions of this device.

IMPORTANT: Lea el siguiente instructivo antes de operar el luminario. Por favor descargue desde www.bannerengineering.com toda la documentación técnica de los WLS70 Industrial LED Strip Light (AC), disponibles en múltiples idiomas, para detalles del uso adecuado, aplicaciones, advertencias, y las instrucciones de instalación de estos dispositivos.

IMPORTANT: Lisez les instructions suivantes avant d'utiliser le luminaire. Veuillez télécharger la documentation technique complète des WLS70 Industrial LED Strip Light (AC) sur notre site www.bannerengineering.com pour les détails sur leur utilisation correcte, les applications, les notes de sécurité et les instructions de montage.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Models

Family	Voltage	Cascade[1]	Color	Lighted Length (mm)	Window	Control	Connection[2]
WLS70	**Z**	**X**	**W**	**600**	**D**	**A**	**QM**
	Z = AC	X = Non-cascadable C = Cascadable	W = Daylight white	300 = 300 mm 600 = 600 mm 900 = 900 mm 1200 = 1200 mm	D = Diffused window	A = 0 V DC to 10 V DC analog dimming	Blank = 2 m (6.5 ft) unterminated 5-wire PVC-jacketed cable QM = Integral 5-pin 7/8 in-16UNF (Mini) male quick-disconnect connector

The following model is no longer available for order but is still covered by the information in this document: WLS70ZCW300DAQM.

[1] Cascadable models are only available with a QM connection.
[2] Models with a quick-disconnect connector require a mating cordset. See "Accessories" on page 11.


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents


Wiring 6

Chapter 2 Install the WLS70 Industrial LED Strip Light

Attaching the Clamp Brackets (Step 3)

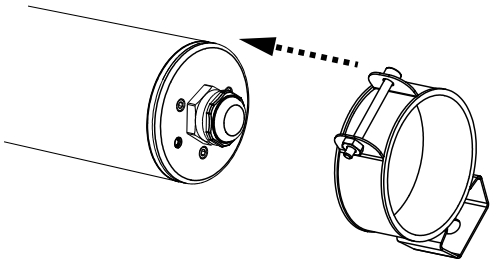

Verifying the Cascade Cover is Attached (Step 10)

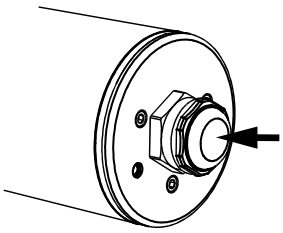

1. Turn off the power at the fuse or circuit breaker box.
2. Remove the light from the packaging and inspect it for damage before installing it.
3. Attach the included LMBWLS70T clamp brackets to the light. Slide on the gasket if desired.
   Refer to the instruction manual for a complete list of compatible brackets.
4. Select a suitable horizontal or vertical mounting location.
5. Place the light in the mounting location and mark the positions of the bracket mounting holes.
   The optional LMBWLS70HK bracket can be used to hang the light in conjunction with the LMBWLS70T (see "Accessories" on page 11).
6. Drill the holes and use appropriate screws to secure the bracket to the mounting location.
7. Clamp the light onto the brackets.
8. When daisy-chaining multiple lights, follow steps 1 through 5 to mount additional lights. See the application note in "Specifications" on page 7 for the maximum allowed lights daisy-chained together and maximum allowed cable run when choosing mounting locations.
9. Connect the daisy-chained units using cascade cordsets (see "Accessories" on page 11).
10. Verify the supplied cascade cover is on the output connector of the last light in the chain.
11. Attach cables (cabled model) or cordsets (quick-disconnect model) per the wiring diagram. Terminate wire as appropriate per application.




Installation is complete. Turn on the electricity at the fuse or circuit breaker box.

WARNING:

- **Risk of electric shock**
- Failure to follow these instructions could result in serious injury or death.
- Disconnect or turn off power before installing, removing, or servicing the device.
- Install and connect the device in accordance with the National Electrical Code (NEC) and any applicable local code requirements and supply the device with an appropriate fuse box or circuit breaker (see *Specifications*).

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Wiring

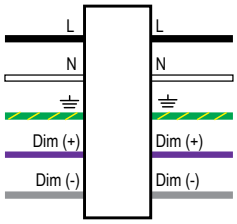Diagram	Wire	Connection	Pinout (Male)	Pinout (Female)
	L - Black	Line/Hot		
	N - White	Neutral		
	- Green/Yellow	Earth ground		
	Dim (+) - Purple	0 V DC to 10 V DC analog dimming		
	Dim (-) - Gray	Return analog dimming		

1 = Purple
2 = White
3 = Yellow/Green
4 = Black
5 = Gray

1 = Purple
2 = White
3 = Yellow/Green
4 = Black
5 = Gray

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

FCC Part 15 Class B for Unintentional Radiators 8
Industry Canada ICES-003(B) 8
Dimensions 8
Optical Data 9

Chapter 3 Specifications

Supply Voltage

Nominal voltage: 120 V AC to 277 V AC, 60 Hz in North America

Nominal voltage: 100 V AC to 277 V AC, 50/60 Hz outside North America

Power factor: > 0.95 at 120 V AC and > 0.90 at 277 V AC

Total harmonic distortion (THD): < 20%

See electrical characteristics on product label

Supply Current

Lighted Length (mm)	Max. Current Draw (A) at 100 V AC	Typical Current Draw (A)		
		120 V AC	230 V AC	277 V AC
300	0.12	0.08	0.04	0.04
600	0.22	0.165	0.08	0.07
900	0.32	0.24	0.13	0.11
1200	0.42	0.315	0.16	0.14

Dimming

Compatible with 0 V DC to 10 V DC analog LED dimming, dimmable to 5% intensity

Dimming current: <1.0 mA

Supply Protection Circuitry

Protected against transient voltages

Construction

Clear anodized aluminum housing; polycarbonate outer housing

Mounting

Several optional mounting brackets are available (see Accessories)

Connections

Integral 5-pin 7/8 in-16UNF (Mini) male quick-disconnect connector (8A / 300V / 2.5kV / 2), (5-pin connecting cordset required); or 2 m (6.5 ft) unterminated 5-wire STOOW UL/HAR PVC cable

See "Accessories" on page 11

Environmental Rating

IP65

LED Lifetime

When operating within specifications, output will decrease less than 30% after 50,000 hours.

Application Notes

When connecting continuous run/cascadable lights in series, it is important not to exceed the maximum current limitations of 8A. For example: the typical current draw of a 1200 mm fixture at 120 V is 0.315A. 8A/0.315A yields a maximum of 25 fixtures cascaded together.

Two or more lights installed in parallel must maintain a 150 mm (6 inch) spacing to maintain a 50 °C operating temperature.

Certifications and Approvals

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

UL/cULus E338626

Operating Temperature

Surface Mount Installation: –40 °C to +50 °C (–40 °F to +122 °F)

85% at +50 °C maximum relative humidity (non-condensing)

Storage Temperature

–40 °C to +70 °C (–40 °F to +158 °F)

Vibration and Mechanical Shock

Vibration: 10 Hz to 55 Hz, 0.5 mm peak-to-peak amplitude per IEC 60068-2-6 (5 minute sweep, 30 minute dwell)

Shock: 15G 11 ms duration, half sine wave per IEC 60068-2-27

Impact: IK10 (IEC 60068-2-75)

Light Characteristics

Daylight White Efficacy: up to 143 lumens/watt typical at 120 V AC at 25 °C (77 °F)

CRI: 82, typical

Model	Color	Color Temperature (CCT)	Lumens (Typical at 25 °C)	Watts at 120 V AC	Luminous Efficacy (lm/w)
300	Daylight White	5000 K (±300 K)	1350	9.6	141
600	Daylight White	5000 K (±300 K)	2700	19.8	136
900	Daylight White	5000 K (±300 K)	4050	28.8	141
1200	Daylight White	5000 K (±300 K)	5400	37.8	143

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

FCC Part 15 Class B for Unintentional Radiators

(Part 15.105(b)) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

(Part 15.21) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


Industry Canada ICES-003(B)

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme NMB-3(B). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

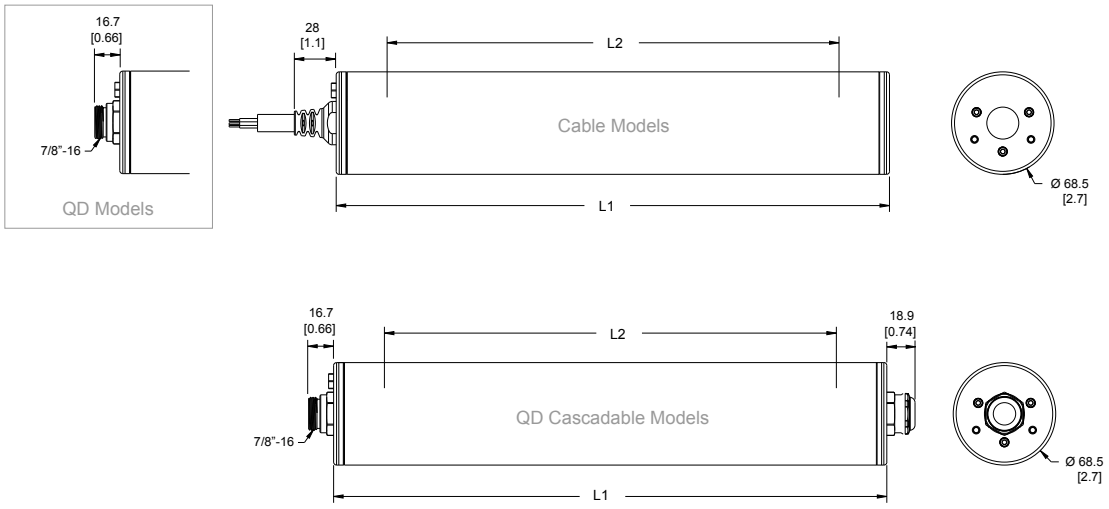


Model	Housing Length (L1)	Lighted Length (L2)
WLS70..300..	369.8	302
WLS70..600..	667.6	600
WLS70..900..	965.3	898
WLS70..1200..	1263	1196

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


Optical Data

300 mm Model


Polar Candela Distribution

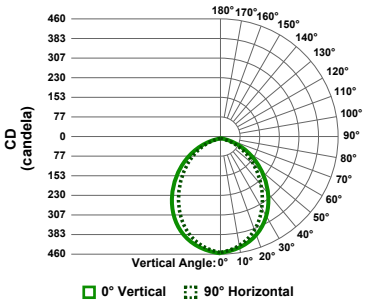

Isolux Pattern

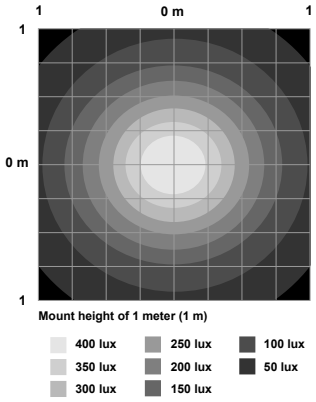


Illuminance at a Distance

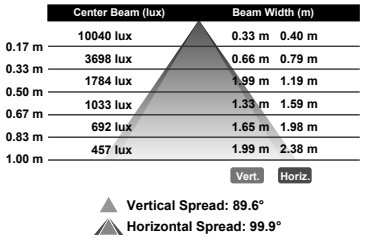


600 mm Model


Polar Candela Distribution

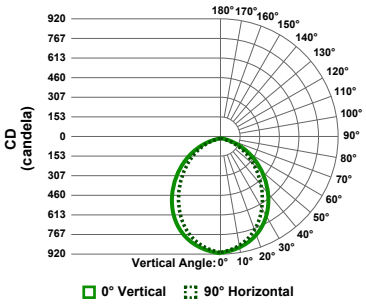

Isolux Pattern

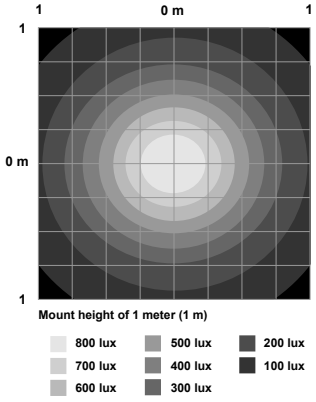


Illuminance at a Distance

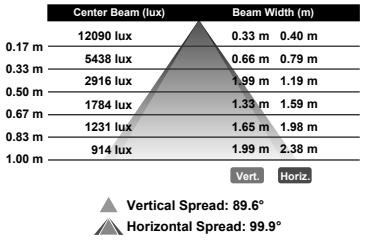


900 mm Model


Polar Candela Distribution

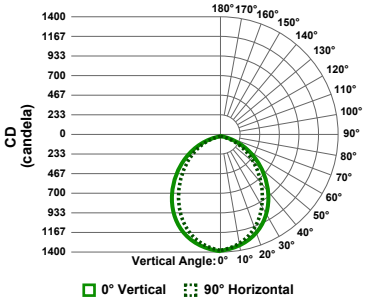

Isolux Pattern

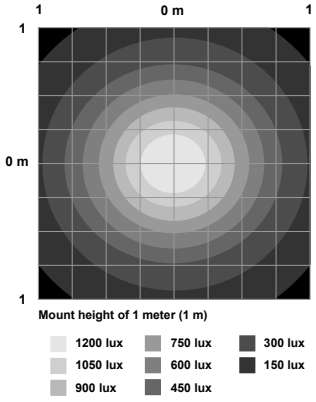


Illuminance at a Distance

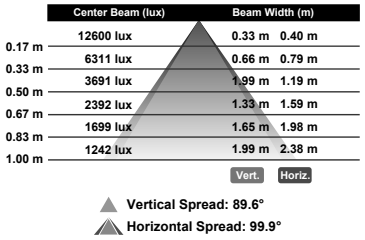


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

1200 mm Model


Polar Candela Distribution

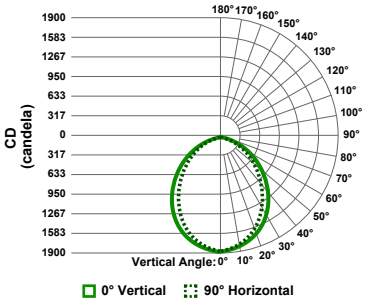

Isolux Pattern

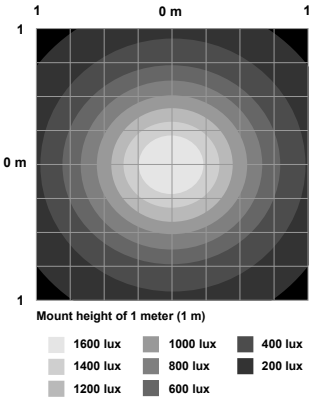

Illuminance at a Distance

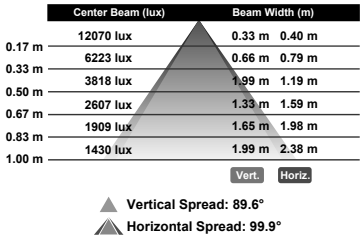

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Brackets 11
Cordsets 12


Chapter 4 Accessories

Brackets

All measurements are listed in millimeters, unless noted otherwise. The measurements provided are subject to change.

LMBWLS70T


- Stainless steel
- Includes two clamp brackets for hanging or surface mount, two anti-rotation gaskets, and stainless steel hardware for securing the bracket to the light
- For use with M8 or 5/16" mounting hardware
- CAD Files: DXF, PDF, IGS, STP

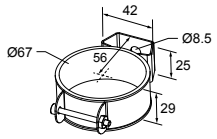

NOTE: The LMBWLS70T is supplied with the light.


LMBWLS70HK

- Hanging bracket kit allows for suspended installation
- Includes two hanging bracket assemblies
- For use with bracket LMBWLS70T
- CAD Files: DXF, PDF, IGS, STP

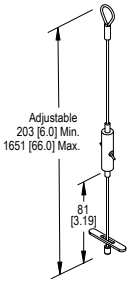


LMBWLS70H

- Stainless steel
- Includes two clamp brackets for hanging, two anti-rotation gaskets, and stainless steel hardware for securing the bracket to the light
- For use with M6 or ¼ in mounting hardware

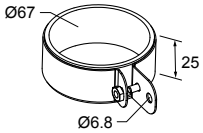

LMBWLS70HHK


- Hanging bracket kit allows for suspended installation
- Includes two hanging bracket assemblies
- For use with bracket LMBWLS70H
- CAD Files: DXF, PDF, IGS, STP

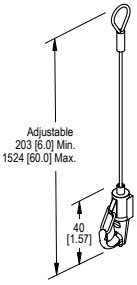

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


LMBWLS70

- Stainless steel
- Includes two double hole clamp brackets for surface mount, two anti-rotation gaskets, and stainless steel hardware for securing the bracket to the light
- For use with M8 or 5/16" mounting hardware
- CAD Files: DXF, PDF, IGS, STP


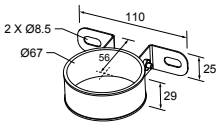


ACC-CAP-MINI-10



- 10 Caps
- Seal and protect exposed, unterminated 7/8-inch quick-disconnect connectors




Cordsets

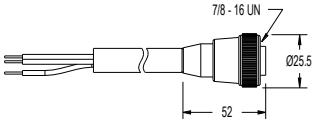5-Pin Single-Ended Mini Female Cordsets				
Model	**Length**	**Style**	**Dimensions**	**Pinout (Female)**
MBCCL-506	2 m (6.56 ft)	Straight		
MBCCL-515	5 m (16.4 ft)			
MBCCL-530	9 m (29.5 ft)			

1 = Purple
2 = White
3 = Yellow/Green
4 = Black
5 = Gray

5-Pin Double-Ended Mini Female to Mini Male Cordsets				
Model	**Length**	**Style**	**Pinout (Male)**	**Pinout (Female)**
MBCCL-503SS	1 m (3.28 ft)	Female Straight/Male Straight		
MBCCL-506SS	2 m (6.56 ft)			
MBCCL-512SS	4 m (13.1 ft)			
MBCCL-520SS	6 m (19.7 ft)			

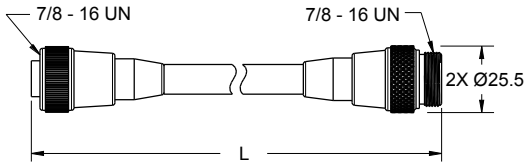

1 = Purple
2 = White
3 = Yellow/Green
4 = Black
5 = Gray

1 = Purple
2 = White
3 = Yellow/Green
4 = Black
5 = Gray

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter Contents

Clean with Mild Detergent and Warm Water 13
Repairs and Translations (No Field-Replaceable Parts) 13
Contact Us 15
Banner Engineering Corp Limited Warranty 16

Chapter 5 Product Support and Maintenance

Clean with Mild Detergent and Warm Water

Wipe down the device with a soft cloth dampened with a mild detergent and warm water solution. Do not use any other chemicals for cleaning.

Repairs and Translations (No Field-Replaceable Parts)

English

Contact Banner Engineering for troubleshooting of this device. **Do not attempt any repairs to this Banner device; it contains no field-replaceable parts or components.** If the device, device part, or device component is determined to be defective by a Banner Applications Engineer, they will advise you of Banner's RMA (Return Merchandise Authorization) procedure.

```
IMPORTANT: If instructed to return the device, pack it with care. Damage that occurs in return
shipping is not covered by warranty.
```

Obtain assistance with product repairs by contacting your local Banner Engineering Corp distributor or by calling Banner directly at (763) 544-3164. Access literature translated into your native language on the Banner website at www.bannerengineering.com or contact Banner directly at (763) 544-3164.

Deutsch

Wenden Sie sich zur Fehlerbehebung dieses Geräts an Banner Engineering. **Versuchen Sie nicht, Reparaturen an diesem Banner-Gerät vorzunehmen. Das Gerät enthält keine am Einsatzort auszuwechselnden Teile oder Komponenten.** Wenn ein Banner-Anwendungstechniker zu dem Schluss kommt, dass dieses Gerät, ein Teil oder eine Komponente davon defekt ist, erhalten Sie von dem Techniker Erläuterungen zu Banners RMA-Verfahren (Return Merchandise Authorization) für die Warenrückgabe.

```
WICHTIG: Wenn Sie der Techniker anweist, das Gerät zurückzusenden, verpacken Sie es bitte
sorgfältig. Transportschäden bei der Rücksendung werden von der Garantie nicht abgedeckt.
```

Unterstützung bei Produktreparaturen erhalten Sie von Ihrem örtlichen Banner Engineering Corp Händler oder direkt von Banner unter Tel. (763) 544-3164. Die in Ihre Muttersprache übersetzte Literatur finden Sie auf der Banner-Website unter www.bannerengineering.com oder kontaktieren Sie Banner direkt unter Tel. (763) 544-3164.

Français

Pour plus d'informations sur le dépannage du produit, contactez Banner Engineering. **Ne tentez pas de réparer ce dispositif Banner. Il ne contient aucun composant ou pièce qui puisse être remplacé sur place.** Si un ingénieur de Banner conclut que le dispositif ou l'une de ses pièces ou composants est défectueux, il vous informera de la procédure à suivre pour le retour des produits (RMA).

```
Important : Si vous devez retourner le dispositif, emballez-le avec soin. Les dégâts
occasionnés pendant le transport de retour ne sont pas couverts par la garantie.
```

Pour vous aider lors de la réparation de produits, contactez votre distributeur Banner local our appelez directement Banner au (763) 544-3164. La documentation traduite dans votre langue est disponible sur le site internet de Banner www.bannerengineering.com ou contactez directement Banner au (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Italiano

Per le procedure di individuazione e riparazione dei guasti di questo dispositivo, contattare Banner Engineering. **Non tentare di riparare questo dispositivo Banner, in quanto non contiene parti o componenti sostituibili dall'utente.** Se il dispositivo, una parte del dispositivo o un componente del dispositivo viene riscontrato difettoso da un tecnico Banner, il nostro personale vi comunicherà la procedura da seguire per ottenere l'autorizzazione al reso.

Importante: Se si ricevono istruzioni di rispedire il dispositivo al produttore, imballarlo con cura. I danni dovuti al trasporto non sono coperti dalla garanzia.

Per assistenza nelle riparazioni dei prodotti, contattare il distributore locale Banner Engineering Corp o contattare direttamente Banner al numero (763) 544-3164. È possibile accedere alla documentazione tradotta nella propria lingua madre sul sito Web Banner all'indirizzo www.bannerengineering.com o contattare direttamente Banner al numero (763) 544-3164.

Español

Comuníquese con Banner Engineering para solucionar de problemas de este dispositivo. **No intente ninguna reparación a este dispositivo de Banner, contiene piezas o componente que no se pueden cambiar en terreno.** Si algún ingeniero de aplicaciones de Banner determina que el dispositivo, alguna de las piezas o alguno de los componentes del dispositivo está defectuoso, le informará el procedimiento de autorización de devolución de mercancía (RMA, por sus siglas en inglés) de Banner.

Importante: Si se le solicita devolver el dispositivo, empáquelo con cuidado. Puede haber daños durante el envío de devolución que no estén cubiertos por la garantía.

Para reparaciones de productos, por favor contacte a su distribuidor local de Banner Engineering o llame a Banner directamente al 00 1 (763) 544-3164. Vea la literatura traducida en su idioma en el sitio web Banner en www.bannerengineering.com o comuníquese con Banner directamente al 00 1 (763) 544-3164.

中国人

如需对本装置进行故障排查，请联系邦纳。**请勿尝试自行维修该邦纳装置；本装置不包含任何可在现场更换的部件或组件。** 若经邦纳应用工程师确认设备、设备部件或组件存在缺陷，他们将告知您邦纳退货授权 (RMA) 流程。

重要注意事项： 如被要求退回装置，请妥善包装后寄回。退货运输过程中发生的损坏不在保修范围内。

请联系当地的 Banner Engineering Corp 经销商或直接致电 Banner +1 (763) 544-3164，以获得产品维修帮助。请访问邦纳网站 www.bannerengineering.com 或直接拨打 +1 (763) 544-3164 联系邦纳，获取翻译成您母语的资料。

한국인

이 장치의 문제를 해결하려면 Banner Engineering에 문의하십시오. **이 Banner 장치에는 현장에서 교체할 수 있는 부품 또는 구성품이 없으므로 수리를 시도하지 마십시오.** Banner 애플리케이션 엔지니어가 장치, 장치 부품 또는 장치 구성품에 결함이 있는 것으로 판정하면, Banner의 RMA(제품 반송 승인)절차에 대해 안내해 드립니다.

중요: 제품을 반송하도록 안내 받으셨다면 잘 포장해주십시오. 반송 도중에 발생한 손상은 보증 서비스가 적용되지 않습니다.

제품 수리에 대한 지원은 지역 Banner Engineering Corp 대리점에 문의하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다. 사용자의 모국어로 번역된 자료는 Banner 웹사이트 www.bannerengineering.com에서 액세스하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다.

日本語

この装置のトラブルシューティングについては、バナーエンジニアリングにお問い合わせください。**このバナー装置には、現場では交換できない部品またはコンポーネントが含まれているため、修理を試みてはいけません。** バナーのアプリケーションエンジニアが装置、装置の部品、または装置のコンポーネントに欠陥があると判断した場合、バナーのRMA（返品承認）手続きについてお知らせします。

重要 ： 返品を指示された場合は、装置を丁寧に梱包してください。返品時に発生した破損は保証の対象外となります。

製品の修理については、最寄りのBanner Engineering Corp代理店にお問い合わせいただくか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。バナーのウェブサイト（www.bannerengineering.com）でお客様の言語に翻訳された資料にアクセスするか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

čeština

Pro řešení problémů se zařízením kontaktujte společnost Banner Engineering. **Neprovádějte žádné opravy zařízení Banner. Neobsahují žádné komponenty nebo části, které by byly vyměnitelné.** Pokud je zařízení, jeho část nebo díl označen technikem společnosti Banner jako poškozený, bude Vám doporučeno vyplnit reklamační RMA protokol.

```
Důležité: Pokud byl vydán požadavek na vrácení zařízení, pečlivě ho zabalte. Poškození vzniklé
při dopravě není považováno za záruční opravu.
```

Pokud produkt potřebuje opravu, vyžádejte si pomoc od místního distributora společnosti Banner Engineering Corp nebo přímo na telefonním čísle (763) 544-3164. Dokumentaci přeloženou do vašeho jazyka si vyhledejte na webových stránkách společnosti Banner na adrese www.bannerengineering.com nebo se obraťte přímo na společnost Banner na telefonním čísle (763) 544-3164.

Polski

W celu rozwiązania problemów z urządzeniem należy skontaktować się z działem technicznym firmy Banner Engineering. **Pod żadnym pozorem nie próbuj naprawiać tego urządzenia firmy Banner; nie zawiera ono części ani elementów, które można wymieniać samodzielnie.** Jeśli urządzenie, jego część lub element zostaną uznane za wadliwe przez inżyniera technicznego Banner, poinformuje on użytkownika o firmowej procedurze zwrotu towaru (RMA) firmy Banner.

```
Ważne: Jeśli urządzenie ma zostać zwrócone, należy je starannie zapakować. Uszkodzenia powstałe
podczas odsyłki nie są objęte gwarancją.
```

Aby uzyskać pomoc w zakresie naprawy produktu, należy skontaktować się z lokalnym dystrybutorem Banner Engineering Corp lub zadzwonić bezpośrednio do firmy Banner pod numer (763) 544-3164. Dostęp do literatury przetłumaczonej na swój język ojczysty można uzyskać na stronie internetowej firmy Banner pod adresem www.bannerengineering.com lub kontaktując się bezpośrednio z firmą Banner pod numerem (763) 544-3164.

Português

Entre em contato com a Engenharia da Banner para a solução de problemas deste dispositivo. **Não tente fazer nenhum reparo neste dispositivo Banner; ele não contém peças ou componentes substituíveis em campo.** Se um técnico de aplicações da Banner determinar que o dispositivo, peça ou componente do dispositivo está com defeito, ele o informará sobre o procedimento de RMA (Autorização de Devolução de Mercadoria) da Banner.

```
Importante: Se for instruído a devolver o dispositivo, embale-o com cuidado. Os danos ocorridos
no transporte de devolução não são cobertos pela garantia.
```

Obtenha assistência para reparos do produto entrando em contato com o distribuidor local da Banner Engineering Corp ou ligando diretamente para a Banner no telefone (763) 544-3164. Acesse a literatura traduzida para seu idioma nativo no site da Banner em www.bannerengineering.com ou entre em contato diretamente com a Banner pelo telefone (763) 544-3164.

Türkçe

Bu cihazda sorun giderme işlemleri için Banner Engineering ile iletişime geçin. **Bu Banner cihazını onarmaya çalışmayın; cihaz sahada değiştirilebilir parça veya bileşen içermez.** Bir Banner Uygulama Mühendisi tarafından cihazın, cihazın bir parçasının veya bir cihaz bileşeninin kusurlu olduğu tespit edilirse, Banner RMA (İade Mal Yetkilendirme) prosedürü hakkında bilgilendirilirsiniz.

```
ÖNEMLİ: İade etmeniz istenirse, cihazı dikkatli bir şekilde paketleyin. İade nakliyesinde
meydana gelecek hasarlar garanti kapsamında değildir.
```

Yerel Banner Engineering Corp distribütörünüzle iletişime geçerek veya doğrudan (763) 544-3164 numaralı telefondan Banner'ı arayarak ürün onarımlarıyla ilgili yardım alın. Ana dilinize çevrilmiş dokümanlara www.bannerengineering.com adresindeki Banner web sitesinden erişebilir veya (763) 544-3164 numaralı telefondan doğrudan Banner ile iletişime geçebilirsiniz.

Contact Us

Banner Engineering Corp. | 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

Mexican Importer

Banner Engineering de Mèxico, S. de R.L. de C.V. | David Alfaro Siqueiros 103 Piso 2 Valle oriente | San Pedro Garza Garcia Nuevo Leòn, C. P. 66269

81 8363.2714

© Banner Engineering Corp. All rights reserved.

LinkedIn

X

Facebook

Instagram



© 2026. All rights reserved.