SD50 Status Display Product Manual

Original Instructions
p/n: 242994 Rev. F
02-Sep-26
© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com

Contents

Chapter 1 Features 3
Models 3

Chapter 2 Wiring 4

Chapter 3 Pro Editor Configuration for the SD50 Pro LED Status Display 5
Full Preview Connection (Required) 5
Discrete Control 6
Basic I/O State 6
Advanced I/O State 6
I/O Block I/O State 7
Sequence Mode 7
Timer Mode 8
Counter Mode 8
Measure Mode 9
Pulse Control 10
Demo Mode 10
Factory Reset 11
Display Settings 11

Chapter 4 Specifications 12
FCC Part 15 Class B for Unintentional Radiators 12
Industry Canada ICES-003(B) 13
Dimensions 13

Chapter 5 Accessories 14
Cordsets 14
Mounting Brackets 14

Chapter 6 Product Support and Maintenance 16
Encoding Table and Unicode Characters 16
Clean with Mild Detergent and Warm Water 20
Repairs and Translations (No Field-Replaceable Parts) 20
Contact Us 23
Banner Engineering Corp Limited Warranty 23

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Chapter 1 Features

Provide More Status Information in the Most Helpful Locations



- Easily configurable, versatile display can be installed nearly anywhere, making it a simple yet powerful alternative to complex HMIs and other displays
- Great for displaying takt time, equipment status, assembly sequences, counts, and measurements where they are most useful
- Integrates into many different systems and applications, especially Banner sensing, safety, and monitoring solutions
- Quick and easy configuration—simply define the desired text and call it via discrete control or process data
- Bright white LED display and multicolored status LEDs legible from 10 meters away inform operators about exactly what is going on so they can respond quickly and accurately
- IP65-rated polycarbonate housing resists impact and condensation to provide clear communication in challenging and changing environmental conditions

Models

Model Key

Series	Height	Style	Display Length	Display Text Color	Control	Audible	Connector[1]
SD	**50**	**P**	**300**	**W**	**D15**		**QP**
Status Display	50 mm height	P = Pro	300 = 300 mm	W = White	D15 = Discrete 15 states	Blank = No audible A = Audible	QP = 150 mm (6 in) PVC-jacketed cable with a 5-pin M12 male quick-disconnect connector

[1] Models with a quick-disconnect connector require a mating cordset.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 2 Wiring

Wiring

5-Pin Male M12 Pinout	Pinout Key and Wiring
	1. Brown - Input 2 2. White - Input 3 3. Blue - DC Common 4. Black - Input 1 5. Gray - Input 4

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 3 Pro Editor Configuration for the SD50 Pro LED Status Display



Banner's Pro Editor software offers an easy way to configure Pro Series-enabled indication, touch, and illumination devices, allowing users full control of device states and device logic modes. The easy-to-use configuration software provides a variety of tools and capabilities to solve a wide range of applications such as indicating machine status or warm-up time, indicating unique steps in an assembly process, or incorporating status information into touch buttons.

Set up any Pro Series-enabled device using the free Pro Editor software, available for download at www.bannerengineering.com/proeditor.

Full Preview Connection (Required)

The full preview connection must be used for the SD50 Status Display.

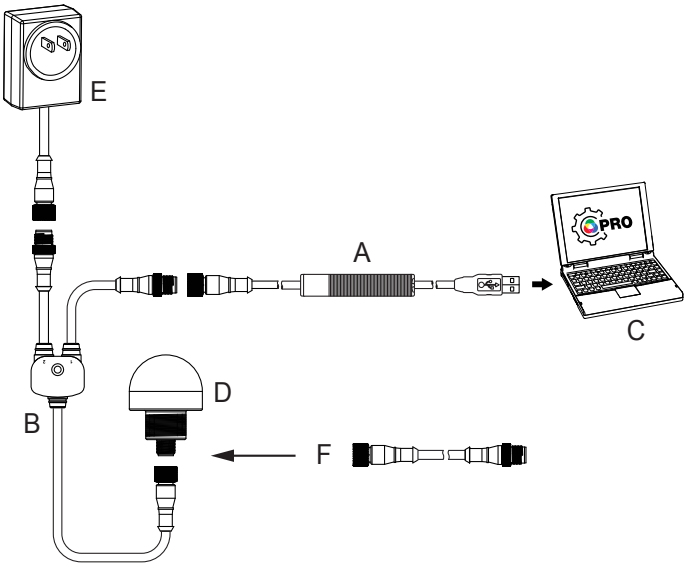

A = Pro Converter Cable (MQDC-506-USB)
B = Splitter (CSB-M1251FM1251M)
C = PC running Pro Editor software
D = Any Banner Pro Series-enabled device (K50 shown)
E = Power Supply (PSW-24-1, PSW-24-2, or PSD-24-4)
F = 8-Pin to 5-Pin Double-Ended Cordset (MQDC-801-5M-PRO), required for 8-Pin models

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Discrete Control

Selecting the Discrete Control tile displays three I/O State tiles:

- Basic
- Advanced
- I/O Block

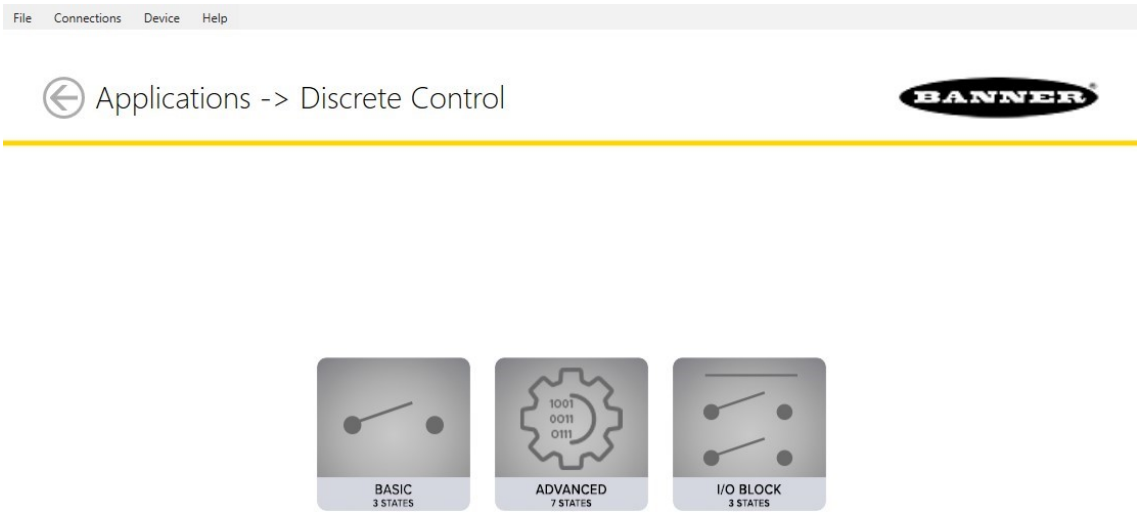

Basic I/O State

Basic four-state control. Configurations made in Basic I/O State assign one wire to one state, with the following override control:

- Pin 1 (Brown) overrides Pin 4 (Black)
- Pin 2 (White) overrides Pins 1 and 4 (Brown and Black)
- Pin 5 (Gray) overrides Pins 1, 2, and 4 (Brown, White, and Black)

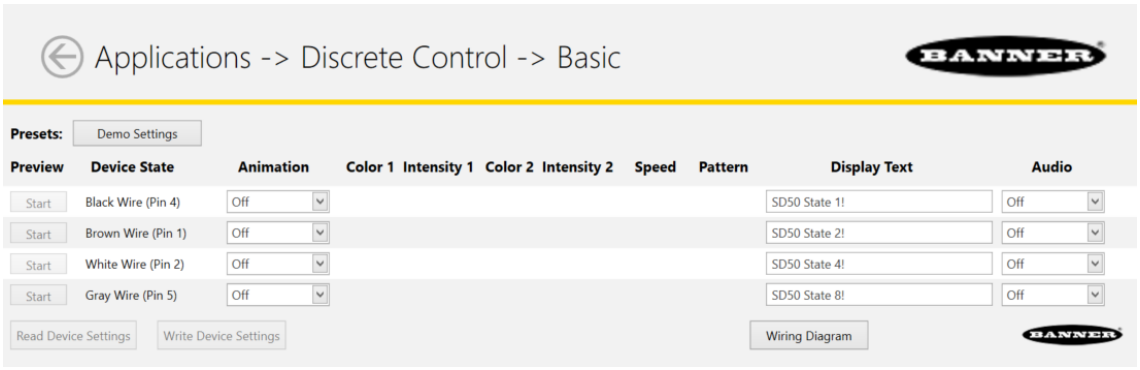

Advanced I/O State

Advanced, default I/O state, with fifteen state options for maximum configuration ability. Configurations made in Advanced I/O State assign binary wiring combinations of all valid inputs to each state. Both the indication LEDs and the display text can be programmed for each of the states.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

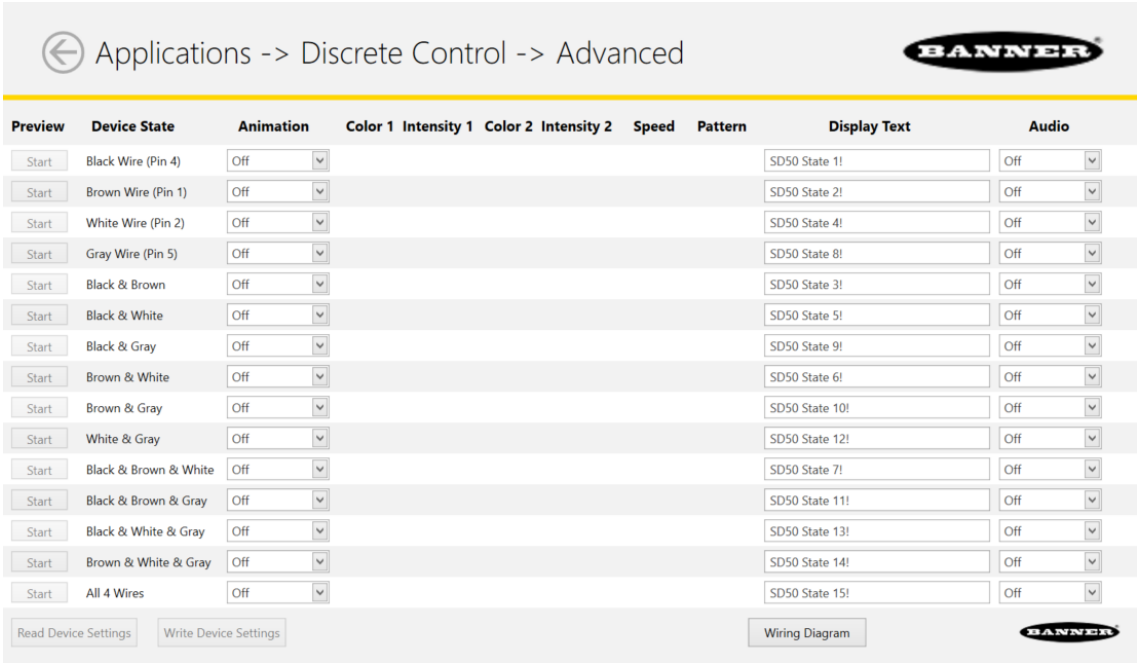

I/O Block I/O State

Three-state control for use with I/O block. Configurations made in I/O Block assign state to the black, white, and combination of black and white wires for use with the I/O blocks, for which power (brown) and common (blue) are always on for five-pin connections.

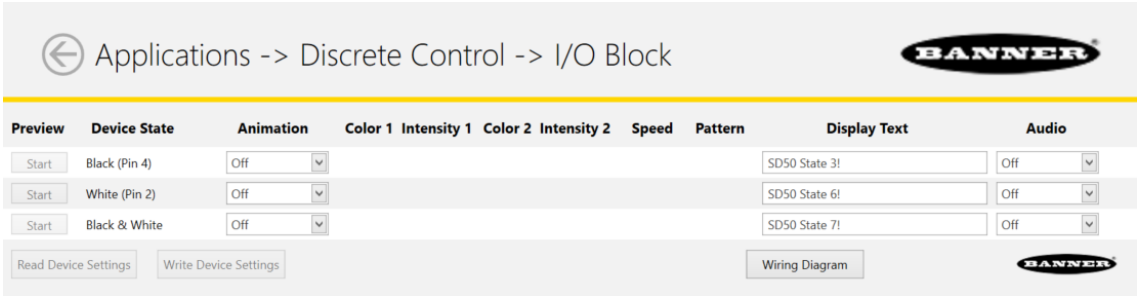

Sequence Mode

Sequence Mode allows up to sixteen states that a single input can control. A pulse on the input wire moves the SD50 to the next state.

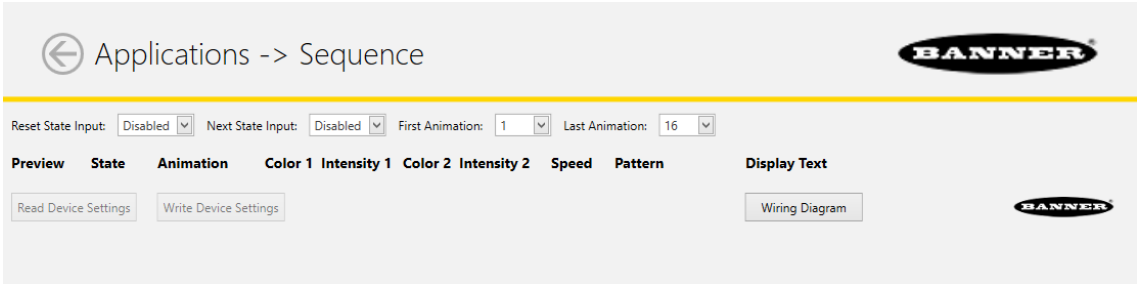

Reset State Input	Choose the desired input wire to restart the SD50 to the First Animation as chosen in the dropdown menu.
Next State Input	Choose the desired input wire to move SD50 to the next state in the series until the Last Animation is reached.
First Animation	Choose the initial state to display as the sequence is initiated.
Last Animation	Choose the final state to include in the sequence.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Timer Mode

Set a total time and up to four thresholds. Start and stop the timer counting up or down with discrete control. Colors change across threshold values.

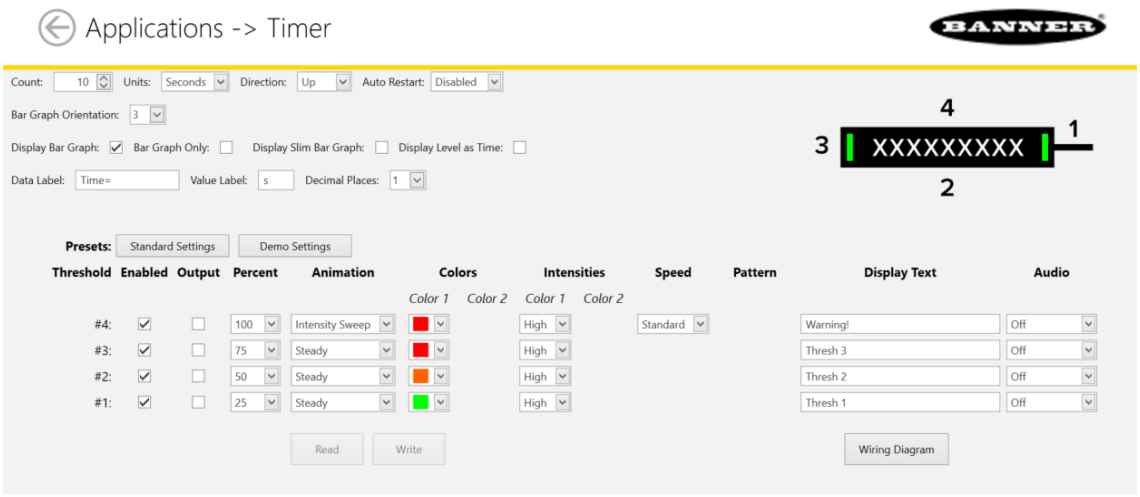

Count Seconds	The total time of the timer.
Direction	Up: Counts up from zero to Count Seconds. Down: Counts down from Count Seconds to zero.
Reset Input	Enable or disable the input wire to reset the timer to the initial value.
Auto Restart	The timer loops back to the original value automatically when it reaches its final value.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Display Level as Time	Display the time in HH:MM:SS format without data labels.
Data Label	Text that displays before the Count Value.
Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Counter Mode

Set a total count and up to four thresholds. Discrete, rising edge pulses count up or down. Colors change across threshold values.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

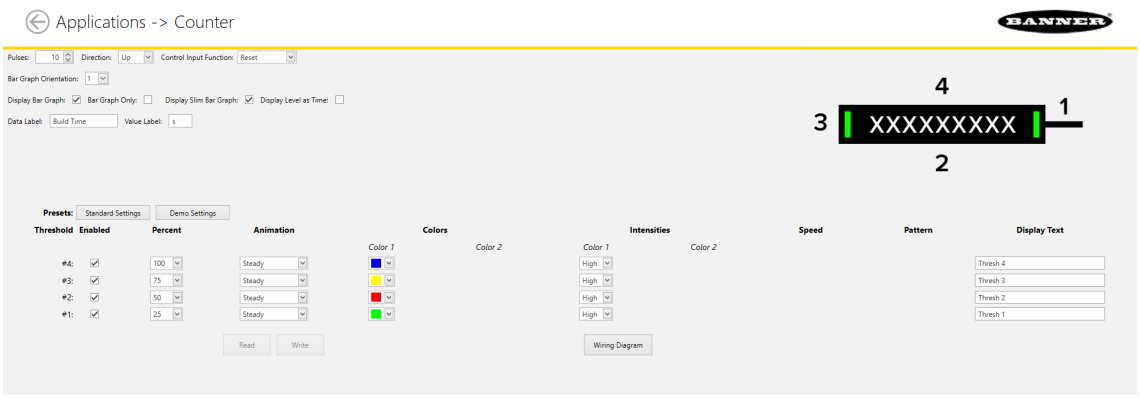

Pulses	Determine the number of counts that are either counted up to or counted down from, depending on the chosen direction.
Direction	Up: Counts from zero to Pulses. Down: Counts from Pulses to zero.
Reset Input	Enable or disable the input wire to reset the count to the initial value.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Data Label	Text that displays before the Count Value.
Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Measure Mode

Measure Mode uses the SD50 to display a measurement as either PWM control or PFM control.

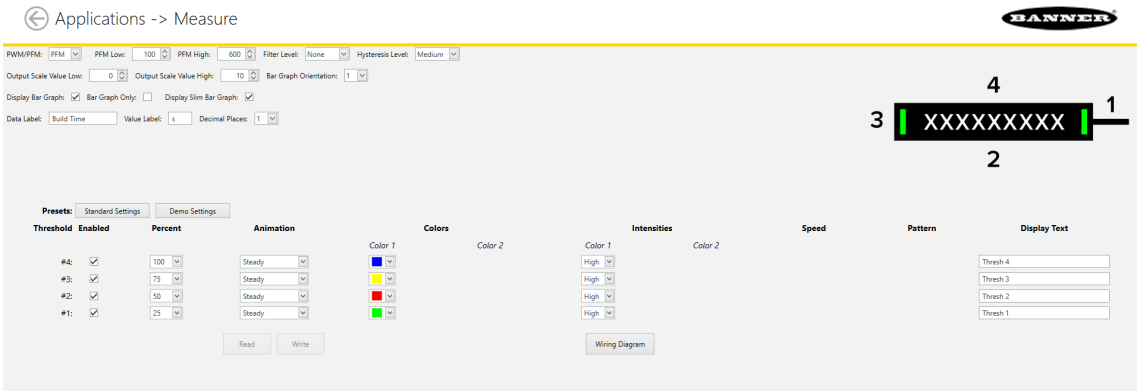

PWM/PFM	PWM: Pulse-Width Modulation. PFM: Pulse-Frequency Modulation.
PWM/PFM Low	The lowest frequency of the input range.
PWM/PFM High	The highest frequency of the input range.
Filter Level	The level of filtering used to minimize the effects of noise on the output.

Continued on page 10

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 9

Hysteresis Level	The level of lag between the measurement thresholds to minimize the flickering at switch points.
Output Scale Value Low	The low-end value of the output translated from the input frequency.
Output Scale Value High	The high-end value of the output translated from the input frequency.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Display Level as Time	Display the time in HH:MM:SS format without data labels.
Data Label	Text that displays before the Count Value.
Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Pulse Control

Selecting the Pulse Control tile displays up to sixteen states that correspond to input frequencies on the white wire. The number of states (1) and input characteristics (2) are user-defined. Ranges are calculated (3).

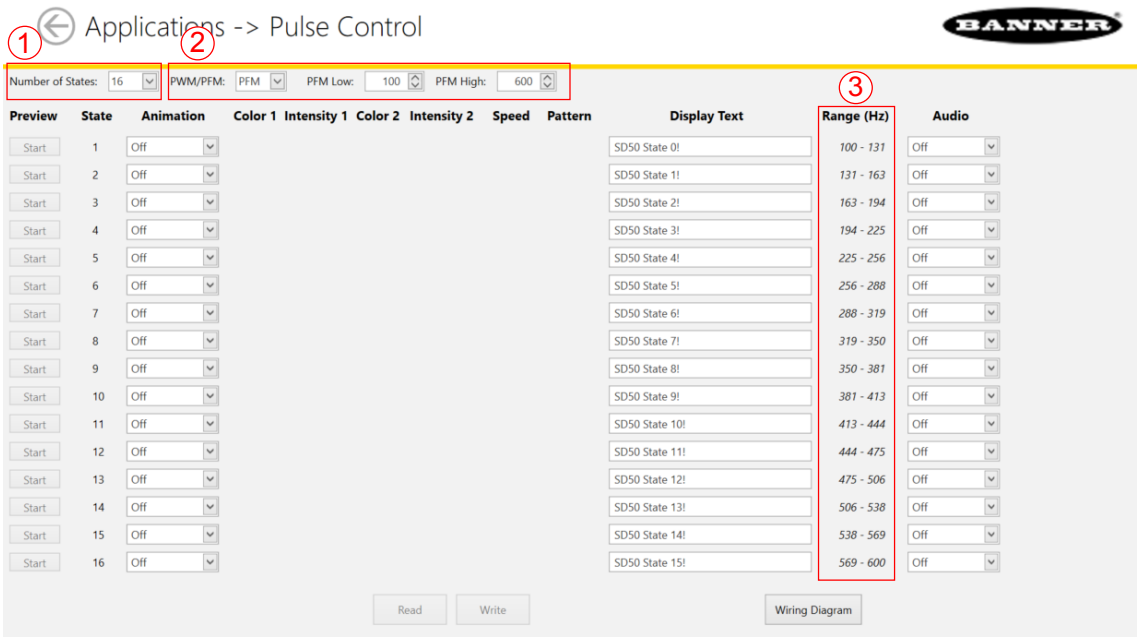

Number of States	Determine the number of states from 1 to 16.
PWM/PFM	Select either PWM (Pulse Width Modulation) or PFM (Pulse Frequency Modulation) as the device's input.
PWM/PFM Low	Determine the low end of the input signal range.
PWM/PFM High	Determine the high end of the input signal range.

Demo Mode

Use Demo Mode to automatically cycle through example configurations and animations that demonstrate the capabilities of the SD50. This mode is intended for product demonstrations, evaluation, and training.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Factory Reset

Restore the SD50 to default settings.

Display Settings

Display Settings are a type of advanced settings that are accessible across all Applications.

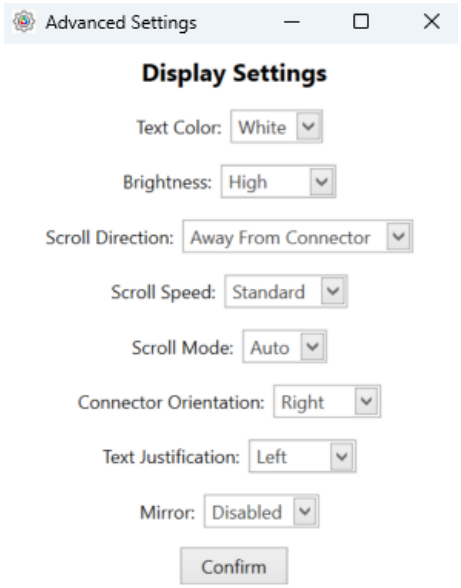

Text Color	Configure the primary text color as either white or black.
Brightness	Control the brightness of the display text.
Scroll Direction	Scroll the display text either toward or away from the connector.
Scroll Speed	Control the speed the display text scrolls.
Scroll Mode	Auto: Scrolls if the number of characters is greater thansixteen. Off: Does not scroll the display text. On: Scrolls the display text regardless of the number of characters.
Connector Orientation	Determine the orientation of the connector when installed. The display text automatically adjusts to the correct orientation.
Text Justification	Control the alignment of the display text: left, right, or center.
Mirror	Enable this setting to reverse the display text so that it can be read in a mirror.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 4 Specifications

Supply Voltage

12 V DC to 30 V DC

Use only with a suitable Class 2 power supply (UL) or SELV power supply (CE)

Supply Current

550 mA max. at 12 V DC

260 mA max. at 24 V DC

210 mA max. at 30 V DC

Connections

150 mm (6 in) PVC-jacketed cable with a 5-pin M12 male quick-disconnect connector

Models with a quick-disconnect connector require a mating cordset

Do not spray cable with high-pressure sprayer or cable damage will result

Operating Temperature

–40 °C to +50 °C (–40 °F to +122 °F)

Storage Temperature

–40 °C to +70 °C (–40 °F to +158 °F)

Environmental Rating

Rated IP65

Suitable for damp locations per UL 2108

Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 1.0 mm amplitude, 5 minutes sweep, 30 minutes dwell)

Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Construction

Black polycarbonate housing and end caps

Internal silicone-encapsulated LEDs

Smoky polycarbonate window

Character Limit

Discrete Control: 29 characters

All other Modes: 32 characters

Audible Characteristics

Typical sound intensity at 1 m: 77 dB

Certifications

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

Animations

Animation	Description
Off	Light is off
Steady	Color 1 is solid on at a defined intensity
Flash	Color 1 flashes at a defined speed, color intensity, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
Two Color Flash	Color 1 and Color 2 flash alternately at defined speed, color intensities, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
50/50	Color 1 and Color 2 are solid at a defined intensity
50/50 Flash	Color 1 and Color 2 flash at a defined speed, color intensity, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
Intensity Sweep	Color 1 repeatedly increases and decreases intensity between 0% to 100% at defined speed and color intensity
Two Color Sweep	Color 1 and Color 2 define the end values of a line across the color gamut. The light continuously displays a color by moving along the line at the defined speed and color intensities

Required Overcurrent Protection

WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (A)	Supply Wiring (AWG)	Required Overcurrent Protection (A)
20	5.0	26	1.0
22	3.0	28	0.8
24	2.0	30	0.5

Mounting

M5 and 1/4-20 compatible end caps (not included)

Clip brackets for mounting are available

FCC Part 15 Class B for Unintentional Radiators

(Part 15.105(b)) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

(Part 15.21) Any changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate this equipment.

Industry Canada ICES-003(B)

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme NMB-3(B). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

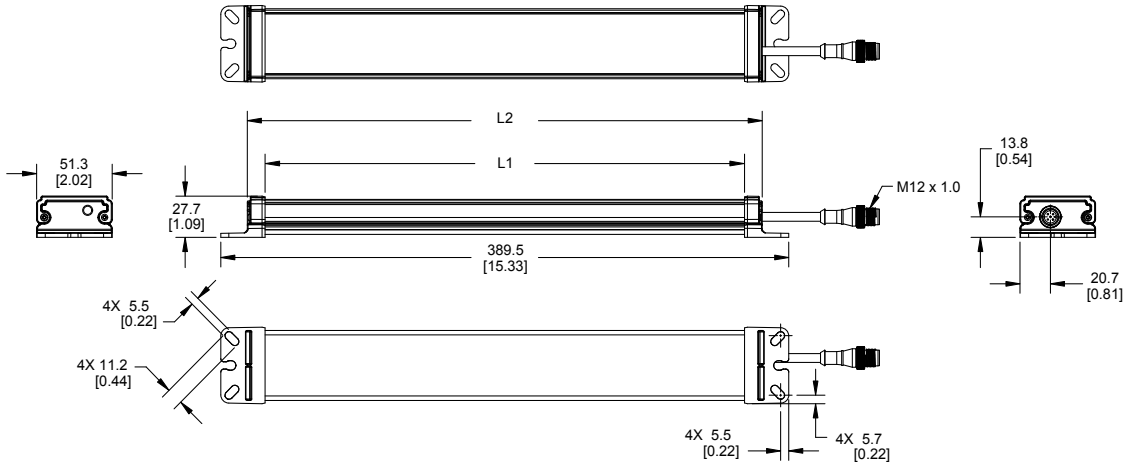

Models	L1	L2
SD50..300..	329.5 mm (12.97 in)	353.5 mm (13.92 in)

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 5 Accessories

Cordsets

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

5-Pin A-Code Double-Ended M12 Female to M12 Male Cordsets (datasheet p/n 236183)				
Model	**Length**	**Dimensions (mm)**	**Pinouts**	
BC-M12F5-M12M5-22-1	1 m (3.28 ft)	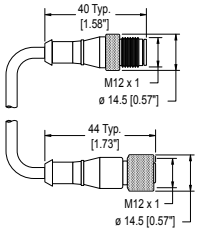	Female 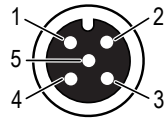 Male 	1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray
BC-M12F5-M12M5-22-2	2 m (6.56 ft)			
BC-M12F5-M12M5-22-5	5 m (16.4 ft)			
BC-M12F5-M12M5-22-8	8 m (26.25 ft)			
BC-M12F5-M12M5-22-10	10 m (30.81 ft)			
BC-M12F5-M12M5-22-15	15 m (49.2 ft)			

5-Pin A-Code Double-Ended M12 Female Right-Angle to M12 Male Right-Angle Cordsets (datasheet p/n 236183)				
Model	**Length**	**Dimensions (mm)**	**Pinouts**	
BC-M12F5A-M12M5A-22-1	1 m (3.28 ft)	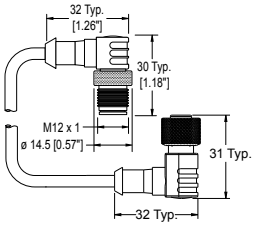	Female 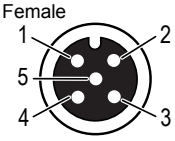 Male 	1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray
BC-M12F5A-M12M5A-22-2	2 m (6.56 ft)			
BC-M12F5A-M12M5A-22-5	5 m (16.4 ft)			
BC-M12F5A-M12M5A-22-8	8 m (26.25 ft)			
BC-M12F5A-M12M5A-22-10	10 m (30.81 ft)			
BC-M12F5A-M12M5A-22-15	15 m (49.2 ft)			

Mounting Brackets

LMBSD50

- Metal mounting bracket kit
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

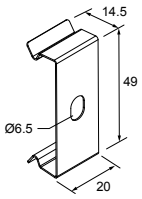

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

LMBSD50MAG

- Magnetic mounting bracket kit
- Up to 7.26 kg (16 lb) pull
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

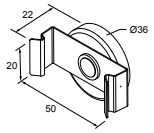

LMBSD50-180S

- Metal mounting bracket kit with 180-degree rotation
- Stainless steel
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

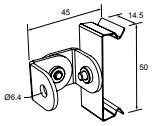

LMBSD50-180SMAG

- Magnetic mounting bracket kit with 180-degree rotation
- Stainless steel
- Up to 7.26 kg (16 lb) pull
- Hardware included
- CAD Files: DXF, PDF, IGS, STP



© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 6 Product Support and Maintenance

Encoding Table and Unicode Characters

Unicode Code Point	Character	Name
U+0020		SPACE
U+0021	!	EXCLAMATION MARK
U+0022	"	QUOTATION MARK
U+0023	#	NUMBER SIGN
U+0024	$	DOLLAR SIGN
U+0025	%	PERCENT SIGN
U+0026	&	AMPERSAND
U+0027	'	APOSTROPHE
U+0028	(	LEFT PARENTHESIS
U+0029	)	RIGHT PARENTHESIS
U+002A	*	ASTERISK
U+002B	+	PLUS SIGN
U+002C	,	COMMA
U+002D	-	HYPHEN-MINUS
U+002E	.	FULL STOP
U+002F	/	SOLIDUS
U+0030	0	DIGIT ZERO
U+0031	1	DIGIT ONE
U+0032	2	DIGIT TWO
U+0033	3	DIGIT THREE
U+0034	4	DIGIT FOUR
U+0035	5	DIGIT FIVE
U+0036	6	DIGIT SIX
U+0037	7	DIGIT SEVEN
U+0038	8	DIGIT EIGHT
U+0039	9	DIGIT NINE
U+003A	:	COLON
U+003B	;	SEMICOLON
U+003C	<	LESS-THAN SIGN
U+003D	=	EQUALS SIGN
U+003E	>	GREATER-THAN SIGN
U+003F	?	QUESTION MARK
U+0040	@	COMMERCIAL AT
U+0041	A	LATIN CAPITAL LETTER A
U+0042	B	LATIN CAPITAL LETTER B
U+0043	C	LATIN CAPITAL LETTER C
U+0044	D	LATIN CAPITAL LETTER D

Continued on page 17

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 16

Unicode Code Point	Character	Name
U+0045	E	LATIN CAPITAL LETTER E
U+0046	F	LATIN CAPITAL LETTER F
U+0047	G	LATIN CAPITAL LETTER G
U+0048	H	LATIN CAPITAL LETTER H
U+0049	I	LATIN CAPITAL LETTER I
U+004A	J	LATIN CAPITAL LETTER J
U+004B	K	LATIN CAPITAL LETTER K
U+004C	L	LATIN CAPITAL LETTER L
U+004D	M	LATIN CAPITAL LETTER M
U+004E	N	LATIN CAPITAL LETTER N
U+004F	O	LATIN CAPITAL LETTER O
U+0050	P	LATIN CAPITAL LETTER P
U+0051	Q	LATIN CAPITAL LETTER Q
U+0052	R	LATIN CAPITAL LETTER R
U+0053	S	LATIN CAPITAL LETTER S
U+0054	T	LATIN CAPITAL LETTER T
U+0055	U	LATIN CAPITAL LETTER U
U+0056	V	LATIN CAPITAL LETTER V
U+0057	W	LATIN CAPITAL LETTER W
U+0058	X	LATIN CAPITAL LETTER X
U+0059	Y	LATIN CAPITAL LETTER Y
U+005A	Z	LATIN CAPITAL LETTER Z
U+005B	[	LEFT SQUARE BRACKET
U+005C	\	REVERSE SOLIDUS
U+005D	]	RIGHT SQUARE BRACKET
U+005E	^	CIRCUMFLEX ACCENT
U+005F	_	LOW LINE
U+0060	`	GRAVE ACCENT
U+0061	a	LATIN SMALL LETTER A
U+0062	b	LATIN SMALL LETTER B
U+0063	c	LATIN SMALL LETTER C
U+0064	d	LATIN SMALL LETTER D
U+0065	e	LATIN SMALL LETTER E
U+0066	f	LATIN SMALL LETTER F
U+0067	g	LATIN SMALL LETTER G
U+0068	h	LATIN SMALL LETTER H
U+0069	i	LATIN SMALL LETTER I
U+006A	j	LATIN SMALL LETTER J
U+006B	k	LATIN SMALL LETTER K
U+006C	l	LATIN SMALL LETTER L
U+006D	m	LATIN SMALL LETTER M
U+006E	n	LATIN SMALL LETTER N

Continued on page 18

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 17

Unicode Code Point	Character	Name
U+006F	o	LATIN SMALL LETTER O
U+0070	p	LATIN SMALL LETTER P
U+0071	q	LATIN SMALL LETTER Q
U+0072	r	LATIN SMALL LETTER R
U+0073	s	LATIN SMALL LETTER S
U+0074	t	LATIN SMALL LETTER T
U+0075	u	LATIN SMALL LETTER U
U+0076	v	LATIN SMALL LETTER V
U+0077	w	LATIN SMALL LETTER W
U+0078	x	LATIN SMALL LETTER X
U+0079	y	LATIN SMALL LETTER Y
U+007A	z	LATIN SMALL LETTER Z
U+007B	{	LEFT CURLY BRACKET
U+007C	|	VERTICAL LINE
U+007D	}	RIGHT CURLY BRACKET
U+007E	~	TILDE
U+00A0		NO-BREAK SPACE
U+00A1	¡	INVERTED EXCLAMATION MARK
U+00A2	¢	CENT SIGN
U+00A3	£	POUND SIGN
U+00A4	¤	CURRENCY SIGN
U+00A5	¥	YEN SIGN
U+00A6	¦	BROKEN BAR
U+00A7	§	SECTION SIGN
U+00A8	¨	DIAERESIS
U+00A9	©	COPYRIGHT SIGN
U+00AA	ª	FEMININE ORDINAL INDICATOR
U+00AB	«	LEFT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00AC	¬	NOT SIGN
U+00AD		SOFT HYPHEN
U+00AE	®	REGISTERED SIGN
U+00AF	¯	MACRON
U+00B0	°	DEGREE SIGN
U+00B1	±	PLUS-MINUS SIGN
U+00B2	²	SUPERSCRIPT TWO
U+00B3	³	SUPERSCRIPT THREE
U+00B4	´	ACUTE ACCENT
U+00B5	µ	MICRO SIGN
U+00B6	¶	PILCROW SIGN
U+00B7	·	MIDDLE DOT
U+00B8	¸	CEDILLA
U+00B9	¹	SUPERSCRIPT ONE

Continued on page 19

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 18

Unicode Code Point	Character	Name
U+00BA	º	MASCULINE ORDINAL INDICATOR
U+00BB	»	RIGHT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00BC	¼	VULGAR FRACTION ONE QUARTER
U+00BD	½	VULGAR FRACTION ONE HALF
U+00BE	¾	VULGAR FRACTION THREE QUARTERS
U+00BF	¿	INVERTED QUESTION MARK
U+00C0	À	LATIN CAPITAL LETTER A WITH GRAVE
U+00C1	Á	LATIN CAPITAL LETTER A WITH ACUTE
U+00C2	Â	LATIN CAPITAL LETTER A WITH CIRCUMFLEX
U+00C3	Ã	LATIN CAPITAL LETTER A WITH TILDE
U+00C4	Ä	LATIN CAPITAL LETTER A WITH DIAERESIS
U+00C5	Å	LATIN CAPITAL LETTER A WITH RING ABOVE
U+00C6	Æ	LATIN CAPITAL LETTER AE
U+00C7	Ç	LATIN CAPITAL LETTER C WITH CEDILLA
U+00C8	È	LATIN CAPITAL LETTER E WITH GRAVE
U+00C9	É	LATIN CAPITAL LETTER E WITH ACUTE
U+00CA	Ê	LATIN CAPITAL LETTER E WITH CIRCUMFLEX
U+00CB	Ë	LATIN CAPITAL LETTER E WITH DIAERESIS
U+00CC	Ì	LATIN CAPITAL LETTER I WITH GRAVE
U+00CD	Í	LATIN CAPITAL LETTER I WITH ACUTE
U+00CE	Î	LATIN CAPITAL LETTER I WITH CIRCUMFLEX
U+00CF	Ï	LATIN CAPITAL LETTER I WITH DIAERESIS
U+00D0	Ð	LATIN CAPITAL LETTER ETH
U+00D1	Ñ	LATIN CAPITAL LETTER N WITH TILDE
U+00D2	Ò	LATIN CAPITAL LETTER O WITH GRAVE
U+00D3	Ó	LATIN CAPITAL LETTER O WITH ACUTE
U+00D4	Ô	LATIN CAPITAL LETTER O WITH CIRCUMFLEX
U+00D5	Õ	LATIN CAPITAL LETTER O WITH TILDE
U+00D6	Ö	LATIN CAPITAL LETTER O WITH DIAERESIS
U+00D7	×	MULTIPLICATION SIGN
U+00D8	Ø	LATIN CAPITAL LETTER O WITH STROKE
U+00D9	Ù	LATIN CAPITAL LETTER U WITH GRAVE
U+00DA	Ú	LATIN CAPITAL LETTER U WITH ACUTE
U+00DB	Û	LATIN CAPITAL LETTER U WITH CIRCUMFLEX
U+00DC	Ü	LATIN CAPITAL LETTER U WITH DIAERESIS
U+00DD	Ý	LATIN CAPITAL LETTER Y WITH ACUTE
U+00DE	Þ	LATIN CAPITAL LETTER THORN
U+00DF	ß	LATIN SMALL LETTER SHARP S
U+00E0	à	LATIN SMALL LETTER A WITH GRAVE
U+00E1	á	LATIN SMALL LETTER A WITH ACUTE
U+00E2	â	LATIN SMALL LETTER A WITH CIRCUMFLEX
U+00E3	ã	LATIN SMALL LETTER A WITH TILDE

Continued on page 20

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 19

Unicode Code Point	Character	Name
U+00E4	ä	LATIN SMALL LETTER A WITH DIAERESIS
U+00E5	å	LATIN SMALL LETTER A WITH RING ABOVE
U+00E6	æ	LATIN SMALL LETTER AE
U+00E7	ç	LATIN SMALL LETTER C WITH CEDILLA
U+00E8	è	LATIN SMALL LETTER E WITH GRAVE
U+00E9	é	LATIN SMALL LETTER E WITH ACUTE
U+00EA	ê	LATIN SMALL LETTER E WITH CIRCUMFLEX
U+00EB	ë	LATIN SMALL LETTER E WITH DIAERESIS
U+00EC	ì	LATIN SMALL LETTER I WITH GRAVE
U+00ED	í	LATIN SMALL LETTER I WITH ACUTE
U+00EE	î	LATIN SMALL LETTER I WITH CIRCUMFLEX
U+00EF	ï	LATIN SMALL LETTER I WITH DIAERESIS
U+00F0	ð	LATIN SMALL LETTER ETH
U+00F1	ñ	LATIN SMALL LETTER N WITH TILDE
U+00F2	ò	LATIN SMALL LETTER O WITH GRAVE
U+00F3	ó	LATIN SMALL LETTER O WITH ACUTE
U+00F4	ô	LATIN SMALL LETTER O WITH CIRCUMFLEX
U+00F5	õ	LATIN SMALL LETTER O WITH TILDE
U+00F6	ö	LATIN SMALL LETTER O WITH DIAERESIS
U+00F7	÷	DIVISION SIGN
U+00F8	ø	LATIN SMALL LETTER O WITH STROKE
U+00F9	ù	LATIN SMALL LETTER U WITH GRAVE
U+00FA	ú	LATIN SMALL LETTER U WITH ACUTE
U+00FB	û	LATIN SMALL LETTER U WITH CIRCUMFLEX
U+00FC	ü	LATIN SMALL LETTER U WITH DIAERESIS
U+00FD	ý	LATIN SMALL LETTER Y WITH ACUTE
U+00FE	þ	LATIN SMALL LETTER THORN
U+00FF	ÿ	LATIN SMALL LETTER Y WITH DIAERESIS

Clean with Mild Detergent and Warm Water

Wipe down the device with a soft cloth dampened with a mild detergent and warm water solution. Do not use any other chemicals for cleaning.

Repairs and Translations (No Field-Replaceable Parts)

English

Contact Banner Engineering for troubleshooting of this device. **Do not attempt any repairs to this Banner device; it contains no field-replaceable parts or components.** If the device, device part, or device component is determined to be defective by a Banner Applications Engineer, they will advise you of Banner's RMA (Return Merchandise Authorization) procedure.

```
IMPORTANT: If instructed to return the device, pack it with care. Damage that occurs in return
shipping is not covered by warranty.
```

Obtain assistance with product repairs by contacting your local Banner Engineering Corp distributor or by calling Banner directly at (763) 544-3164. Access literature translated into your native language on the Banner website at www.bannerengineering.com or contact Banner directly at (763) 544-3164.

© Banner Engineering Corp. All rights reserved.

Deutsch

Wenden Sie sich zur Fehlerbehebung dieses Geräts an Banner Engineering. **Versuchen Sie nicht, Reparaturen an diesem Banner-Gerät vorzunehmen. Das Gerät enthält keine am Einsatzort auszuwechselnden Teile oder Komponenten.** Wenn ein Banner-Anwendungstechniker zu dem Schluss kommt, dass dieses Gerät, ein Teil oder eine Komponente davon defekt ist, erhalten Sie von dem Techniker Erläuterungen zu Banners RMA-Verfahren (Return Merchandise Authorization) für die Warenrückgabe.

WICHTIG: Wenn Sie der Techniker anweist, das Gerät zurückzusenden, verpacken Sie es bitte sorgfältig. Transportschäden bei der Rücksendung werden von der Garantie nicht abgedeckt.

Unterstützung bei Produktreparaturen erhalten Sie von Ihrem örtlichen Banner Engineering Corp Händler oder direkt von Banner unter Tel. (763) 544-3164. Die in Ihre Muttersprache übersetzte Literatur finden Sie auf der Banner-Website unter www.bannerengineering.com oder kontaktieren Sie Banner direkt unter Tel. (763) 544-3164.

Français

Pour plus d'informations sur le dépannage du produit, contactez Banner Engineering. **Ne tentez pas de réparer ce dispositif Banner. Il ne contient aucun composant ou pièce qui puisse être remplacé sur place.** Si un ingénieur de Banner conclut que le dispositif ou l'une de ses pièces ou composants est défectueux, il vous informera de la procédure à suivre pour le retour des produits (RMA).

Important : Si vous devez retourner le dispositif, emballez-le avec soin. Les dégâts occasionnés pendant le transport de retour ne sont pas couverts par la garantie.

Pour vous aider lors de la réparation de produits, contactez votre distributeur Banner local our appelez directement Banner au (763) 544-3164. La documentation traduite dans votre langue est disponible sur le site internet de Banner www.bannerengineering.com ou contactez directement Banner au (763) 544-3164.

Italiano

Per le procedure di individuazione e riparazione dei guasti di questo dispositivo, contattare Banner Engineering. **Non tentare di riparare questo dispositivo Banner, in quanto non contiene parti o componenti sostituibili dall'utente.** Se il dispositivo, una parte del dispositivo o un componente del dispositivo viene riscontrato difettoso da un tecnico Banner, il nostro personale vi comunicherà la procedura da seguire per ottenere l'autorizzazione al reso.

Importante: Se si ricevono istruzioni di rispedire il dispositivo al produttore, imballarlo con cura. I danni dovuti al trasporto non sono coperti dalla garanzia.

Per assistenza nelle riparazioni dei prodotti, contattare il distributore locale Banner Engineering Corp o contattare direttamente Banner al numero (763) 544-3164. È possibile accedere alla documentazione tradotta nella propria lingua madre sul sito Web Banner all'indirizzo www.bannerengineering.com o contattare direttamente Banner al numero (763) 544-3164.

Español

Comuníquese con Banner Engineering para solucionar de problemas de este dispositivo. **No intente ninguna reparación a este dispositivo de Banner, contiene piezas o componente que no se pueden cambiar en terreno.** Si algún ingeniero de aplicaciones de Banner determina que el dispositivo, alguna de las piezas o alguno de los componentes del dispositivo está defectuoso, le informará el procedimiento de autorización de devolución de mercancía (RMA, por sus siglas en inglés) de Banner.

Importante: Si se le solicita devolver el dispositivo, empáquelo con cuidado. Puede haber daños durante el envío de devolución que no estén cubiertos por la garantía.

Para reparaciones de productos, por favor contacte a su distribuidor local de Banner Engineering o llame a Banner directamente al 00 1 (763) 544-3164. Vea la literatura traducida en su idioma en el sitio web Banner en www.bannerengineering.com o comuníquese con Banner directamente al 00 1 (763) 544-3164.

中国人

如需对本装置进行故障排查，请联系邦纳。**请勿尝试自行维修该邦纳装置；本装置不包含任何可在现场更换的部件或组件。** 若经邦纳应用工程师确认设备、设备部件或组件存在缺陷，他们将告知您邦纳退货授权 (RMA) 流程。

重要注意事项： 如被要求退回装置，请妥善包装后寄回。退货运输过程中发生的损坏不在保修范围内。

请联系当地的 Banner Engineering Corp 经销商或直接致电 Banner +1 (763) 544-3164，以获得产品维修帮助。请访问邦纳网站 www.bannerengineering.com 或直接拨打 +1 (763) 544-3164 联系邦纳，获取翻译成您母语的资料。

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

한국인

이 장치의 문제를 해결하려면 Banner Engineering에 문의하십시오. **이 Banner 장치에는 현장에서 교체할 수 있는 부품 또는 구성품이 없으므로 수리를 시도하지 마십시오.** Banner 애플리케이션 엔지니어가 장치, 장치 부품 또는 장치 구성품에 결함이 있는 것으로 판정하면, Banner의 RMA(제품 반송 승인)절차에 대해 안내해 드립니다.

> **중요:** 제품을 반송하도록 안내 받으셨다면 잘 포장해주십시오. 반송 도중에 발생한 손상은 보증 서비스가 적용되지 않습니다.

제품 수리에 대한 지원은 지역 Banner Engineering Corp 대리점에 문의하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다. 사용자의 모국어로 번역된 자료는 Banner 웹사이트 www.bannerengineering.com에서 액세스하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다.

日本語

この装置のトラブルシューティングについては、バナーエンジニアリングにお問い合わせください。**このバナー装置には、現場では交換できない部品またはコンポーネントが含まれているため、修理を試みてはいけません。** バナーのアプリケーションエンジニアが装置、装置の部品、または装置のコンポーネントに欠陥があると判断した場合、バナーのRMA（返品承認）手続きについてお知らせします。

> **重要 ：** 返品を指示された場合は、装置を丁寧に梱包してください。返品時に発生した破損は保証の対象外となります。

製品の修理については、最寄りのBanner Engineering Corp代理店にお問い合わせいただくか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。バナーのウェブサイト（www.bannerengineering.com）でお客様の言語に翻訳された資料にアクセスするか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。

čeština

Pro řešení problémů se zařízením kontaktujte společnost Banner Engineering. **Neprovádějte žádné opravy zařízení Banner. Neobsahují žádné komponenty nebo části, které by byly vyměnitelné.** Pokud je zařízení, jeho část nebo díl označen technikem společnosti Banner jako poškozený, bude Vám doporučeno vyplnit reklamační RMA protokol.

> **Důležité:** Pokud byl vydán požadavek na vrácení zařízení, pečlivě ho zabalte. Poškození vzniklé při dopravě není považováno za záruční opravu.

Pokud produkt potřebuje opravu, vyžádejte si pomoc od místního distributora společnosti Banner Engineering Corp nebo přímo na telefonním čísle (763) 544-3164. Dokumentaci přeloženou do vašeho jazyka si vyhledejte na webových stránkách společnosti Banner na adrese www.bannerengineering.com nebo se obraťte přímo na společnost Banner na telefonním čísle (763) 544-3164.

Polski

W celu rozwiązania problemów z urządzeniem należy skontaktować się z działem technicznym firmy Banner Engineering. **Pod żadnym pozorem nie próbuj naprawiać tego urządzenia firmy Banner; nie zawiera ono części ani elementów, które można wymieniać samodzielnie.** Jeśli urządzenie, jego część lub element zostaną uznane za wadliwe przez inżyniera technicznego Banner, poinformuje on użytkownika o firmowej procedurze zwrotu towaru (RMA) firmy Banner.

> **Ważne:** Jeśli urządzenie ma zostać zwrócone, należy je starannie zapakować. Uszkodzenia powstałe podczas odsyłki nie są objęte gwarancją.

Aby uzyskać pomoc w zakresie naprawy produktu, należy skontaktować się z lokalnym dystrybutorem Banner Engineering Corp lub zadzwonić bezpośrednio do firmy Banner pod numer (763) 544-3164. Dostęp do literatury przetłumaczonej na swój język ojczysty można uzyskać na stronie internetowej firmy Banner pod adresem www.bannerengineering.com lub kontaktując się bezpośrednio z firmą Banner pod numerem (763) 544-3164.

Português

Entre em contato com a Engenharia da Banner para a solução de problemas deste dispositivo. **Não tente fazer nenhum reparo neste dispositivo Banner; ele não contém peças ou componentes substituíveis em campo.** Se um técnico de aplicações da Banner determinar que o dispositivo, peça ou componente do dispositivo está com defeito, ele o informará sobre o procedimento de RMA (Autorização de Devolução de Mercadoria) da Banner.

> **Importante:** Se for instruído a devolver o dispositivo, embale-o com cuidado. Os danos ocorridos no transporte de devolução não são cobertos pela garantia.

Obtenha assistência para reparos do produto entrando em contato com o distribuidor local da Banner Engineering Corp ou ligando diretamente para a Banner no telefone (763) 544-3164. Acesse a literatura traduzida para seu idioma nativo no site da Banner em www.bannerengineering.com ou entre em contato diretamente com a Banner pelo telefone (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Türkçe

Bu cihazda sorun giderme işlemleri için Banner Engineering ile iletişime geçin. **Bu Banner cihazını onarmaya çalışmayın; cihaz sahada değiştirilebilir parça veya bileşen içermez.** Bir Banner Uygulama Mühendisi tarafından cihazın, cihazın bir parçasının veya bir cihaz bileşeninin kusurlu olduğu tespit edilirse, Banner RMA (İade Mal Yetkilendirme) prosedürü hakkında bilgilendirilirsiniz.

```
ÖNEMLİ: İade etmeniz istenirse, cihazı dikkatli bir şekilde paketleyin. İade nakliyesinde
meydana gelecek hasarlar garanti kapsamında değildir.
```

Yerel Banner Engineering Corp distribütörünüzle iletişime geçerek veya doğrudan (763) 544-3164 numaralı telefondan Banner'ı arayarak ürün onarımlarıyla ilgili yardım alın. Ana dilinize çevrilmiş dokümanlara www.bannerengineering.com adresindeki Banner web sitesinden erişebilir veya (763) 544-3164 numaralı telefondan doğrudan Banner ile iletişime geçebilirsiniz.

Contact Us

Banner Engineering Corp. | 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

LinkedIn

X

Facebook

Instagram



© 2026. All rights reserved.