# K70 Wireless Battery-Powered Touch Button

## Features



Sure Cross® K70 Wireless Battery-Powered Touch Button combines the best of Banner's popular touch button family with its reliable, field-proven, Sure Cross wireless architecture.

This self-contained, fully wireless device consists of a bidirectional radio transmitter with an onboard capacitive touch button and four colored LEDs powered by a single lithium battery. The K70 wireless battery-powered touch button offers superior mounting flexibility as it can be placed almost anywhere, regardless of the availability of power. Multicolored LEDs allow for communicating multiple statues with a single device and a capacitive touch button gives users the ability to provide remote feedback/communication.

- Self-contained battery-powered touch button
- Up to four colors in one device: green, red, yellow, and blue, with additional colors available by blending
- Available in 900 MHz and 2.4 GHz ISM radio frequencies
- Rugged, water-resistant IP65 housing with UV-stabilized material
- Bright, uniform indicator segments appear gray when off to eliminate false indications from ambient light
- Excellent immunity to false triggering by water spray, detergents, oils, and other foreign materials
- Ergonomically designed to eliminate hand, wrist, and arm stresses associated with repeated switch operation; requires no physical force to operate

## Models

| Model | Frequency | Colors | Power |
|---|---|---|---|
| K70DXN9T2GRYBX-B | 900 MHz ISM Band | Green, Red, Yellow, Blue | 3.6 V DC C cell Battery |
| K70DXN2T2GRYBX-B | 2.4 GHz ISM Band | | |

To order integrated battery models without the battery, add **NB** to the model number (for example, **K70DXN9T2GRYBX-B NB**). If you purchase a model without the battery, Banner Engineering recommends battery model **BWA-BATT-013**.

## Quick Start Guide

Continue reading the document for more detailed instructions.

1. Set the DIP switches.
2. Install the battery.
   The radio powers on automatically.
3. Bind the K70 to its Gateway (DXM Controller or DX80 Performance Gateway) and assign a Node ID to the K70.
4. Mount the K70.
5. Collect the data with the DXM Controller or Gateway from Input 1 (touch button status).
6. Control the color status by turning on outputs 1 through 4 for the green, red, yellow, and blue LEDs respectively.

## Overview

The K70 Wireless Battery-Powered Touch Button is pre-configured to work as a toggle switch with instant feedback. While the button is touched, the green LED is on and flashes after it is released. The button can be touched again to turn off the flashing green LED or it can be controlled wirelessly to turn off or change another color.

Original Instructions
07-Apr-26

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

221759
p/n: 221759 Rev. A

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com

# Configuration Instructions

## Assembling the K70




## Set the Radio Module DIP Switches

Before applying power to the device, set the radio module's DIP switches.

Default configurations are noted with (*).

After changing DIP switch positions, cycle power to the device for the changes to take effect. To cycle power, triple-click the binding button. After the status LEDs alternately flash red and green, then double-click the binding button.

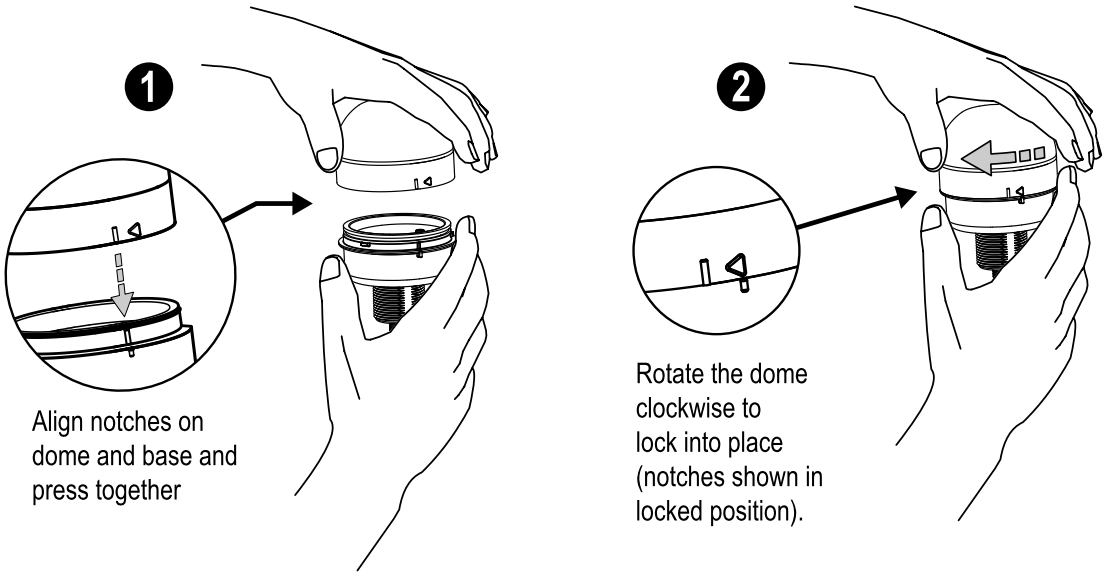


*DIP switches*

| Device Settings | DIP Switches | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Transmit Power Level (900 MHz only): 1 Watt (30 dBm) | ON* | | | | | | | |
| Transmit Power Level (900 MHz only): 250 mW (24 dBm), DX80 Compatibility mode | OFF | | | | | | | |
| Touch Button Function: Toggle | | ON* | ON* | | | | | |
| Touch Button Function: Momentary | | OFF | ON | | | | | |
| Touch Button Function: Latch | | ON | OFF | | | | | |
| Touch Button Function: Rising/Falling Edge Counter | | OFF | OFF | | | | | |
| Touch Feedback Control: Green | | | | ON* | ON* | ON* | | |
| Touch Feedback Control: Red | | | | OFF | ON | ON | | |
| Touch Feedback Control: Blue | | | | ON | OFF | ON | | |
| Touch Feedback Control: Yellow | | | | OFF | OFF | ON | | |
| Touch Feedback Control: White | | | | ON | ON | OFF | | |
| Touch Feedback Control: Cyan | | | | OFF | ON | OFF | | |
| Touch Feedback Control: Magenta | | | | ON | OFF | OFF | | |
| No Feedback | | | | OFF | OFF | OFF | | |
| Control Mode: Default Mode | | | | | | | ON* | ON* |

Continued on page 3


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

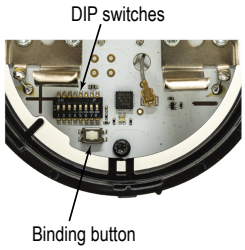Continued from page 2

| Device Settings | DIP Switches | | | | | | | |
|---|---|---|---|---|---|---|---|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Control Mode: Single Register Mode | | | | | | | OFF | ON |
| Control Mode: Pick Mode | | | | | | | ON | OFF |
| Control Mode: Demo Mode | | | | | | | OFF | OFF |

**Radio Transmit Power**—The 900 MHz radios have a high output option that will transmit at 500 mW (27 dBm). The low output option transmits at 250 mW (24 dBm). The 250 mW mode reduces the radio's range but improves the battery life in short-range applications. For 2.4 GHz models, this DIP switch is disabled. The transmit power for 2.4 GHz is fixed at about 65 mW EIRP (18 dBm).

**Toggle**—The input register toggles between a value of 0 (off) and 1 (on) with successive button presses or touches. Write a decimal value of 5377 to I/O 15 to clear the toggle to 0 or write a value of 5505 to alternate the current state of the toggle ( 0 to 1 or 1 to 0).

**Momentary**—The input register holds the value of the current state of the button. When the button is actively pressed or touched, the input register shows a value of 1. When the button is not pressed or touched, the input register shows a value of 0.

**Latch**—After an input is activated (register set to 1) with a button press or using Modbus messages, the input remains at 1 until cleared or alternated by writing a value of 5377 or 5505 respectively. Latching prevents a successive button press from setting the input back to 0.

For more details on Latch/Toggle controls, see the *Latch/Toggle Control for Push Button and Touch Button Inputs* technical note (p/n b_51135628).

**Rising/Falling Edge Counter**—The input register increments with each successive press. When the button is actively pressed or touched, the register increments by a value of 1, the register increments again by a value of 1 when the button is released. LEDs do not turn ON unless the touch feedback control is enabled and are only on while actively pressed or touched. Touch feedback for the LEDs follows Momentary touch functions.

## Install or Replace the Battery on a Wireless K70

To replace the lithium "C" cell battery in the K70, follow these steps.

1. Access the battery terminal by removing the dome. See "Assembling the K70" on page 2.
2. If applicable, remove the discharged battery.
3. Install the new battery.
4. Verify the positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case.
5. Allow up to 60 seconds for the device to turn on, or you can press and hold the binding button for five seconds to turn on the device.
6. Properly dispose of used batteries according to local regulations by taking it to a hazardous waste collection site, an e-waste disposal center, or other facility qualified to accept lithium batteries.




## Bind the K70 to the Gateway and Assign the Node Address

Before beginning the binding procedure, apply power to all the devices.

1. Enter binding mode.
   - For housed Gateways, triple-click button 2.
   - For board-level Gateway modules, triple-click the button.
   - For DXMs, under the **ISM Radio** menu, use the down arrow button to highlight the **Binding** menu. Click **ENTER**.

   On the board modules, the green/red LED flashes. On the housed models, both LEDs flash red.
2. Assign the K70 a Node address using the Gateway's rotary dials or the DXM's arrow keys.
   - On a Gateway: Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your K70 to Node 01, set the left dial to 0 and the right dial to 1.
   - On the DXM: Use the arrow keys to select the Node ID, then press **ENTER**. The display shows **Binding**.

   Valid Node addresses are 01 through 47.
3. Access the circuit board in the radio module of the K70.
4. Enter binding mode on the K70 by triple-clicking the binding button.

   The bicolor LED flashes alternately while it searches for a Gateway in binding mode. After the K70 is bound, the LED is red and green for four seconds (looks amber), then it flashes four times (looks amber). The K70 automatically exits binding mode, cycles power, and enters Run mode.
5. For DXMs, click **BACK** to exit binding for that specific Node address.
6. Label the Node with the assigned address for future references.

   This makes it easier to identify the physical Node location within a multi-Node network.
7. Reassemble the components back onto the base.
8. Repeat steps 2 through 5 for as many K70 Wireless Battery-Powered Touch Buttons as are needed for your network.





© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

9. After binding all K70s, exit binding mode on the Gateway.
    - For housed Gateways, double-click button 2.
    - For board-level Gateway modules, double-click the button.
    - For DXM models, click **BACK** until you return to the main menu.

## LED Behavior for the One LED Nodes

Nodes do not sample inputs until they are communicating with the Gateway. The radios and antennas must be a minimum distance apart to function properly.

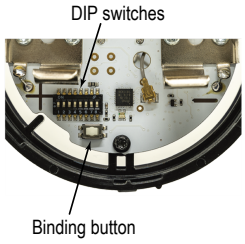Recommended minimum distances are:
900 MHz radio transmitting at ≤ 250 mW: 6 feet
900 MHz radios transmitting at ≥ 500 mW: 15 feet
2.4 GHz radios transmitting at 65 mW: 1 foot

| LED (Bi-color) | Node Status |
|---|---|
| Flashing green | Radio link okay |
| Green and red flashing alternately | In Binding mode |
| Both colors are solid for 4 seconds, then flash 4 times; looks amber | Binding mode is complete |
| Flashing red, once every 3 seconds | Radio link error |
| Flashing red, once every second | Device error |

# Modbus Registers

*Default Modbus holding registers*

| I/O | Modbus Holding Registers | | I/O Type | I/O Range | | Holding Register Representation (Dec.) | |
|---|---|---|---|---|---|---|---|
| | Gateway | Any Node | | Minimum | Maximum | Minimum | Maximum |
| 1 | 1 | 1 + (Node# × 16) | Touch Input or Rising/Falling Edge Counter | 0 | 65535 | 0 | 65535 |
| | | ... | | | | | |
| 7 | 7 | 7 + (Node# × 16) | Reserved | | | | |
| 8 | 8 | 8 + (Node# × 16) | Device Message | | | | |
| 9 | 9 | 9 + (Node# × 16) | Green light | 0 | 1 | 0 | 1 |
| 10 | 10 | 10 + (Node# × 16) | Red light | 0 | 1 | 0 | 1 |
| 11 | 11 | 11 + (Node# × 16) | Yellow light | 0 | 1 | 0 | 1 |
| 12 | 12 | 12 + (Node# × 16) | Blue light | 0 | 1 | 0 | 1 |
| | | ... | | | | | |
| 15 | 15 | 15 + (Node# × 16) | Control Message | | | | |
| 16 | 16 | 16 + (Node# × 16) | Reserved | | | | |

*Single register control or pick mode*

| Modbus Holding Registers | | | I/O Type | I/O Range | | Holding Register Representation (Dec.) | |
|---|---|---|---|---|---|---|---|
| I/O | Gateway | Node | | Minimum | Maximum | Minimum | Maximum |
| 1 | 1 | 1 + (Node# x 16) | Touch Input or Rising/Falling Edge Counter | 0 | 65535 | 0 | 65535 |
| | | ... | | | | | |
| 6 | 6 | 6 + (Node# x 16) | Output Feedback | 0 | 65535 | 0 | 65535 |
| 7 | 7 | 7 + (Node# x 16) | Reserved | | | | |
| 8 | 8 | 8 + (Node# x 16) | Device Message | | | | |
| | | ... | | | | | |
| 14 | 14 | 14 + (Node# x 16) | Single Register Control | 0 | 65535 | 0 | 65535 |
| 15 | 15 | 15 + (Node# x 16) | Control Message | | | | |
| 16 | 16 | 16 + (Node# x 16) | Reserved | | | | |

**Single register control**—Single register control combines all the output registers from the default I/O mode into a single register.

**Single register control word**—Use the single register control word to simultaneously control the light functions with a single command. For example, a decimal value of 1024 flashes the green LED and turns off all other LEDs. A decimal value of 40960 turns on the blue LED and turns off all other LEDs.


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

*Single register control word*

| | Flash/Solid | Not Used | Blue | Yellow | Red | Green | Not Used | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Bit Position | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | Decimal: 40960 (Hex: A000) | | | | | | | | | | | | | | | |

**Pick mode**—When a green pick request is sent via single register control, touching the capacitive touch button changes the K70 color to yellow latched. Single register control is used to turn the K70 back off. For example, write a value of 1024 to Register 14 to enable (green light on). The yellow light turns on to acknowledge locally (I/O 6, Output Feedback, changes to 4096). Write 1023 (or 0) to reset to the off state. Banner Engineering recommends setting the Touch Feedback Control to No Feedback when using Pick mode.

*Pick mode control word*

| | Flash/Solid | Not Used | Blue | Yellow | Red | Green | Not Used | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Bit Position | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| | 0 | 0 | 0 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| | Decimal: 1024 (Hex: 400) | | | | | | | | | | | | | | | |

# Specifications

**Supply Voltage**

3.6 V DC from an internal battery

**Supply Protection Circuitry**

Protected against transient voltages

**Operating Conditions**

–40 °C to +50 °C (–40 °F to +122 °F)

95% at +50 °C maximum relative humidity (non-condensing)

**Environmental Rating**

IP65

**Vibration and Mechanical Shock**

Vibration: 10 Hz to 55 Hz, 0.5 mm peak-to-peak amplitude per IEC 60068-2-6

Shock: 15G 11 ms duration, half sine wave per IEC 60068-2-27

**Construction**

Polycarbonate

**Mounting**

1/4-inch NPT base port for mounted applications

M30 × 1.5 threaded base, maximum torque 4.5 N·m (40 inch·lbf); mounting nut included

**Indicator Response Time**

Instant feedback indicator response triggered by capacitive touch button

**Indicators**

Green, Red, Yellow, Blue, White, cyan, and magenta

LEDs are independently selected

**Certifications**

CE/UKCA approval only applies to 2.4 GHz models

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

NOM approval only applies to 900 MHz models

**Radio Range**[1]

900 MHz (1 W): Up to 3.2 km (2 miles) with line of sight (internal antenna)

2.4 GHz (65 mW): Up to 1000 m (3280 ft) with line of sight (internal antenna)

[1] Range depends on the environment and decreases significantly without line-of-sight. Always verify your wireless network's range by performing a Site Survey.

**Antenna Minimum Separation Distance**

900 MHz radios transmitting at ≤ 250 mW: 2 m (6 ft) with the supplied antenna

900 MHz radios transmitting at ≥ 500 mW: 4.57 m (15 ft) with the supplied antenna

2.4 GHz radios transmitting at 65 mW: 0.3 m (1 ft) with the supplied antenna

**900 MHz Compliance (RM1809 Radio Module)**

Radio module is indicated by the product label marking

Contains FCC ID: UE3RM1809

Contains IC: 7044A-RM1809

IFT: RCPBARM13-2283

**2.4 GHz Compliance (DX80-2400 Radio Module)**

Radio module is indicated by the product label marking

Contains FCC ID: UE300DX80-2400

Radio Equipment Directive (RED) 2014/53/EU

Contains IC: 7044A-DX8024

**Radiated Immunity HF**

10 V/m (EN 61000-4-3)

**Spread Spectrum Technology**

FHSS (Frequency Hopping Spread Spectrum)

**Link Timeout (Performance)**

Gateway: Configurable via User Configuration Software

Node: Defined by Gateway


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

## Battery Life

| 900 MHz radios | 2.4 GHz radios |
|---|---|
| 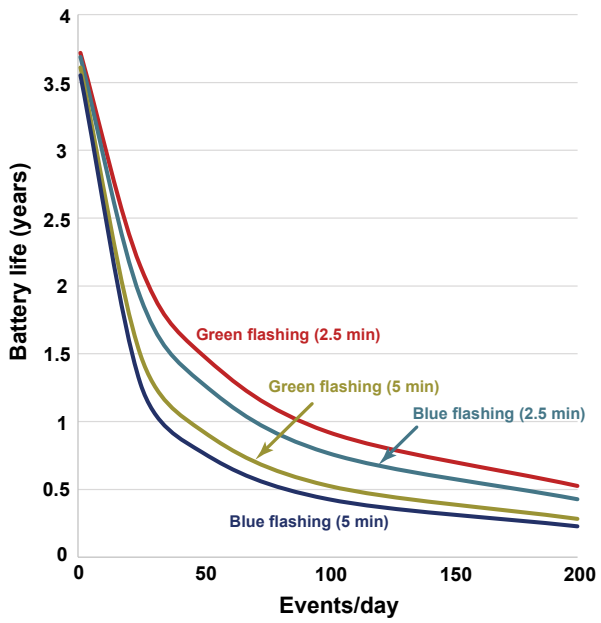 | 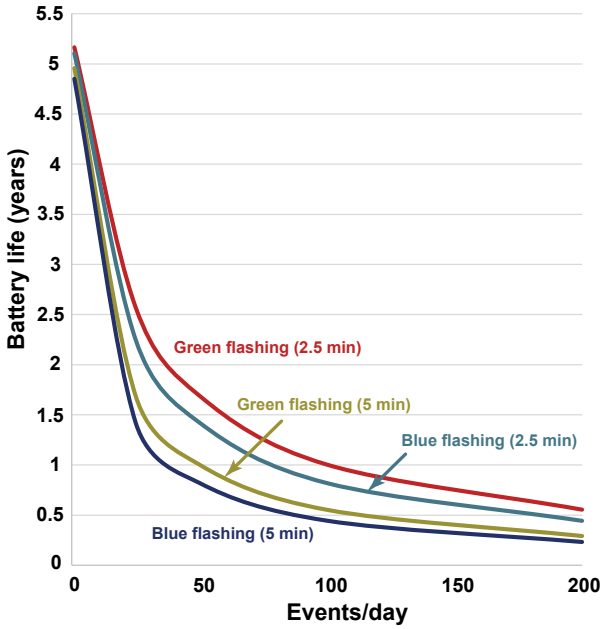 |



An event is defined as on for the specified time (2.5 minutes or 5 minutes) and then off for that same time interval. For example, one event is when the light is on for 5 minutes, then off for 5 minutes.

## Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.






# Accessories

## Brackets

All measurements are listed in millimeters, unless noted otherwise. The measurements provided are subject to change.

**LMB30LP**

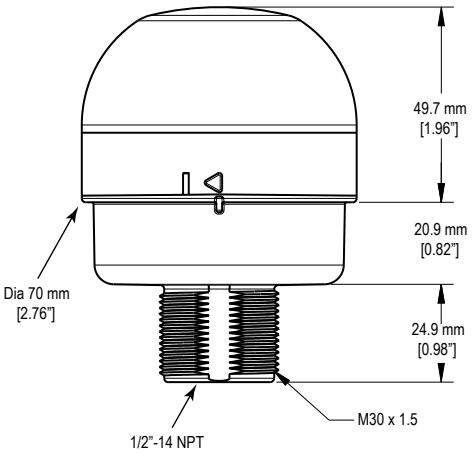- Low profile
- 30 mm mounting hole
- 300 series stainless steel
- CAD Files: DXF, PDF, IGS, STP

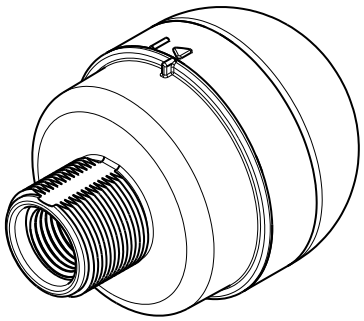



© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

**SMB30A**

- Right-angle bracket with curved slot for versatile orientation
- Clearance for M6 (¼ in) hardware
- Mounting hole for 30 mm sensor
- 12-gauge stainless steel
- CAD Files: DXF, PDF, IGS, STP

**Hole center spacing:** A to B=40
**Hole size:** A=ø 6.3, B= 27.1 × 6.3, C=ø 30.5

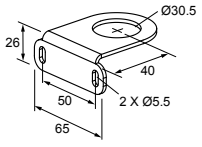


**SMB30MM**

- 12-gauge stainless steel bracket with curved mounting slots for versatile orientation
- Clearance for M6 (¼ in) hardware
- Mounting hole for 30 mm sensor
- CAD Files: DXF, PDF, IGS, STP

**Hole center spacing:** A=51, A to B=25.4
**Hole size:** A=42.6 × 7, B=ø 6.4, C=ø 30.1

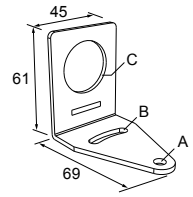


**SMBAMS30P**

- Flat SMBAMS series bracket
- 30 mm hole for mounting sensors
- Articulation slots for 90°+ rotation
- 12-gauge 300 series stainless steel
- CAD Files: DXF, PDF, IGS, STP

**Hole center spacing:** A=26.0, A to B=13.0
**Hole size:** A=26.8 × 7.0, B=ø 6.5, C=ø 31.0

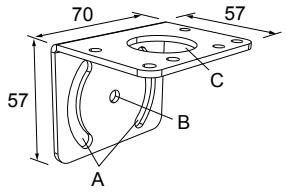


**SSA-MBK-EEC1**

- Single 30 mm hole
- 8 gauge steel, black finish (powder coat)
- Front surface for customer-applied labels
- CAD Files: DXF, PDF, IGS, STP

**Hole size:** A = ø 7 , B = ø 30

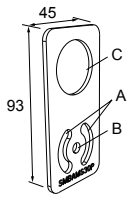


# Warnings (Internal Antenna Models)

**Exporting Sure Cross® Radios.** It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. **Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination country.** Consult with Banner Engineering Corp. if the destination country is not on this list.

**IMPORTANT:** Please download the complete K70 Wireless Battery-Powered Touch Button technical documentation, available in multiple languages, from www.bannerengineering.com for details on the proper use, applications, Warnings, and installation instructions of this device.

**IMPORTANT:** Por favor descargue desde www.bannerengineering.com toda la documentación técnica de los K70 Wireless Battery-Powered Touch Button, disponibles en múltiples idiomas, para detalles del uso adecuado, aplicaciones, advertencias, y las instrucciones de instalación de estos dispositivos.

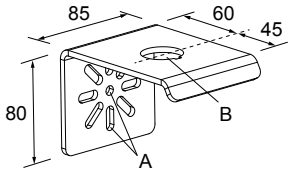**IMPORTANT:** Veuillez télécharger la documentation technique complète des K70 Wireless Battery-Powered Touch Button sur notre site www.bannerengineering.com pour les détails sur leur utilisation correcte, les applications, les notes de sécurité et les instructions de montage.

**WARNING:**

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

**IMPORTANT:**

- **Electrostatic discharge (ESD) sensitive device**
- ESD can damage the device. Damage from inappropriate handling is not covered by warranty.
- Use proper handling procedures to prevent ESD damage. Proper handling procedures include leaving devices in their anti-static packaging until ready for use; wearing anti-static wrist straps; and assembling units on a grounded, static-dissipative surface.

# Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

# Notas Adicionales (con Antena)

Información México: La operación de este equipo está sujeta a las siguientes dos condiciones: 1) es posible que este equipo o dispositivo no cause interferencia perjudicial y 2) este equipo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Banner es una marca registrada de Banner Engineering Corp. y podrán ser utilizadas de manera indistinta para referirse al fabricante. "Este equipo ha sido diseñado para operar con las antenas tipo Omnidireccional para una ganancia máxima de antena de 6 dBd y Yagi para una ganancia máxima de antena 10 dBd que en seguida se enlistan. También se incluyen aquellas con aprobación ATEX tipo Omnidireccional siempre que no excedan una ganancia máxima de antena de 6dBd. El uso con este equipo de antenas no incluidas en esta lista o que tengan una ganancia mayor que 6 dBd en tipo omnidireccional y 10 dBd en tipo Yagi, quedan prohibidas. La impedancia requerida de la antena es de 50 ohms."

**Approved Antennas**

- **BWA-9O2-C**--Antena, Omni 902-928 MHz, 2 dBd, junta de caucho, RP-SMA Macho
- **BWA-9O5-C**--Antena, Omni 902-928 MHz, 5 dBd, junta de caucho, RP-SMA Macho
- **BWA-9O6-A**--Antena, Omni 902-928 MHz, 6 dBd, fibra de vidrio, 1800mm, N Hembra
- **BWA-9Y10-A**--Antena, Yagi, 900 MHz, 10 dBd, N Hembra

# Mexican Importer

Banner Engineering de Mèxico, S. de R.L. de C.V. | David Alfaro Siqueiros 103 Piso 2 Valle oriente | San Pedro Garza Garcia Nuevo Leòn, C. P. 66269

81 8363.2714


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com