
Q45U Series

Special Products Model **Q45URB5**

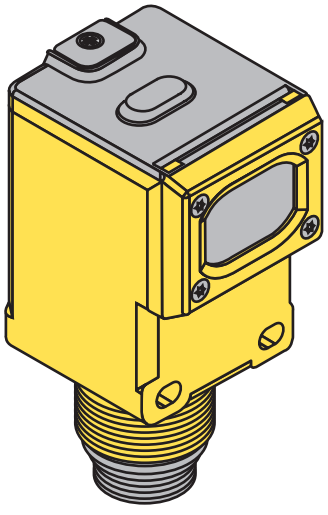

Modifications

- Output Card Function: N.O. SPST relay output contacts energized (closed) for as long as valid target is present
- Range: 10 to 72”
- Derived from model Q45URB5, p/n 19617.
- For further information see standard literature: 66627.
- This product has been modified from the standard product, for further information, contact the Applications Department at (763) 544-3164.

Installation Instructions:

1. Remove power to the sensor.
2. Loosen the screw holding the top cover closed and open top cover. View sensor from the back.
3. Pry inner top plate out of sensor using a small flat-bladed screwdriver in slots along plate's edge.
4. Pry old output card out of sensor using the same screwdriver in the notch in board's right side.
5. Install new output card by sliding it into the slot in the housing. Take care to seat it firmly down over the 10-pin connector in the sensor.
6. Reinstall the inner top plate. Close the top cover and retighten the screw holding it down.
7. Reapply power to the sensor.

⚠ WARNING . . . Not To Be Used for Personnel Protection

Never use these products as sensing devices for personnel protection. Doing so could lead to serious injury or death.

These sensors do NOT include the self-checking redundant circuitry necessary to allow their use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition. Consult your current Banner Safety Products catalog for safety products which meet OSHA, ANSI and IEC standards for personnel protection.

196236

Printed in USA 09/06/2016 P/N 196236 Rev. A

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com