SD50 with Modbus® Status Display Product Manual

Original Instructions
p/n: 242996 Rev. F
24-Sep-26
© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com

Contents

Chapter 1 Features 3
1.1 Models 3

Chapter 2 Wiring 4

Chapter 3 Modbus Register Map 5
3.1 Holding Register Column Definitions 5
3.2 Device Information 5
3.3 Modbus Configuration 6
3.4 Operation Mode 6
3.4.1 Run Mode 6
3.4.2 Message Mode 9
3.4.3 Level Mode 12
3.4.4 Timer Mode 25
3.4.5 Counter Mode 37
3.5 Display Settings 50
3.6 Custom Settings 50
3.6.1 Custom Color 1 Configuration 50
3.6.2 Custom Color 2 Configuration 51
3.6.3 Custom Audio Settings 51
3.7 Factory Reset 51

Chapter 4 Specifications 52
4.1 FCC Part 15 Class A for Unintentional Radiators 52
4.2 Industry Canada ICES-003(A) 52
4.3 Dimensions 53

Chapter 5 Accessories 54
5.1 Cordsets 54
5.2 Mounting Brackets 54

Chapter 6 Product Support and Maintenance 55
6.1 Encoding Table and Unicode Characters 55
6.2 Clean with Mild Detergent and Warm Water 58
6.3 Repairs and Translations (No Field-Replaceable Parts) 59
6.4 Contact Us 61
6.5 Banner Engineering Corp Limited Warranty 61
6.5.1 Mexican Importer 61

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Chapter 1 Features

Provide More Status Information in the Most Helpful Locations



- Easily configurable, versatile display can be installed nearly anywhere, making it a simple yet powerful alternative to complex HMIs and other displays
- Great for displaying takt time, equipment status, assembly sequences, counts, and measurements where they are most useful
- Integrates into many different systems and applications, especially Banner sensing, safety, and monitoring solutions
- Quick and easy configuration—simply define the desired text and call it via discrete control or process data
- Bright white LED display and multicolored status LEDs legible from 10 meters away inform operators about exactly what is going on so they can respond quickly and accurately
- IP65-rated polycarbonate housing resists impact and condensation to provide clear communication in challenging and changing environmental conditions

IMPORTANT: Read the following instructions before operating the light. Please download the complete SD50 with Modbus Status Display technical documentation, available in multiple languages, from www.bannerengineering.com for details on the proper use, applications, Warnings, and installation instructions of this device.

IMPORTANT: Lea el siguiente instructivo antes de operar el luminario. Por favor descargue desde www.bannerengineering.com toda la documentación técnica de los SD50 with Modbus Status Display, disponibles en múltiples idiomas, para detalles del uso adecuado, aplicaciones, advertencias, y las instrucciones de instalación de estos dispositivos.

IMPORTANT: Lisez les instructions suivantes avant d'utiliser le luminaire. Veuillez télécharger la documentation technique complète des SD50 with Modbus Status Display sur notre site www.bannerengineering.com pour les détails sur leur utilisation correcte, les applications, les notes de sécurité et les instructions de montage.

1.1 Models

Table 1. Model Key

Series	Height	Style	Display Length	Display Text Color	Control	Audible	Connector[1]
SD	**50**	**P**	**300**	**W**	**S**		**QP**
Status Display	50 mm height	P = Pro	300 = 300 mm	W = White	S = Modbus®	Blank = No audible A = Audible	QP = 150 mm (6 in) PVC-jacketed cable with a 4-pin M12 male quick-disconnect connector

[1] Models with a quick-disconnect connector require a mating cordset.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 2 Wiring

Table 2. Modbus Wiring

4-Pin Male M12 Pinout	Pinout Key and Wiring
	1. Brown - 12 V DC to 30 V DC 2. White - RS-485 (+) 3. Blue - DC Common 4. Black - RS-485 (-)

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 3 Modbus Register Map

3.1 Holding Register Column Definitions

Base 0 Address

Registers are addressed with the first register starting at zero

Base 1 Address

Registers are addressed with the first register starting at one

Description

Lists the functionality of the register

Holding Register Representation

Lists the allowed values of the register and the definition of those values

Default Value

Lists the factory default value of the register

Saved

Yes: The register value is stored in non-volatile memory, and is preserved when power is cycled
No: The register value is stored in volatile memory, and is reset to the default value when power is cycled

Access

Read Only (RO): The register can be read, but not written to
Read and Write (RW): The register can be read and written to

3.2 Device Information

The following registers list the model name and other device-specific information.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
40606-40615	40607-40616	Banner Name		Banner Engineering	Yes	RO
40616-40631	40617-40632	Product Name		See Device	Yes	RO
40632	40633	Item H	Item Number is split into two 16-bit registers	See Device	Yes	RO
40633	40634	Item L		See Device	Yes	RO
40634	40635	Serial Number 1 (H)		See Device	Yes	RO
40635	40636	Serial Number 2		See Device	Yes	RO
40636	40637	Serial Number 3		See Device	Yes	RO
40637	40638	Serial Number 4 (L)		See Device	Yes	RO
40638	40639	Firmware PN H	230038 is split into two 16-bit registers	See Device	Yes	RO
40639	40640	Firmware PN L		See Device	Yes	RO
40640	40641	Firmware Version H		See Device	Yes	RO
40641	40642	Firmware Version L		See Device	Yes	RO
40642	40643	Firmware Build Number H		See Device	Yes	RO
40643	40644	Firmware Build Number L		See Device	Yes	RO
40644-40659	40645-40660	User-Defined Tag	User writable space	More Sensors. More Solutions.	Yes	RW

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

3.3 Modbus Configuration

Use these registers to configure Modbus communications.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
46100	46101	Address	1-254	1	Yes	RW
46101	46102	Baud Rate	96 = 9.6k 192 = 19.2k 384 = 38.4k	192	Yes	RW
46102	46103	Parity	0 = None 1 = Odd 2 = Even	0	Yes	RW
46103	46104	Stop Bits	1 = 1 Bit 2 = 2 Bits 3 = 1.5 Bits	1	Yes	RW

3.4 Operation Mode

Use this register to select the main operation mode of the device.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42200	42201	Operation Mode	0 = Run Mode 1 = Message Mode 2 = Level Mode 3 = Timer Mode 4 = Counter Mode	0	Yes	RW

3.4.1 Run Mode

Use one register to activate the defined device state. Use additional non-volatile registers to define color, intensity, animation, and display message.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42000	42001	Run Mode Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	No	RW	

Continued on page 7

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 6

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42001	42002	Run Mode Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	No	RW	
42002	42003	Run Mode Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	No	RW	
42003	42004	Run Mode Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	0	No	RW	
42004	42005	Run Mode Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	No	RW	

Continued on page 8

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 7

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42005	42006	Run Mode Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	No	RW	
42006	42007	Run Mode Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	No	RW	
42008	42009	Run Mode Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	0	No	RW	For non-audible models, this register is part of the Run Mode String
42009-42023	42010-42024	Run Mode String	Example: Register 42009: 0x4241 (hex) = BA Register 42010: 0x4E4E (hex) = NN Register 42011: 0x4552 (hex) = ER See "Encoding Table and Unicode Characters" on page 55	0x0000	No	RW	(15 words / 30 Characters)

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

3.4.2 Message Mode

Use one register to activate the defined device state. Use additional non-volatile registers to define color, intensity, animation, and display saved messages.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42000	42001	Message Mode Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	No	RW	
42001	42002	Message Mode Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	No	RW	
42002	42003	Message Mode Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	No	RW	
42003	42004	Message Mode Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	0	No	RW	
42004	42005	Message Mode Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	No	RW	

Continued on page 10

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 9

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42005	42006	Message Mode Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	No	RW	
42006	42007	Message Mode Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	No	RW	
42008	42009	Message Mode Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	0	No	RW	For non-audible models, this register is Message Mode Message 2

Continued on page 11

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 10

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42009	42010	Message Mode Message 1	0 = Message 0 (Blank) 1 = Message 1 2 = Message 2 3 = Message 3 4 = Message 4 5 = Message 5 6 = Message 6 7 = Message 7 8 = Message 8 9 = Message 9 10 = Message 10 11 = Message 11 12 = Message 12 13 = Message 13 14 = Message 14	0	No	RW	
42010	42011	Message Mode Message 2	0 = Message 0 (Blank) 1 = Message 1 2 = Message 2 3 = Message 3 4 = Message 4 5 = Message 5 6 = Message 6 7 = Message 7 8 = Message 8 9 = Message 9 10 = Message 10 11 = Message 11 12 = Message 12 13 = Message 13 14 = Message 14	0	No	RW	

Message Mode Messages

Use the following registers to define each of the fifteen available messages.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42400-42415	42401-42416	Message 0 (BLANK)			Yes	RW	(16 words/ 32 characters)
42416-42431	42417-42432	Message 1		Reset	Yes	RW	(16 words/ 32 characters)
42432-42447	42432-42448	Message 2		Fault	Yes	RW	(16 words/ 32 characters)

Continued on page 12

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 11

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42448-42463	42449-42464	Message 3		Stop	Yes	RW	(16 words/ 32 characters)
42464-42479	42465-42480	Message 4		Start	Yes	RW	(16 words/ 32 characters)
42480-42495	42481-42496	Message 5		Changeover	Yes	RW	(16 words/ 32 characters)
42496-42511	42497-42512	Message 6		Open	Yes	RW	(16 words/ 32 characters)
42512-42527	42513-42528	Message 7		Welcome	Yes	RW	(16 words/ 32 characters)
42528-42543	42529-42544	Message 8		Quality	Yes	RW	(16 words/ 32 characters)
42544-42559	42545-42590	Message 9		Warning	Yes	RW	(16 words/ 32 characters)
42560-42575	42561-42576	Message 10		Alarm	Yes	RW	(16 words/ 32 characters)
42576-42591	42577-42592	Message 11		Break	Yes	RW	(16 words/ 32 characters)
42592-42607	42593-42608	Message 12		Run	Yes	RW	(16 words/ 32 characters)
42608-42623	42609-42624	Message 13		Maintenance	Yes	RW	(16 words/ 32 characters)
42624-42639	42625-42640	Message 14		Closed	Yes	RW	(16 words/ 32 characters)
42640-42655	42641-42656	Message 15		Material	Yes	RW	(16 words/ 32 characters)

3.4.3 Level Mode

Use Level Mode to display a level based on a scaled input value.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42000	42001	Level Mode Value	0-65535	0	No	RW

Level Mode General Configuration

Use these registers to set the filter, labels, bar graph, and other settings of Level Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42700	42701	Filter Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	

Continued on page 13

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 12

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42701	42702	Hysteresis Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	
42702-42709	42703-42710	Level Mode Data Label		Time =	Yes	RW	(8 words/ 16 characters)
42710	42711	Level Mode Value	0 = Disabled 1 = Enabled	1	Yes	RW	
42711	42712	Level Mode Bar Graph	0 = Disabled 1 = Enabled	1	Yes	RW	
42712	42713	Output Scale Value Low	0-65535	0	Yes	RW	
42713	42714	Output Scale Value High	0-65535	10	Yes	RW	
42714	42715	Input Scale Value Low	0-65535	0	Yes	RW	
42715	42716	Input Scale Value High	0-65535	65535	Yes	RW	
42716-42717	42717-42718	Level Mode Value Label		s	Yes	RW	(2 words/4 characters)
42718	42719	Level Mode Display Orientation	0 = 0 degrees 1 = 180 degrees 2 = 90 degrees 3 = 270 degrees	0	Yes	RW	
42719	42720	Level Mode Minimal Bar Graph	0 = Disabled 1 = Enabled	0	Yes	RW	
42720	42721	Level Mode Decimal Places	0-3	1	Yes	RW	
42721	42722	Level Mode Display As Time	0 = Disabled 1 = Enabled	0	Yes	RW	

Level Mode Base Configuration

Use these registers to set the colors, animations, and audible for Level Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42722	42723	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42723-42738	42724-42739	Override String		Base	Yes	RW	(16 words/ 32 characters)
42739	42740	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	

Continued on page 14

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 13

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42740	42741	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42741	42742	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42742	42743	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42743	42744	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 15

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 14

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42744	42745	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42745	42746	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42747	42748	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Level Mode Threshold 1 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42748	42749	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42749	42750	Percent	0-100	25	Yes	RW	

Continued on page 16

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 15

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42750	42751	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42751	42752	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42752	42753	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42753-42768	42754-42769	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42769	42770	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42770	42771	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42771	42772	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42772	42773	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	

Continued on page 17

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 16

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42773	42774	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42774	42775	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42775	42776	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42777	42778	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Level Mode Threshold 2 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42778	42779	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42779	42780	Percent	0-100	25	Yes	RW	
42780	42781	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42781	42782	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42782	42783	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42783-42798	42784-42799	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42799	42800	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42800	42801	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42801	42802	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 18

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 18

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42802	42803	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42803	42804	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42804	42805	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42805	42806	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 20

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 19

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42807	42808	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Level Mode Threshold 3 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42808	42809	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42809	42810	Percent	0-100	25	Yes	RW	
42810	42811	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42811	42812	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42812	42813	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42813-42828	42814-42829	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42829	42830	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	

Continued on page 21

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 20

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42830	42831	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42831	42832	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42832	42833	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42833	42834	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 22

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 21

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42834	42835	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42835	42836	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42837	42838	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Level Mode Threshold 4 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42838	42839	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42839	42840	Percent	0-100	25	Yes	RW	

Continued on page 23

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 22

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42840	42841	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42841	42842	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42842	42843	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42843-42858	42844-42859	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42859	42860	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42860	42861	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42861	42862	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42862	42863	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	

Continued on page 24

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 23

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42863	42864	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42864	42865	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42865	42866	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42867	42868	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

3.4.4 Timer Mode

Use these registers to set the inputs and value of Timer Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42000	42001	Run/Pause Input	0 = Off (Paused) 1 = On (Counting)	0	No	RW
42001	42002	Reset Input	0 = Off 1 = On	0	No	RW
42900	42901	Timer Value	0-65535		Yes	RW

Timer Mode Settings

Use these registers to set the units, direction, and reset of Timer Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42901	42902	Timer Unit Type	0 = Days 1 = Hours 2 = Minutes 3 = Seconds	0	Yes	RW
42902	42903	Timer Count Type	0 = Down 1 = Up	0	Yes	RW
42903	42904	Enable Auto Reset	0 = Disabled 1 = Enabled	0	Yes	RW

Timer Mode General Configuration

Use these registers to set the filter, labels, bar graph, and other settings of Timer Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42700	42701	Filter Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	
42701	42702	Hysteresis Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	
42702-42709	42703-42710	Timer Mode Data Label		Time =	Yes	RW	(8 words/ 16 characters)
42710	42711	Timer Mode Value	0 = Disabled 1 = Enabled	1	Yes	RW	
42711	42712	Timer Mode Bar Graph	0 = Disabled 1 = Enabled	1	Yes	RW	
42712	42713	Output Scale Value Low	0-65535	0	Yes	RW	
42713	42714	Output Scale Value High	0-65535	10	Yes	RW	
42714	42715	Input Scale Value Low	0-65535	0	Yes	RW	
42715	42716	Input Scale Value High	0-65535	65535	Yes	RW	
42716-42717	42717-42718	Timer Mode Value Label		s	Yes	RW	(2 words/4 characters)

Continued on page 26

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 25

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42718	42719	Timer Mode Display Orientation	0 = 0 degrees 1 = 180 degrees 2 = 90 degrees 3 = 270 degrees	0	Yes	RW	
42719	42720	Timer Mode Minimal Bar Graph	0 = Disabled 1 = Enabled	0	Yes	RW	
42720	42721	Timer Mode Decimal Places	0-3	1	Yes	RW	
42721	42722	Timer Mode Display As Time	0 = Disabled 1 = Enabled	0	Yes	RW	

Timer Mode Base Configuration

Use these registers to set the colors, animations, and audible of Timer Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42722	42723	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42723-42738	42724-42739	Override String		Base	Yes	RW	(16 words/ 32 characters)
42739	42740	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42740	42741	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	

Continued on page 27

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 26

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42741	42742	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42742	42743	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42743	42744	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42744	42745	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42745	42746	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 28

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 27

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42747	42748	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Timer Mode Threshold 1 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42748	42749	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42749	42750	Percent	0-100	25	Yes	RW	
42750	42751	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42751	42752	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42752	42753	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42753-42768	42754-42769	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42769	42770	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	

Continued on page 29

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 28

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42770	42771	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42771	42772	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42772	42773	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42773	42774	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 30

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 29

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42774	42775	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42775	42776	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42777	42778	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Timer Mode Threshold 2 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42778	42779	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42779	42780	Percent	0-100	25	Yes	RW	

Continued on page 31

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 30

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42780	42781	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42781	42782	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42782	42783	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42783-42798	42784-42799	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42799	42800	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42800	42801	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42801	42802	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42802	42803	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	

Continued on page 32

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 31

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42803	42804	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42804	42805	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42805	42806	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42807	42808	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Timer Mode Threshold 3 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42808	42809	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42809	42810	Percent	0-100	25	Yes	RW	
42810	42811	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42811	42812	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42812	42813	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42813-42828	42814-42829	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42829	42830	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42830	42831	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42831	42832	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 33

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 33

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42832	42833	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42833	42834	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42834	42835	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42835	42836	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 35

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 34

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42837	42838	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Timer Mode Threshold 4 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42838	42839	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42839	42840	Percent	0-100	25	Yes	RW	
42840	42841	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42841	42842	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42842	42843	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42843-42858	42844-42859	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42859	42860	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	

Continued on page 36

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 35

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42860	42861	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42861	42862	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42862	42863	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42863	42864	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 37

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 36

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42864	42865	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42865	42866	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42867	42868	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

3.4.5 Counter Mode

Use Counter Mode to count up or down from a value based on an input signal.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42000	42001	Count Increment Input	0 = Off, 1 = Count Up (Pulse)	0	No	RW	Must be pulsed
42001	42002	Count Decrement Input	0 = Off, 1 = Count Down (Pulse)	0	No	RW	Must be pulsed

Continued on page 38

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 37

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42002	42003	Reset Input	0 = Off, 1 = Reset Count	0	No	RW	
43000	43001	Count Value			No	RO	Combined into a 32-bit floating-point value output
43001	43002	Count Value			No	RO	

Counter Mode General Configuration

Use these registers to set the labels, filtering, bar graph, and other settings of Counter Mode.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42700	42701	Filter Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	
42701	42702	Hysteresis Level	0 = None 1 = Low 2 = Medium 3 = High	0	Yes	RW	
42702-42709	42703-42710	Counter Mode Data Label		Time =	Yes	RW	(8 words/ 16 characters)
42710	42711	Counter Mode Value	0 = Disabled 1 = Enabled	1	Yes	RW	
42711	42712	Counter Mode Bar Graph	0 = Disabled 1 = Enabled	1	Yes	RW	
42712	42713	Output Scale Value Low	0-65535	0	Yes	RW	
42713	42714	Output Scale Value High	0-65535	10	Yes	RW	
42714	42715	Input Scale Value Low	0-65535	0	Yes	RW	
42715	42716	Input Scale Value High	0-65535	65535	Yes	RW	
42716-42717	42717-42718	Counter Mode Value Label		s	Yes	RW	(2 words/4 characters)
42718	42719	Counter Mode Display Orientation	0 = 0 degrees 1 = 180 degrees 2 = 90 degrees 3 = 270 degrees	0	Yes	RW	
42719	42720	Counter Mode Minimal Bar Graph	0 = Disabled 1 = Enabled	0	Yes	RW	
42720	42721	Counter Mode Decimal Places	0-3	1	Yes	RW	
42721	42722	Counter Mode Display As Time	0 = Disabled 1 = Enabled	0	Yes	RW	

Counter Mode Base Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42722	42723	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	

Continued on page 39

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 38

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42723-42738	42724-42739	Override String		Base	Yes	RW	(16 words/ 32 characters)
42739	42740	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42740	42741	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42741	42742	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42742	42743	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42743	42744	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 40

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 39

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42744	42745	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42745	42746	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42747	42748	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Counter Mode Threshold 1 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42748	42749	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42749	42750	Percent	0-100	25	Yes	RW	

Continued on page 41

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 40

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42750	42751	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42751	42752	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42752	42753	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42753-42768	42754-42769	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42769	42770	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42770	42771	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42771	42772	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42772	42773	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	

Continued on page 42

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 41

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42773	42774	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42774	42775	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42775	42776	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42777	42778	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Counter Mode Threshold 2 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42778	42779	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42779	42780	Percent	0-100	25	Yes	RW	
42780	42781	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42781	42782	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42782	42783	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42783-42798	42784-42799	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42799	42800	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42800	42801	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42801	42802	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 43

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 43

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42802	42803	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42803	42804	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42804	42805	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42805	42806	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	

Continued on page 45

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 44

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42807	42808	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Counter Mode Threshold 3 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42808	42809	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42809	42810	Percent	0-100	25	Yes	RW	
42810	42811	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42811	42812	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42812	42813	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42813-42828	42814-42829	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42829	42830	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	

Continued on page 46

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 45

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42830	42831	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42831	42832	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42832	42833	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	
42833	42834	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	

Continued on page 47

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 46

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42834	42835	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42835	42836	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42837	42838	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

Counter Mode Threshold 4 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42838	42839	Is Enabled	0 = Disabled 1 = Enabled	1	Yes	RW	
42839	42840	Percent	0-100	25	Yes	RW	

Continued on page 48

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 47

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42840	42841	Type	0 = Less Than or Equal To 1 = Greater Than	0	Yes	RW	
42841	42842	Threshold Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42842	42843	Display Override	0 = Disabled 1 = Enabled	0	Yes	RW	
42843-42858	42844-42859	Override String		Thresh 1	Yes	RW	(16 words/ 32 characters)
42859	42860	Animation	0 = Off 1 = Steady 2 = Flash 3 = Two Color Flash 4 = 50/50 5 = 50/50 Flash 6 = Intensity Sweep 7 = Two Color Sweep	0	Yes	RW	
42860	42861	Color 1	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42861	42862	Color 1 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42862	42863	Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW	

Continued on page 49

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 48

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access	Comments
42863	42864	Pattern	0 = Normal 1 = Strobe 2 = 3-Pulse 3 = SOS 4 = Random	0	Yes	RW	
42864	42865	Color 2	0 = Green 1 = Red 2 = Orange 3 = Amber 4 = Yellow 5 = Lime Green 6 = Spring Green 7 = Cyan 8 = Sky Blue 9 = Blue 10 = Violet 11 = Magenta 12 = Rose 13 = Daylight White 14 = Custom 1 15 = Custom 2	0	Yes	RW	
42865	42866	Color 2 Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW	
42867	42868	Audio Type	1 = Continuous 1 2 = Continuous 2 3 = Whoop 4 = Staccato 5 = Siren 6 = Pulse 7 = Wobble 8 = Strobe 9 = Jingle 10 = Melody 1 11 = Melody 2 12 = Melody 3 13 = Custom	8	Yes	RW	

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

3.5 Display Settings

Use these registers to set the general Display Settings for the device.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42300	42301	Text Color	0 = White 1 = Black	0	Yes	RW
42301	42302	Intensity	0 = High 1 = Medium 2 = Low 3 = Off 4 = Custom	0	Yes	RW
42302	42303	Scroll Direction	0 = Away From Connector 1 = Towards Connector	0	Yes	RW
42303	42304	Scroll Speed	0 = Slow 1 = Standard 2 = Fast 3 = Custom	1	Yes	RW
42304	42305	Mirrored Text	0 = Disable 1 = Enabled			
42305	42306	Scroll Mode	0 = Auto 1 = On 2 = Off			
42306	42307	Orientation	0 = 0 Degrees 1 = 180 Degrees 2 = 90 Degrees 3 = 270 Degrees			
42307	42308	Justification	0 = Left 1 = Right 2 = Center	0	Yes	RW

3.6 Custom Settings

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42904	42905	Custom Intensity	0-100	100	RW	Yes
42905	42906	Custom Flash Rate (dHz)	1-255	10	RW	Yes
42906	42907	Custom Display Intensity	0-100	100	RW	Yes
42907	42908	Custom Display Scroll Speed	0-255	15	RW	Yes

3.6.1 Custom Color 1 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42908	42909	Custom Color 1 Red	0-255	255	RW	Yes
42909	42910	Custom Color 1 Green	0-255	255	RW	Yes

Continued on page 51

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 50

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42910	42911	Custom Color 1 Blue	0-255	255	RW	Yes

3.6.2 Custom Color 2 Configuration

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42911	42912	Custom Color 2 Red	0-255	255	RW	Yes
42912	42913	Custom Color 2 Green	0-255	255	RW	Yes
42913	42914	Custom Color 2 Blue	0-255	255	RW	Yes

3.6.3 Custom Audio Settings

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
42914	42915	Type	0 = Beep 1 = Sweep 2 = Tone	0	Yes	RW
42915	42916	Sweep Type	0 = Up 1 = Down 2 = Up Down 3 = Down Up	0	Yes	RW
42916	42917	Frequency 1	0 = Off 1 = Low 2 = Standard 3 = High	0	Yes	RW
42917	42918	Frequency 2	0 = Off 1 = Low 2 = Standard 3 = High	0	Yes	RW

3.7 Factory Reset

To restore the device's configuration to factory settings, write 1 to the following register.

Base 0 Address	Base 1 Address	Description	Holding Register Representation	Default Value	Saved	Access
40605	40606	Factory Reset	0 = Disabled 1 = Enabled	0	Yes	RW

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 4 Specifications

Supply Voltage
12 V DC to 30 V DC

Use only with a suitable Class 2 power supply (UL) or SELV power supply (CE)

See the electrical characteristics on the product label.

Supply Current
550 mA max. at 12 V DC

260 mA max. at 24 V DC

210 mA max. at 30 V DC

Connections
150 mm (6 in) PVC-jacketed cable with a 4-pin M12 male quick-disconnect connector

Models with a quick-disconnect connector require a mating cordset

Do not spray cable with high-pressure sprayer or cable damage will result

Operating Temperature
–20 °C to +50 °C (–4 °F to +122 °F)

Storage Temperature
–40 °C to +70 °C (–40 °F to +158 °F)

Environmental Rating
Rated IP65

Suitable for damp locations per UL 2108

Vibration and Mechanical Shock
Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 1.0 mm amplitude, 5 minutes sweep, 30 minutes dwell)

Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Construction
Black polycarbonate housing and end caps

Internal silicone-encapsulated LEDs

Smoky polycarbonate window

Character Limit
Run Mode: 29 characters

All other Modes: 32 characters

Audible Characteristics
Typical sound intensity at 1 m: 77 dB

Certifications

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

Required Overcurrent Protection

WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (A)	Supply Wiring (AWG)	Required Overcurrent Protection (A)
20	5.0	26	1.0
22	3.0	28	0.8
24	2.0	30	0.5

Mounting
M5 and 1/4-20 compatible end caps (not included)

Clip brackets for mounting are available

4.1 FCC Part 15 Class A for Unintentional Radiators

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

(Part 15.21) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

4.2 Industry Canada ICES-003(A)

This device complies with CAN ICES-3 (A)/NMB-3(A). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme NMB-3(A). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

4.3 Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

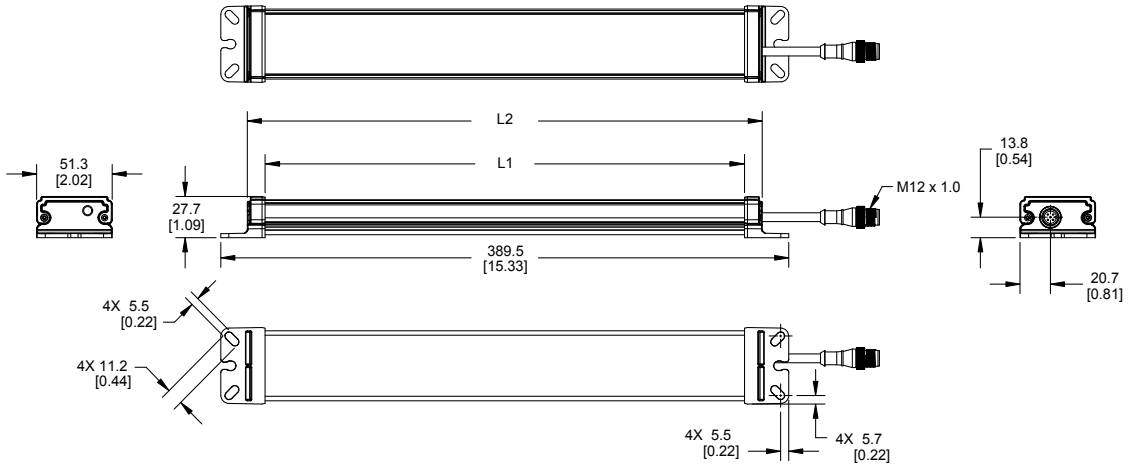

Models	L1	L2
SD50..300..	329.5 mm (12.97 in)	353.5 mm (13.92 in)

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 5 Accessories

5.1 Cordsets

4-Pin A-Code Double-Ended M12 Female to M12 Male Cordsets (datasheet p/n 236186)				
Model	**Length**	**Dimensions (mm)**	**Pinouts**	
BC-M12F4-M12M4-22-1	1 m (3.28 ft)	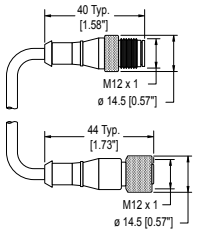	Female  Male 	1 = Brown 2 = White 3 = Blue 4 = Black 5 = Unused c UL us LISTED
BC-M12F4-M12M4-22-2	2 m (6.56 ft)			
BC-M12F4-M12M4-22-3	3 m (9.84 ft)			
BC-M12F4-M12M4-22-4	4 m (13.12 ft)			
BC-M12F4-M12M4-22-5	5 m (16.4 ft)			
BC-M12F4-M12M4-22-10	10 m (30.81 ft)			
BC-M12F4-M12M4-22-15	15 m (49.2 ft)			

5.2 Mounting Brackets

LMBSD50
- Metal mounting bracket kit
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

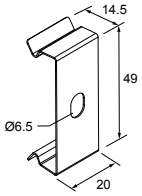

LMBSD50MAG
- Magnetic mounting bracket kit
- Up to 7.26 kg (16 lb) pull
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

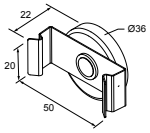

LMBSD50-180S
- Metal mounting bracket kit with 180-degree rotation
- Stainless steel
- Hardware included
- CAD Files: DXF, PDF, IGS, STP

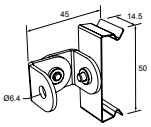

LMBSD50-180SMAG
- Magnetic mounting bracket kit with 180-degree rotation
- Stainless steel
- Up to 7.26 kg (16 lb) pull
- Hardware included
- CAD Files: DXF, PDF, IGS, STP



© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Chapter 6 Product Support and Maintenance

6.1 Encoding Table and Unicode Characters

Unicode Code Point	Character	Name
U+0020		SPACE
U+0021	!	EXCLAMATION MARK
U+0022	"	QUOTATION MARK
U+0023	#	NUMBER SIGN
U+0024	$	DOLLAR SIGN
U+0025	%	PERCENT SIGN
U+0026	&	AMPERSAND
U+0027	'	APOSTROPHE
U+0028	(	LEFT PARENTHESIS
U+0029	)	RIGHT PARENTHESIS
U+002A	*	ASTERISK
U+002B	+	PLUS SIGN
U+002C	,	COMMA
U+002D	-	HYPHEN-MINUS
U+002E	.	FULL STOP
U+002F	/	SOLIDUS
U+0030	0	DIGIT ZERO
U+0031	1	DIGIT ONE
U+0032	2	DIGIT TWO
U+0033	3	DIGIT THREE
U+0034	4	DIGIT FOUR
U+0035	5	DIGIT FIVE
U+0036	6	DIGIT SIX
U+0037	7	DIGIT SEVEN
U+0038	8	DIGIT EIGHT
U+0039	9	DIGIT NINE
U+003A	:	COLON
U+003B	;	SEMICOLON
U+003C	<	LESS-THAN SIGN
U+003D	=	EQUALS SIGN
U+003E	>	GREATER-THAN SIGN
U+003F	?	QUESTION MARK
U+0040	@	COMMERCIAL AT
U+0041	A	LATIN CAPITAL LETTER A
U+0042	B	LATIN CAPITAL LETTER B
U+0043	C	LATIN CAPITAL LETTER C
U+0044	D	LATIN CAPITAL LETTER D
U+0045	E	LATIN CAPITAL LETTER E
U+0046	F	LATIN CAPITAL LETTER F
U+0047	G	LATIN CAPITAL LETTER G
U+0048	H	LATIN CAPITAL LETTER H
U+0049	I	LATIN CAPITAL LETTER I
U+004A	J	LATIN CAPITAL LETTER J
U+004B	K	LATIN CAPITAL LETTER K

Continued on page 56

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 55

Unicode Code Point	Character	Name
U+004C	L	LATIN CAPITAL LETTER L
U+004D	M	LATIN CAPITAL LETTER M
U+004E	N	LATIN CAPITAL LETTER N
U+004F	O	LATIN CAPITAL LETTER O
U+0050	P	LATIN CAPITAL LETTER P
U+0051	Q	LATIN CAPITAL LETTER Q
U+0052	R	LATIN CAPITAL LETTER R
U+0053	S	LATIN CAPITAL LETTER S
U+0054	T	LATIN CAPITAL LETTER T
U+0055	U	LATIN CAPITAL LETTER U
U+0056	V	LATIN CAPITAL LETTER V
U+0057	W	LATIN CAPITAL LETTER W
U+0058	X	LATIN CAPITAL LETTER X
U+0059	Y	LATIN CAPITAL LETTER Y
U+005A	Z	LATIN CAPITAL LETTER Z
U+005B	[	LEFT SQUARE BRACKET
U+005C	\	REVERSE SOLIDUS
U+005D	]	RIGHT SQUARE BRACKET
U+005E	^	CIRCUMFLEX ACCENT
U+005F	_	LOW LINE
U+0060	`	GRAVE ACCENT
U+0061	a	LATIN SMALL LETTER A
U+0062	b	LATIN SMALL LETTER B
U+0063	c	LATIN SMALL LETTER C
U+0064	d	LATIN SMALL LETTER D
U+0065	e	LATIN SMALL LETTER E
U+0066	f	LATIN SMALL LETTER F
U+0067	g	LATIN SMALL LETTER G
U+0068	h	LATIN SMALL LETTER H
U+0069	i	LATIN SMALL LETTER I
U+006A	j	LATIN SMALL LETTER J
U+006B	k	LATIN SMALL LETTER K
U+006C	l	LATIN SMALL LETTER L
U+006D	m	LATIN SMALL LETTER M
U+006E	n	LATIN SMALL LETTER N
U+006F	o	LATIN SMALL LETTER O
U+0070	p	LATIN SMALL LETTER P
U+0071	q	LATIN SMALL LETTER Q
U+0072	r	LATIN SMALL LETTER R
U+0073	s	LATIN SMALL LETTER S
U+0074	t	LATIN SMALL LETTER T
U+0075	u	LATIN SMALL LETTER U
U+0076	v	LATIN SMALL LETTER V
U+0077	w	LATIN SMALL LETTER W
U+0078	x	LATIN SMALL LETTER X
U+0079	y	LATIN SMALL LETTER Y
U+007A	z	LATIN SMALL LETTER Z
U+007B	{	LEFT CURLY BRACKET
U+007C	|	VERTICAL LINE
U+007D	}	RIGHT CURLY BRACKET
U+007E	~	TILDE

Continued on page 57

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 56

Unicode Code Point	Character	Name
U+00A0		NO-BREAK SPACE
U+00A1	¡	INVERTED EXCLAMATION MARK
U+00A2	¢	CENT SIGN
U+00A3	£	POUND SIGN
U+00A4	¤	CURRENCY SIGN
U+00A5	¥	YEN SIGN
U+00A6	¦	BROKEN BAR
U+00A7	§	SECTION SIGN
U+00A8	¨	DIAERESIS
U+00A9	©	COPYRIGHT SIGN
U+00AA	ª	FEMININE ORDINAL INDICATOR
U+00AB	«	LEFT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00AC	¬	NOT SIGN
U+00AD		SOFT HYPHEN
U+00AE	®	REGISTERED SIGN
U+00AF	¯	MACRON
U+00B0	°	DEGREE SIGN
U+00B1	±	PLUS-MINUS SIGN
U+00B2	²	SUPERSCRIPT TWO
U+00B3	³	SUPERSCRIPT THREE
U+00B4	´	ACUTE ACCENT
U+00B5	µ	MICRO SIGN
U+00B6	¶	PILCROW SIGN
U+00B7	·	MIDDLE DOT
U+00B8	¸	CEDILLA
U+00B9	¹	SUPERSCRIPT ONE
U+00BA	º	MASCULINE ORDINAL INDICATOR
U+00BB	»	RIGHT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00BC	¼	VULGAR FRACTION ONE QUARTER
U+00BD	½	VULGAR FRACTION ONE HALF
U+00BE	¾	VULGAR FRACTION THREE QUARTERS
U+00BF	¿	INVERTED QUESTION MARK
U+00C0	À	LATIN CAPITAL LETTER A WITH GRAVE
U+00C1	Á	LATIN CAPITAL LETTER A WITH ACUTE
U+00C2	Â	LATIN CAPITAL LETTER A WITH CIRCUMFLEX
U+00C3	Ã	LATIN CAPITAL LETTER A WITH TILDE
U+00C4	Ä	LATIN CAPITAL LETTER A WITH DIAERESIS
U+00C5	Å	LATIN CAPITAL LETTER A WITH RING ABOVE
U+00C6	Æ	LATIN CAPITAL LETTER AE
U+00C7	Ç	LATIN CAPITAL LETTER C WITH CEDILLA
U+00C8	È	LATIN CAPITAL LETTER E WITH GRAVE
U+00C9	É	LATIN CAPITAL LETTER E WITH ACUTE
U+00CA	Ê	LATIN CAPITAL LETTER E WITH CIRCUMFLEX
U+00CB	Ë	LATIN CAPITAL LETTER E WITH DIAERESIS
U+00CC	Ì	LATIN CAPITAL LETTER I WITH GRAVE
U+00CD	Í	LATIN CAPITAL LETTER I WITH ACUTE
U+00CE	Î	LATIN CAPITAL LETTER I WITH CIRCUMFLEX
U+00CF	Ï	LATIN CAPITAL LETTER I WITH DIAERESIS
U+00D0	Ð	LATIN CAPITAL LETTER ETH
U+00D1	Ñ	LATIN CAPITAL LETTER N WITH TILDE
U+00D2	Ò	LATIN CAPITAL LETTER O WITH GRAVE

Continued on page 58

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Continued from page 57

Unicode Code Point	Character	Name
U+00D3	Ó	LATIN CAPITAL LETTER O WITH ACUTE
U+00D4	Ô	LATIN CAPITAL LETTER O WITH CIRCUMFLEX
U+00D5	Õ	LATIN CAPITAL LETTER O WITH TILDE
U+00D6	Ö	LATIN CAPITAL LETTER O WITH DIAERESIS
U+00D7	×	MULTIPLICATION SIGN
U+00D8	Ø	LATIN CAPITAL LETTER O WITH STROKE
U+00D9	Ù	LATIN CAPITAL LETTER U WITH GRAVE
U+00DA	Ú	LATIN CAPITAL LETTER U WITH ACUTE
U+00DB	Û	LATIN CAPITAL LETTER U WITH CIRCUMFLEX
U+00DC	Ü	LATIN CAPITAL LETTER U WITH DIAERESIS
U+00DD	Ý	LATIN CAPITAL LETTER Y WITH ACUTE
U+00DE	Þ	LATIN CAPITAL LETTER THORN
U+00DF	ß	LATIN SMALL LETTER SHARP S
U+00E0	à	LATIN SMALL LETTER A WITH GRAVE
U+00E1	á	LATIN SMALL LETTER A WITH ACUTE
U+00E2	â	LATIN SMALL LETTER A WITH CIRCUMFLEX
U+00E3	ã	LATIN SMALL LETTER A WITH TILDE
U+00E4	ä	LATIN SMALL LETTER A WITH DIAERESIS
U+00E5	å	LATIN SMALL LETTER A WITH RING ABOVE
U+00E6	æ	LATIN SMALL LETTER AE
U+00E7	ç	LATIN SMALL LETTER C WITH CEDILLA
U+00E8	è	LATIN SMALL LETTER E WITH GRAVE
U+00E9	é	LATIN SMALL LETTER E WITH ACUTE
U+00EA	ê	LATIN SMALL LETTER E WITH CIRCUMFLEX
U+00EB	ë	LATIN SMALL LETTER E WITH DIAERESIS
U+00EC	ì	LATIN SMALL LETTER I WITH GRAVE
U+00ED	í	LATIN SMALL LETTER I WITH ACUTE
U+00EE	î	LATIN SMALL LETTER I WITH CIRCUMFLEX
U+00EF	ï	LATIN SMALL LETTER I WITH DIAERESIS
U+00F0	ð	LATIN SMALL LETTER ETH
U+00F1	ñ	LATIN SMALL LETTER N WITH TILDE
U+00F2	ò	LATIN SMALL LETTER O WITH GRAVE
U+00F3	ó	LATIN SMALL LETTER O WITH ACUTE
U+00F4	ô	LATIN SMALL LETTER O WITH CIRCUMFLEX
U+00F5	õ	LATIN SMALL LETTER O WITH TILDE
U+00F6	ö	LATIN SMALL LETTER O WITH DIAERESIS
U+00F7	÷	DIVISION SIGN
U+00F8	ø	LATIN SMALL LETTER O WITH STROKE
U+00F9	ù	LATIN SMALL LETTER U WITH GRAVE
U+00FA	ú	LATIN SMALL LETTER U WITH ACUTE
U+00FB	û	LATIN SMALL LETTER U WITH CIRCUMFLEX
U+00FC	ü	LATIN SMALL LETTER U WITH DIAERESIS
U+00FD	ý	LATIN SMALL LETTER Y WITH ACUTE
U+00FE	þ	LATIN SMALL LETTER THORN
U+00FF	ÿ	LATIN SMALL LETTER Y WITH DIAERESIS

6.2 Clean with Mild Detergent and Warm Water

Wipe down the device with a soft cloth dampened with a mild detergent and warm water solution. Do not use any other chemicals for cleaning.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

6.3 Repairs and Translations (No Field-Replaceable Parts)

English

Contact Banner Engineering for troubleshooting of this device. **Do not attempt any repairs to this Banner device; it contains no field-replaceable parts or components.** If the device, device part, or device component is determined to be defective by a Banner Applications Engineer, they will advise you of Banner's RMA (Return Merchandise Authorization) procedure.

```
IMPORTANT: If instructed to return the device, pack it with care. Damage that occurs in return shipping is not covered by warranty.
```

Obtain assistance with product repairs by contacting your local Banner Engineering Corp distributor or by calling Banner directly at (763) 544-3164. Access literature translated into your native language on the Banner website at www.bannerengineering.com or contact Banner directly at (763) 544-3164.

Deutsch

Wenden Sie sich zur Fehlerbehebung dieses Geräts an Banner Engineering. **Versuchen Sie nicht, Reparaturen an diesem Banner-Gerät vorzunehmen. Das Gerät enthält keine am Einsatzort auszuwechselnden Teile oder Komponenten.** Wenn ein Banner-Anwendungstechniker zu dem Schluss kommt, dass dieses Gerät, ein Teil oder eine Komponente davon defekt ist, erhalten Sie von dem Techniker Erläuterungen zu Banners RMA-Verfahren (Return Merchandise Authorization) für die Warenrückgabe.

```
WICHTIG: Wenn Sie der Techniker anweist, das Gerät zurückzusenden, verpacken Sie es bitte sorgfältig. Transportschäden bei der Rücksendung werden von der Garantie nicht abgedeckt.
```

Unterstützung bei Produktreparaturen erhalten Sie von Ihrem örtlichen Banner Engineering Corp Händler oder direkt von Banner unter Tel. (763) 544-3164. Die in Ihre Muttersprache übersetzte Literatur finden Sie auf der Banner-Website unter www.bannerengineering.com oder kontaktieren Sie Banner direkt unter Tel. (763) 544-3164.

Français

Pour plus d'informations sur le dépannage du produit, contactez Banner Engineering. **Ne tentez pas de réparer ce dispositif Banner. Il ne contient aucun composant ou pièce qui puisse être remplacé sur place.** Si un ingénieur de Banner conclut que le dispositif ou l'une de ses pièces ou composants est défectueux, il vous informera de la procédure à suivre pour le retour des produits (RMA).

```
Important : Si vous devez retourner le dispositif, emballez-le avec soin. Les dégâts occasionnés pendant le transport de retour ne sont pas couverts par la garantie.
```

Pour vous aider lors de la réparation de produits, contactez votre distributeur Banner local our appelez directement Banner au (763) 544-3164. La documentation traduite dans votre langue est disponible sur le site internet de Banner www.bannerengineering.com ou contactez directement Banner au (763) 544-3164.

Italiano

Per le procedure di individuazione e riparazione dei guasti di questo dispositivo, contattare Banner Engineering. **Non tentare di riparare questo dispositivo Banner, in quanto non contiene parti o componenti sostituibili dall'utente.** Se il dispositivo, una parte del dispositivo o un componente del dispositivo viene riscontrato difettoso da un tecnico Banner, il nostro personale vi comunicherà la procedura da seguire per ottenere l'autorizzazione al reso.

```
Importante: Se si ricevono istruzioni di rispedire il dispositivo al produttore, imballarlo con cura. I danni dovuti al trasporto non sono coperti dalla garanzia.
```

Per assistenza nelle riparazioni dei prodotti, contattare il distributore locale Banner Engineering Corp o contattare direttamente Banner al numero (763) 544-3164. È possibile accedere alla documentazione tradotta nella propria lingua madre sul sito Web Banner all'indirizzo www.bannerengineering.com o contattare direttamente Banner al numero (763) 544-3164.

Español

Comuníquese con Banner Engineering para solucionar de problemas de este dispositivo. **No intente ninguna reparación a este dispositivo de Banner, contiene piezas o componente que no se pueden cambiar en terreno.** Si algún ingeniero de aplicaciones de Banner determina que el dispositivo, alguna de las piezas o alguno de los componentes del dispositivo está defectuoso, le informará el procedimiento de autorización de devolución de mercancía (RMA, por sus siglas en inglés) de Banner.

```
Importante: Si se le solicita devolver el dispositivo, empáquelo con cuidado. Puede haber daños durante el envío de devolución que no estén cubiertos por la garantía.
```

Para reparaciones de productos, por favor contacte a su distribuidor local de Banner Engineering o llame a Banner directamente al 00 1 (763) 544-3164. Vea la literatura traducida en su idioma en el sitio web Banner en www.bannerengineering.com o comuníquese con Banner directamente al 00 1 (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

中国人

如需对本装置进行故障排查，请联系邦纳。**请勿尝试自行维修该邦纳装置；本装置不包含任何可在现场更换的部件或组件。** 若经邦纳应用工程师确认设备、设备部件或组件存在缺陷，他们将告知您邦纳退货授权 (RMA) 流程。

> **重要注意事项：** 如被要求退回装置，请妥善包装后寄回。退货运输过程中发生的损坏不在保修范围内。

请联系当地的 Banner Engineering Corp 经销商或直接致电 Banner +1 (763) 544-3164，以获得产品维修帮助。请访问邦纳网站 www.bannerengineering.com 或直接拨打 +1 (763) 544-3164 联系邦纳，获取翻译成您母语的资料。

한국인

이 장치의 문제를 해결하려면 Banner Engineering에 문의하십시오. **이 Banner 장치에는 현장에서 교체할 수 있는 부품 또는 구성품이 없으므로 수리를 시도하지 마십시오.** Banner 애플리케이션 엔지니어가 장치, 장치 부품 또는 장치 구성품에 결함이 있는 것으로 판정하면, Banner의 RMA(제품 반송 승인)절차에 대해 안내해 드립니다.

> **중요:** 제품을 반송하도록 안내 받으셨다면 잘 포장해주십시오. 반송 도중에 발생한 손상은 보증 서비스가 적용되지 않습니다.

제품 수리에 대한 지원은 지역 Banner Engineering Corp 대리점에 문의하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다. 사용자의 모국어로 번역된 자료는 Banner 웹사이트 www.bannerengineering.com에서 액세스하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다.

日本語

この装置のトラブルシューティングについては、バナーエンジニアリングにお問い合わせください。**このバナー装置には、現場では交換できない部品またはコンポーネントが含まれているため、修理を試みてはいけません。** バナーのアプリケーションエンジニアが装置、装置の部品、または装置のコンポーネントに欠陥があると判断した場合、バナーのRMA（返品承認）手続きについてお知らせします。

> **重要 ：** 返品を指示された場合は、装置を丁寧に梱包してください。返品時に発生した破損は保証の対象外となります。

製品の修理については、最寄りのBanner Engineering Corp代理店にお問い合わせいただくか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。バナーのウェブサイト（www.bannerengineering.com）でお客様の言語に翻訳された資料にアクセスするか、米国+1 (763) 544-3164まで直接お電話でお問い合わせください。

čeština

Pro řešení problémů se zařízením kontaktujte společnost Banner Engineering. **Neprovádějte žádné opravy zařízení Banner. Neobsahují žádné komponenty nebo části, které by byly vyměnitelné.** Pokud je zařízení, jeho část nebo díl označen technikem společnosti Banner jako poškozený, bude Vám doporučeno vyplnit reklamační RMA protokol.

> **Důležité:** Pokud byl vydán požadavek na vrácení zařízení, pečlivě ho zabalte. Poškození vzniklé při dopravě není považováno za záruční opravu.

Pokud produkt potřebuje opravu, vyžádejte si pomoc od místního distributora společnosti Banner Engineering Corp nebo přímo na telefonním čísle (763) 544-3164. Dokumentaci přeloženou do vašeho jazyka si vyhledejte na webových stránkách společnosti Banner na adrese www.bannerengineering.com nebo se obraťte přímo na společnost Banner na telefonním čísle (763) 544-3164.

Polski

W celu rozwiązania problemów z urządzeniem należy skontaktować się z działem technicznym firmy Banner Engineering. **Pod żadnym pozorem nie próbuj naprawiać tego urządzenia firmy Banner; nie zawiera ono części ani elementów, które można wymieniać samodzielnie.** Jeśli urządzenie, jego część lub element zostaną uznane za wadliwe przez inżyniera technicznego Banner, poinformuje on użytkownika o firmowej procedurze zwrotu towaru (RMA) firmy Banner.

> **Ważne:** Jeśli urządzenie ma zostać zwrócone, należy je starannie zapakować. Uszkodzenia powstałe podczas odsyłki nie są objęte gwarancją.

Aby uzyskać pomoc w zakresie naprawy produktu, należy skontaktować się z lokalnym dystrybutorem Banner Engineering Corp lub zadzwonić bezpośrednio do firmy Banner pod numer (763) 544-3164. Dostęp do literatury przetłumaczonej na swój język ojczysty można uzyskać na stronie internetowej firmy Banner pod adresem www.bannerengineering.com lub kontaktując się bezpośrednio z firmą Banner pod numerem (763) 544-3164.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

Português

Entre em contato com a Engenharia da Banner para a solução de problemas deste dispositivo. **Não tente fazer nenhum reparo neste dispositivo Banner; ele não contém peças ou componentes substituíveis em campo.** Se um técnico de aplicações da Banner determinar que o dispositivo, peça ou componente do dispositivo está com defeito, ele o informará sobre o procedimento de RMA (Autorização de Devolução de Mercadoria) da Banner.

```
Importante: Se for instruído a devolver o dispositivo, embale-o com cuidado. Os danos ocorridos
no transporte de devolução não são cobertos pela garantia.
```

Obtenha assistência para reparos do produto entrando em contato com o distribuidor local da Banner Engineering Corp ou ligando diretamente para a Banner no telefone (763) 544-3164. Acesse a literatura traduzida para seu idioma nativo no site da Banner em www.bannerengineering.com ou entre em contato diretamente com a Banner pelo telefone (763) 544-3164.

Türkçe

Bu cihazda sorun giderme işlemleri için Banner Engineering ile iletişime geçin. **Bu Banner cihazını onarmaya çalışmayın; cihaz sahada değiştirilebilir parça veya bileşen içermez.** Bir Banner Uygulama Mühendisi tarafından cihazın, cihazın bir parçasının veya bir cihaz bileşeninin kusurlu olduğu tespit edilirse, Banner RMA (İade Mal Yetkilendirme) prosedürü hakkında bilgilendirilirsiniz.

```
ÖNEMLİ: İade etmeniz istenirse, cihazı dikkatli bir şekilde paketleyin. İade nakliyesinde
meydana gelecek hasarlar garanti kapsamında değildir.
```

Yerel Banner Engineering Corp distribütörünüzle iletişime geçerek veya doğrudan (763) 544-3164 numaralı telefondan Banner'ı arayarak ürün onarımlarıyla ilgili yardım alın. Ana dilinize çevrilmiş dokümanlara www.bannerengineering.com adresindeki Banner web sitesinden erişebilir veya (763) 544-3164 numaralı telefondan doğrudan Banner ile iletişime geçebilirsiniz.

6.4 Contact Us

Banner Engineering Corp. | 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

6.5 Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

6.5.1 Mexican Importer

Banner Engineering de Mèxico, S. de R.L. de C.V. | David Alfaro Siqueiros 103 Piso 2 Valle oriente | San Pedro Garza Garcia Nuevo Leòn, C. P. 66269

81 8363.2714

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

LinkedIn

X

Facebook

Instagram



© 2026. All rights reserved.