# Features

*Compact, Single-Point Devices for Error Proofing of Bin-Picking Operations*



- Rugged, cost-effective, and easy-to-install multicolor indicator light with pushbutton
- Illuminated dome provides an easy-to-see green job light; some models also light red for alternate operation
- Waterproof IP65 construction for washdown environments
- Compact devices are self-contained — no controller needed
- Immune to EMI and RFI interference
- 12 V DC to 30 V DC operation
- Cabled and quick-disconnect connector models available

**WARNING:**

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

# Models

| Model | Function | Output | Connection[1] | Job Light |
|---|---|---|---|---|
| K30APPBGXDQ | • Job light is ON at all times while job input is active.<br>• Pressing push button activates output. | PNP, NO | Integral 4-pin M12 male quick-disconnect connector | Green |
| K30ANPBGXDQ | | NPN, NO | | |
| K30APPBGRCQ | • Job light is green while job input is active, until push button is pushed.<br>• Pressing push button activates output and overrides job light (it turns Red) for visual verification that action was sensed. | PNP, NO | | Green (Red) |
| K30ANPBGRCQ | | NPN, NO | | |
| K30APPBGREQ | • Job light is ON at all times while job input is active.<br>• Pressing push button activates output.<br>• Pressing push button while job input is inactive causes unit to light Red, providing visual indication that sensor is functioning properly. | PNP, NO | | Green (Red) |
| K30ANPBGREQ | | NPN, NO | | |

# Overview

The solid-state output interfaces to a system controller, which is pre-programmed for a specific sequence of tasks. Mounted in or near each bin in an assembler's work station, the sensor job light signals the assembler:

- Which bins contain items to be picked in a given operation; and
- In what order they should be picked.

As the assembler takes a part in sequence and pushes the button, the sensor senses that the part was removed and sends an output signal to the controller. The controller verifies if the correct part was taken and may respond by turning that job light OFF, activating the job light of the next bin in the sequence.

If multiple parts are to be removed from one bin, the job light may remain ON until the appropriate number of signals is returned to the controller. If an incorrect part is selected, the control system may be wired to signal an alarm for the assembler and/or a supervisor, or it may be programmed to interpret the action as a call for parts.

[1] Integral quick-disconnect connector models are listed.
- To order the 2 m (6.5 ft) PVC cable model, omit the suffix "Q" in the model number. For example, K30APPBGXD.
- Models with a quick-disconnect connector require a mating cordset.

Original Instructions
16-Oct-25

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

155796
p/n: 155796 Rev. D

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com

## Installation

Install the K30 at a height and location that is easy for the user and/or supervisor to see the device, and comfortable for the user to press the push-button.

## Wiring

**Diagram**

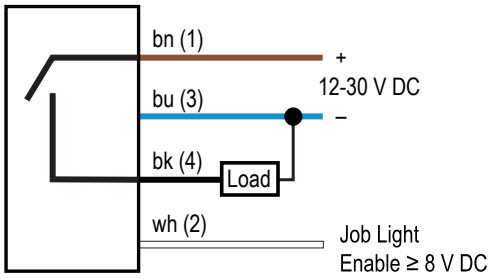


**4-pin M12 Male Pinout**

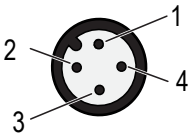


1. Brown
2. White
3. Blue
4. Black

# Specifications

**Supply Voltage and Current**
12 V DC to 30 V DC (10% max. ripple) at 50 mA maximum

**Supply Protection Circuitry**
Protected against reverse polarity and transient voltages

**Output Rating**
Max. load: 150 mA
ON-state saturation voltage: < 0.5 V at 10 mA DC; < 1.0 V at 150 mA DC
OFF-state leakage current: < 10 µA at 30 V DC

**Output Protection**
Protected against false pulse on power-up and continuous overload or short circuit of output

**Output Response Time**
1 millisecond On and Off

**Indicators**
Job (Pick) Indicator: Green
Pick Sensed Indicator: Red or OFF, depending on model

**Connections**
Integral 4-pin M12 male quick-disconnect connector, 2 m (6.5 ft) or 9 m (30 ft) PVC-jacketed cable, depending on model.

**Operating Conditions**
–40 °C to +50 °C (–40 °F to +122 °F)
90% at +50 °C maximum relative humidity (non-condensing)

**Storage Temperature**
–40 °C to +70 °C (–40 °F to +158 °F)

**Job Light Enable**
Input Impedance: 10 KOhms
Input high > 8.0 V

**Environmental Rating**
IP65
Enclosure Type 13

**Construction**
Base: polycarbonate
Translucent dome: polycarbonate
Push button: thermoplastic

**Certification**

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

**Required Overcurrent Protection**

**WARNING:** Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

| Supply Wiring (AWG) | Required Overcurrent Protection (A) | Supply Wiring (AWG) | Required Overcurrent Protection (A) |
|---|---|---|---|
| 20 | 5.0 | 26 | 1.0 |
| 22 | 3.0 | 28 | 0.8 |
| 24 | 2.0 | 30 | 0.5 |


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

## Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

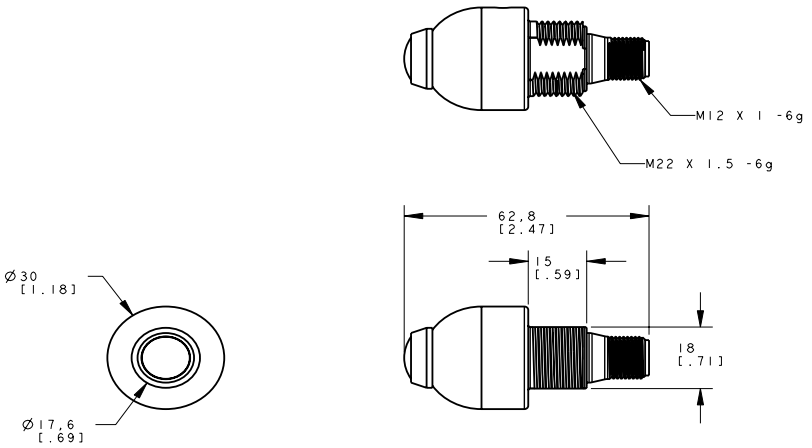


# Accessories

## Cordsets

| 4-Pin Single-Ended M12 Female Cordsets | | | | | |
|---|---|---|---|---|---|
| **Model** | **Length** | **Style** | **Dimensions** | **Pinout (Female)** | |
| **MQDC-406** | 2 m (6.56 ft) | Straight | 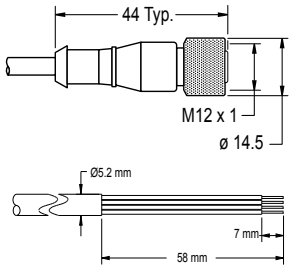 |  | 1 = Brown<br>2 = White<br>3 = Blue<br>4 = Black<br>5 = Not used |
| **MQDC-415** | 5 m (16.4 ft) | | | | |
| **MQDC-430** | 9 m (29.5 ft) | | | | |
| **MQDC-450** | 15 m (49.2 ft) | | | | |
| **MQDC-406RA** | 2 m (6.56 ft) | Right-Angle | 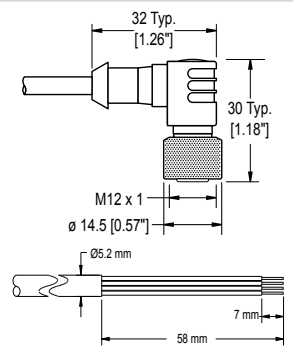 |  | |
| **MQDC-415RA** | 5 m (16.4 ft) | | | | |
| **MQDC-430RA** | 9 m (29.5 ft) | | | | |
| **MQDC-450RA** | 15 m (49.2 ft) | | | | |


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

# Brackets

**SMB22A**

- Right-angle bracket with curved slot for versatile orientation
- 12-ga. stainless steel
- Mounting hole for 22 mm sensor

**Hole center spacing:** A to B = 26.0
**Hole size:** A = ø 4.6, B = 4.6 x 16.9, C = 22.2

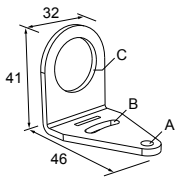


# Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

**THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.**

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.


© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com