
Features



- Reliable leading-edge detection of letters, thin packages, poly bags, totes, boxes or other products on roller conveyors
- Mounts between conveyor roller gap to standard hex or round side rail holes with no extra hardware required or on the T-Slot with customer-supplied bracket and hardware
- Spring-loaded end caps reduce installation and alignment time for reduced labor costs
- Built to order with specified length and beam spacing: 200 mm to up to 1500 mm (8 in to up to 59 in) depending on mounting configuration, with 2 to 10 sensors for maximum flexibility
- Robust aluminum housing, ambient light and ESD resistance for enhanced durability

WARNING:

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

Models

Model Name	Between Frame Distance (mm)	Output Type	Special Feature	Beam Spacing	No. of Beams	End Cap Style		Cable Length (m)	Connector Style	First Beam Distance from Cable End Cap (mm)
TTR	384	AP	S	A	6	T	–	2.0	FL	CTR
	End Cap Style T: 200-1500mm End Cap Styles A, B, D and E: 200-915mm End Cap Styles C, F, and G: 200-750mm	BM = Bimodal AP = Light Operate PNP AN = Light Operate NPN RP = Dark Operate PNP RN = Dark Operate NPN	S = Standard Range (120mm White Card Range) G = Standard Gain (120mm White Card Range) with Ground Strap W = Low Gain (85mm White Card Range) with Ground Strap X = Low Gain (85mm White Card Range) Y = Low Gain (100mm White Card Range) with Ground Strap Z = Low Gain (100mm White Card Range)	A = 54 mm B = 93.1 mm C = 108 mm D = 162 mm E = 186.2 mm F = 75 mm G = 150 mm	2,3,4,5,6,7,8,9,10	A,B,C,D,E,F,G,T		0.5 m, 1.0 m, 2.0 m	FL = Flying Leads RJ = RJ11 Q5 = M12 Q3 = M8 Snap	CTR = Beams centered between frames 059-200 = First beam distance from cable end cap

Model Name = TTR 384 AP S A 6 T - 2.0 FL CTR

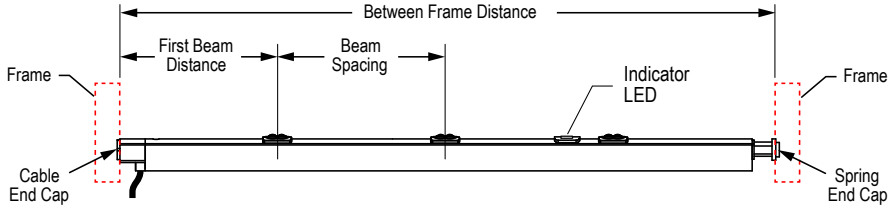
NOTE: For a definition of the End Cap Styles, see "Configurations" on page 1.

NOTE: Sensors with more than 7 beams have higher minimum supply voltage requirements, see Specifications.

Note that not all model combinations are available. Contact your Banner Engineering Corp representative for more information.

Configurations

Spring End Cap Configuration




Original Instructions
07-Aug-26

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


216696
p/n: 216696 Rev. F

ПРОМЭЛЕКТРОНИКА/ sales@prom-elec.com














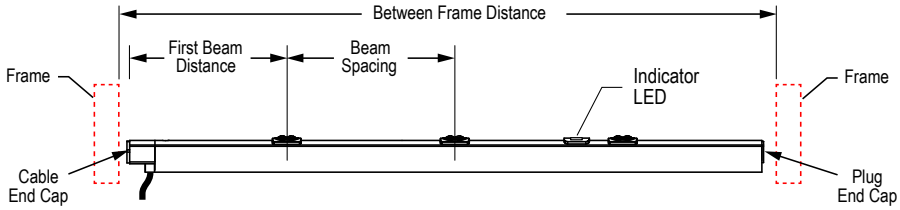
T-Slot Configuration



Adhesive End Cap Configuration

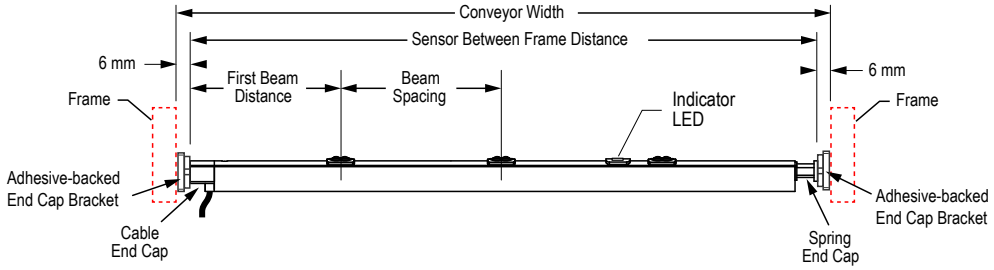



End Cap Styles

End Cap Style	End 1		End 2	
A	11 mm Hex, flat side up		Spring 11 mm hex / 8 mm round	
B	11 mm Hex, point up		Spring 11 mm hex / 8 mm round	
C	Adjustable 11 mm Hex, can be positioned in 10 degree increments		Spring 11 mm hex / 8 mm round	
D	11 mm Hex, flat side up		Spring 8 mm round	
E	11 mm Hex, point up		Spring 8 mm round	
F	Adjustable 11 mm Hex, can be positioned in 10 degree increments		Spring 8 mm round	
G	Adjustable 11 mm Hex, can be positioned in 10 degree increments / adhesive backed bracket	 	Spring 11 mm hex / 8 mm round / adhesive backed bracket	 

Continued on page 3

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


Continued from page 2


End Cap Style	End 1		End 2	
T	11 mm Hex, flat side up		Plug	


NOTE: T-Slot mounted sensors with the **T** End Cap Style are 6 mm shorter than the specified Between Frame Distance.


Wiring

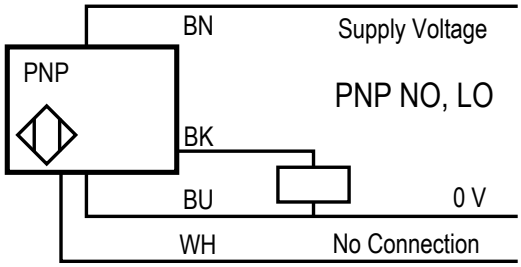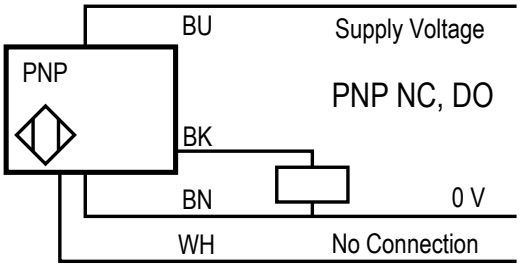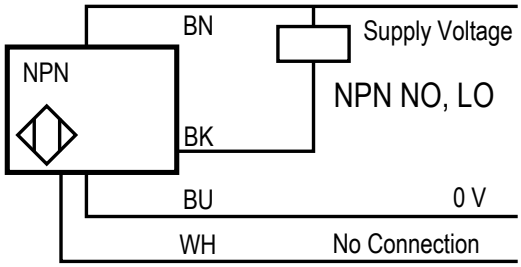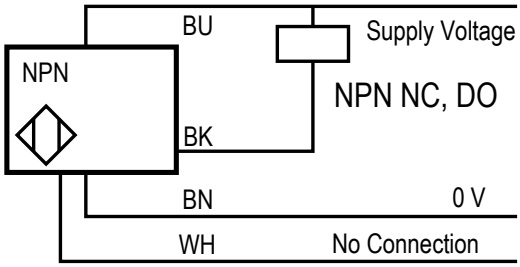Bimodal output wiring diagrams












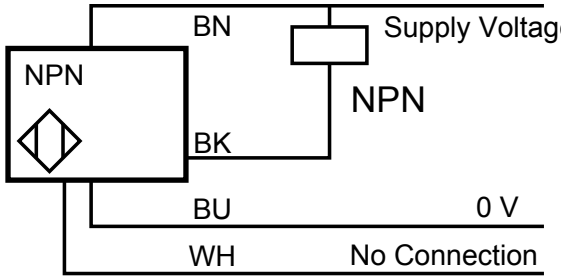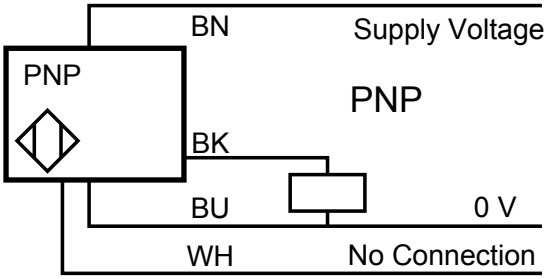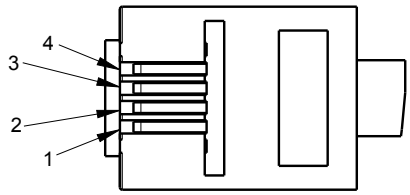
Fixed NPN and PNP output wiring diagrams: light and dark operate by model number






RJ-11 Pinout	RJ-11 Key
	1. Brown 2. Black 3. White 4. Blue

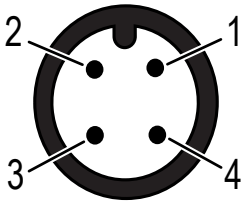
© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

M12 Pinout (Male)	M12 Key
	1. Brown 2. White 3. Blue 4. Black

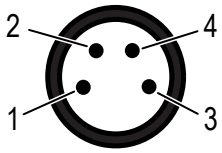M8 Snap Connector Pinout (Male)	M8 Key
	1. Brown 2. White 3. Blue 4. Black


Installation

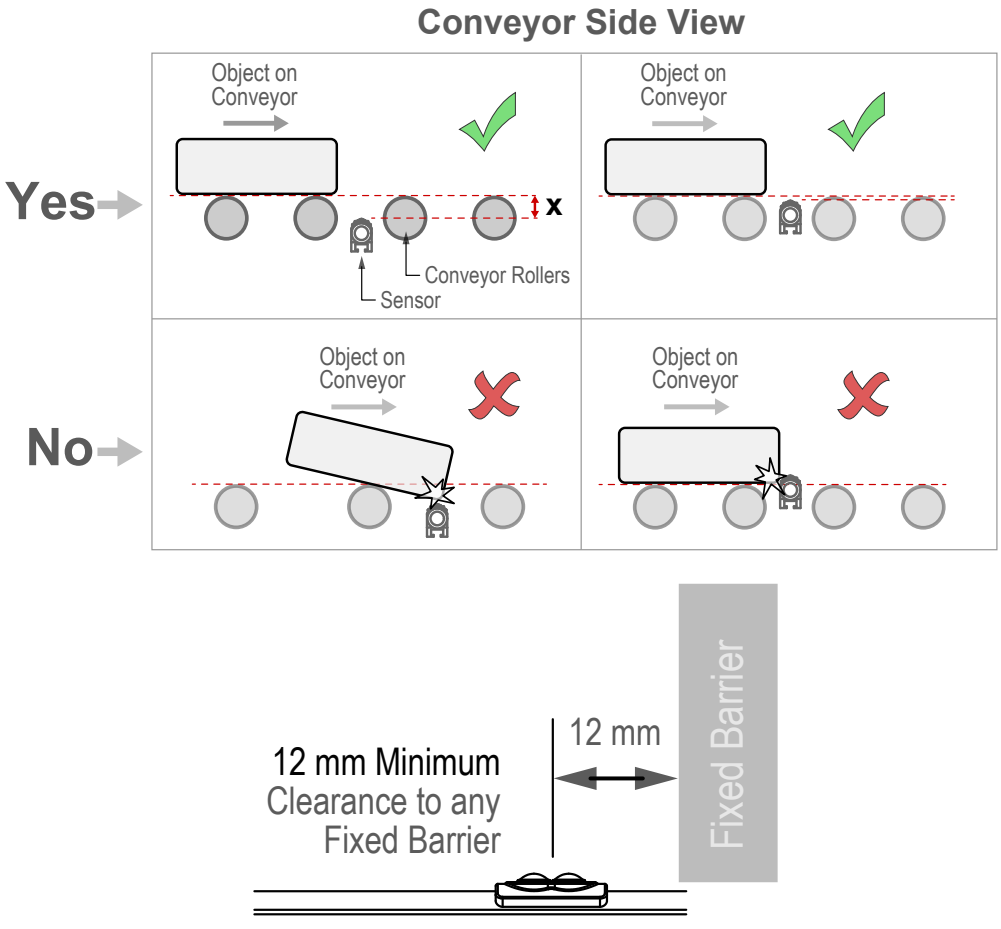TTR Mounting Considerations



© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

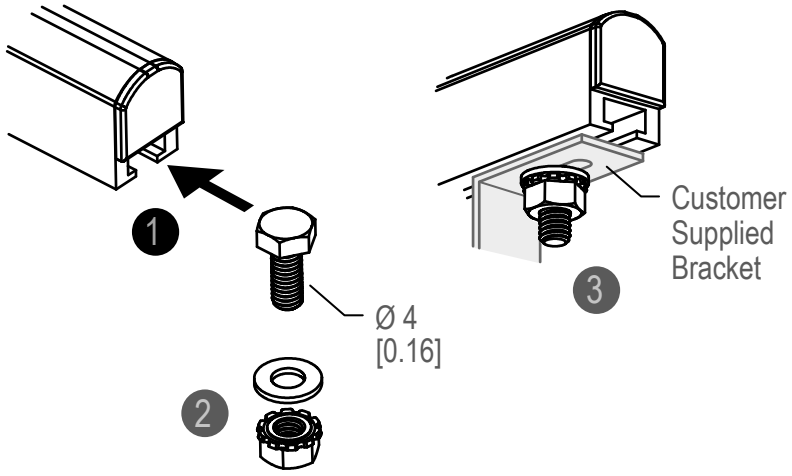TTR T-Slot Installation



Specifications

Supply Current
45 mA

Supply Protection Circuitry
Protected against reverse polarity and transient voltages

Wavelength
Infrared LED, 940 nm

Output Response
1 ms on/off

Indicators
Amber on: Light sensed

Sensing Mode
Diffuse, Infrared, 940 nm

Operating Conditions
–10 °C to +55 °C (+14 °F to +131 °F)

Environmental Rating
IP50

Output Configuration
Rating: 100 mA max output at 25 °C
Output Voltage High: Greater than Vsupply – 2.5 V
Output Voltage Low: Less than 2.5 V
For loads less than 1 Meg Ohm
Protected against false pulse on power-up and continuous overload or short-circuit of output

Vibration and Mechanical Shock
All models meet IEC 60068-2-6, IEC 60947-5-2, UL491 Section 40, MIL-STD-202F, Method 201A (Vibration: 10 Hz to 60 Hz, 0.5 mm peak-to-peak)
Shock: 30G 11 ms duration, half sine wave per IEC 60068-2-27

Certifications

Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM

Cable
Minimum static bend radius: 20 mm
Flex life > 10,000 cycles at flexing bend radius > 40 mm

Supply Voltage

Number of Sensing Beams	Supply Voltage with 10% Maximum Ripple
2, 3, 4, 5, 6, 7	18 V DC to 30 V DC
8	22 V DC to 30 V DC
9	24 V DC to 30 V DC
10	26 V DC to 30 V DC

Use only with a suitable Class 2 power supply (UL) or SELV power supply (CE)

Range

Special Feature Type	Range		
	90% White Card	18% Gray Card	6% Black Card
S and G	0 to ≥ 120 mm	0 to ≥ 50 mm	≤ 3 to ≥ 30 mm
Y and Z	0 to ≥ 100 mm	0 to ≥ 40 mm	≤ 4 to ≥ 25 mm
W and X	0 to ≥ 85 mm	0 to ≥ 35 mm	≤ 6 to ≥ 20 mm

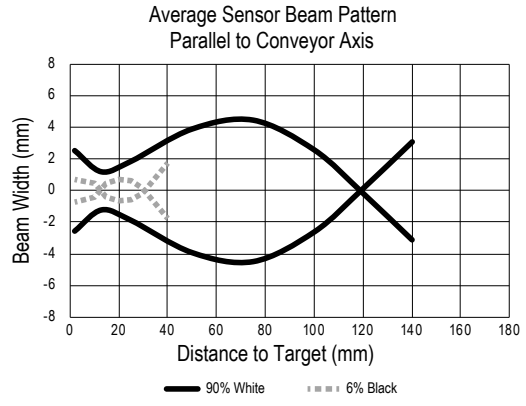
Turck Banner LTD Blenheim House
Blenheim Court
Wickford, Essex SS11 8YT
GREAT BRITAIN

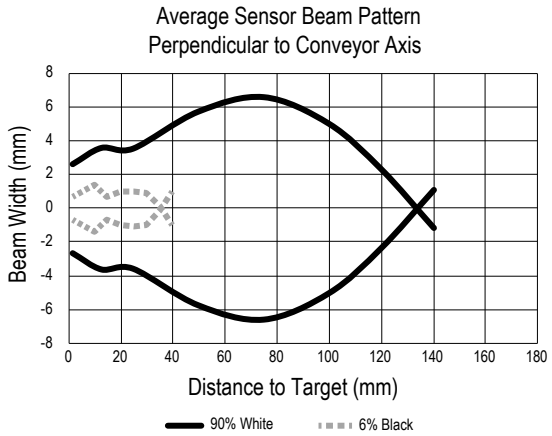
IND. CONT. EQ.
E224071

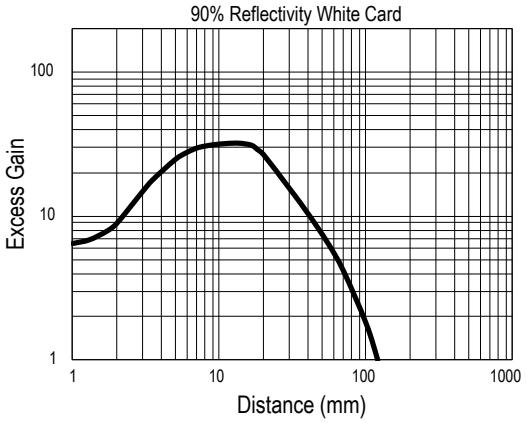
© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com

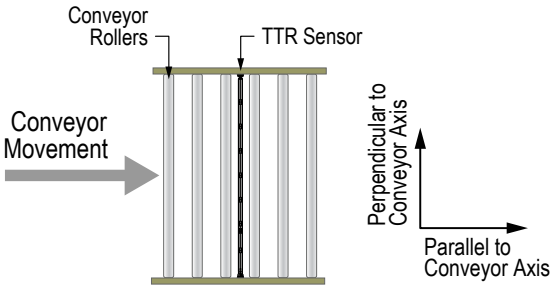
Performance Curves

NOTE: The Beam Pattern and Excess Gain performance curve diagrams represent the Standard Gain (Special Feature S and G) models.










© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com


Dimensions

All measurements are listed in millimeters, unless noted otherwise. The measurements provided are subject to change.

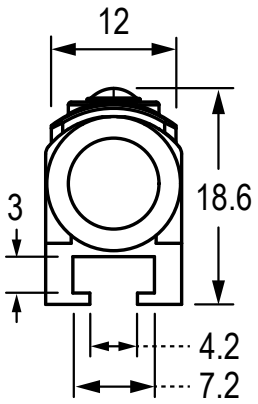End view



Adhesive end cap

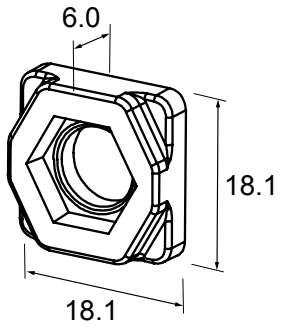

Accessories for the TTR Family

TTR-HK1 • Hardware packet for T-style End-Cap TTRs • (2) M4 screws • (2) Hex nuts • (2) Lock washers	**TTR-HK2** • Hardware packet for G-style End-Cap TTRs • (2) Adhesive-backed mounting brackets
TTR-HK20 • Hardware packet for G-style End-Cap TTRs • (20) Adhesive-backed mounting brackets	Two adhesive-backed mounting brackets are included with each G-style sensor. Adhesive-backed mounting brackets are also compatible with A-, B-, or C-style sensors.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

© Banner Engineering Corp. All rights reserved.
www.bannerengineering.com